


### PARTS LIST

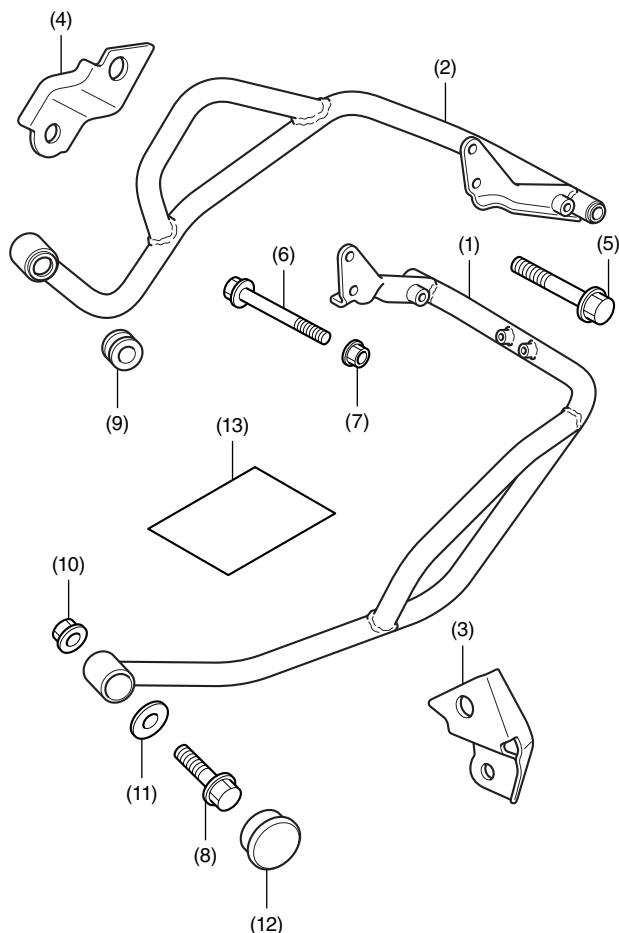

No.	Description	Qty
(1)	Right light bar	1
(2)	Left light bar	1
(3)	Right stay	1
(4)	Left stay	1
(5)	8 mm flange bolt (long)	2
(6)	6 mm flange bolt	1
(7)	6 mm flange nut	1
(8)	8 mm flange bolt (short)	2
(9)	Rubber bushing	2
(10)	8 mm flange nut	2
(11)	Washer	2
(12)	Cap	2
(13)	Installation Instruction URL	1

### TOOLS REQUIRED

- Socket (10, 12 and 14 mm)
- Ratchet
- Box-end wrench (10 and 12 mm)
- Torque wrench

### TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm flange bolt and nut	12	1.2	9
8 mm flange bolt and nut	27	2.8	20

### INSTALLATION

#### ▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

#### NOTE:


- Take care not to damage the painted surfaces of the motorcycle.

- Assemble the left light bar as shown.



- Repeat on the right side.

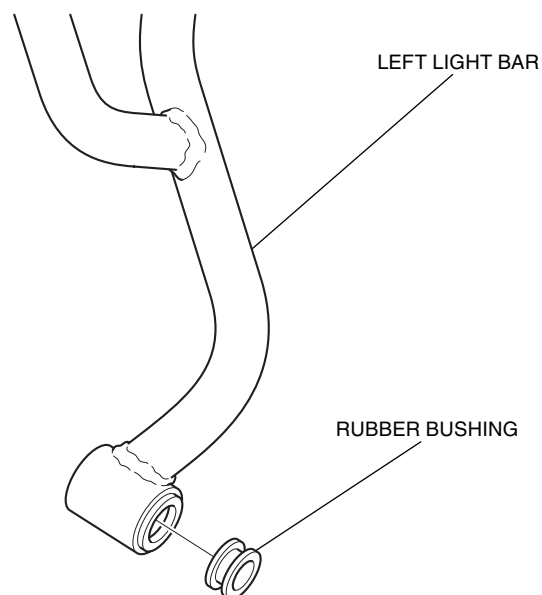


2. Remove the bolt and collar as shown.

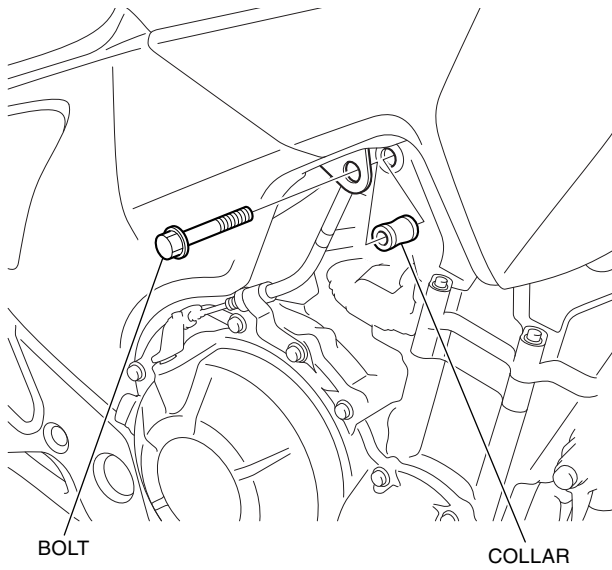



3. Loosely install the right stay as shown.

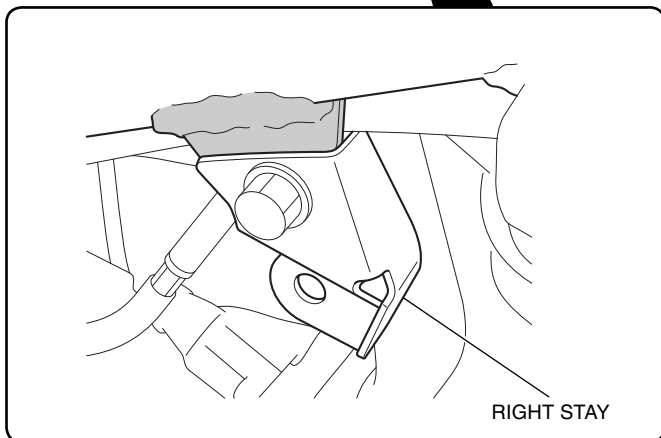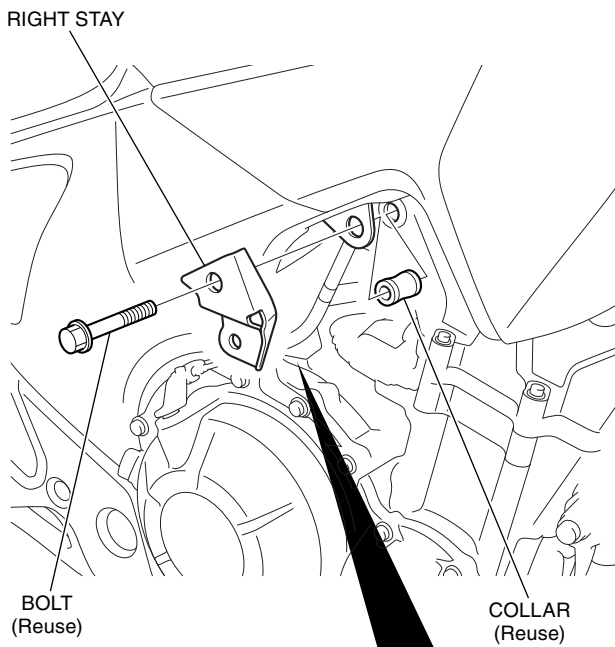


4. Remove the bolt and collar as shown.

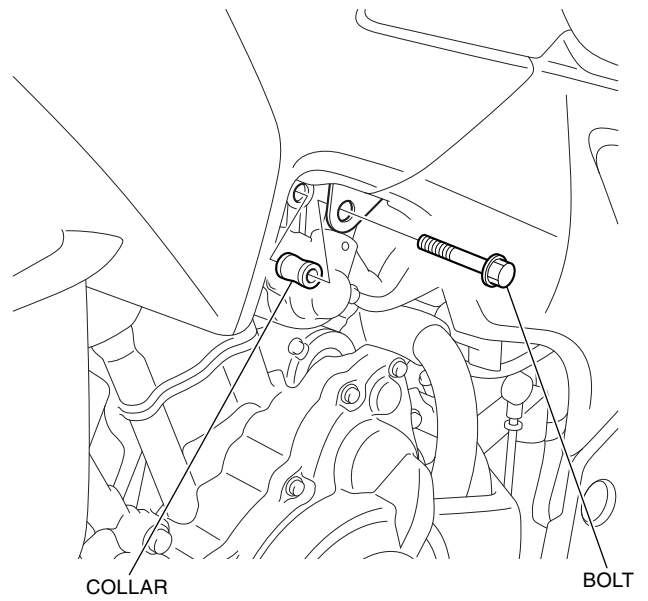


5. Loosely install the left stay as shown.

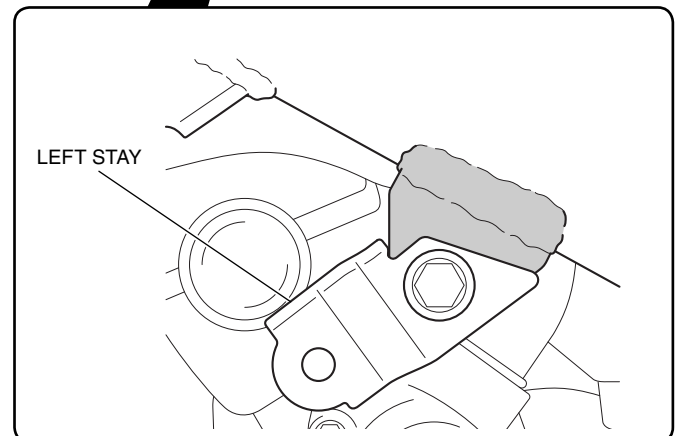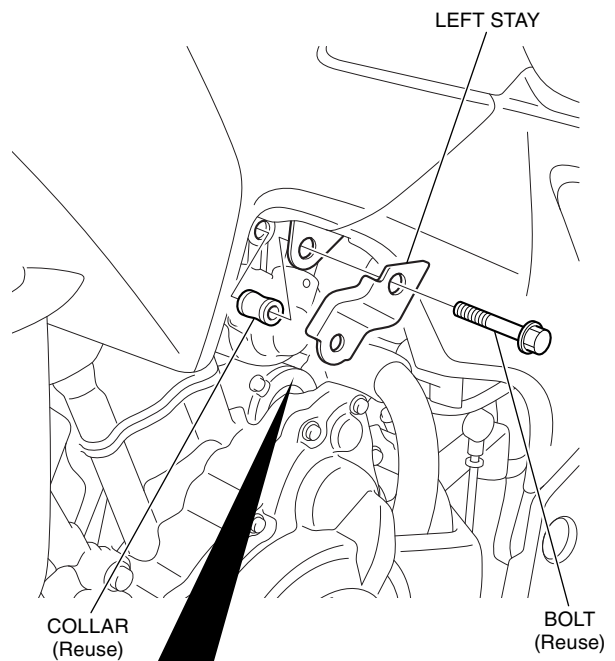


6. Remove the bolts and nuts as shown.

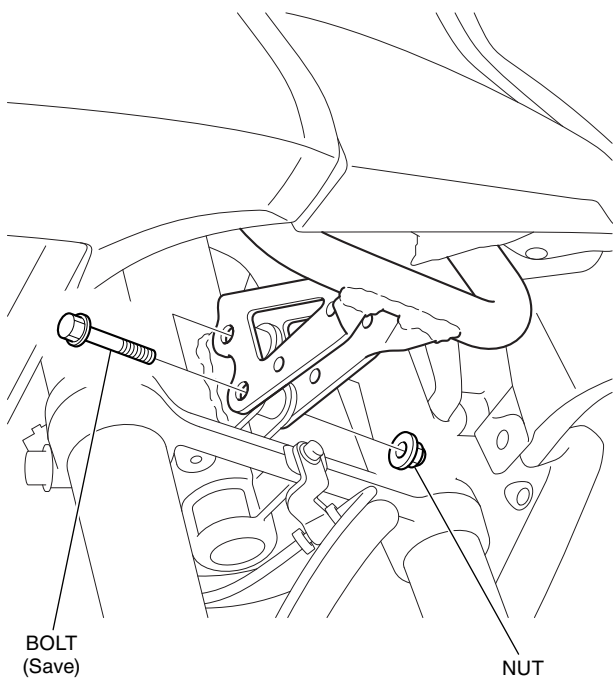


7. Loosely install the right light bar as shown.

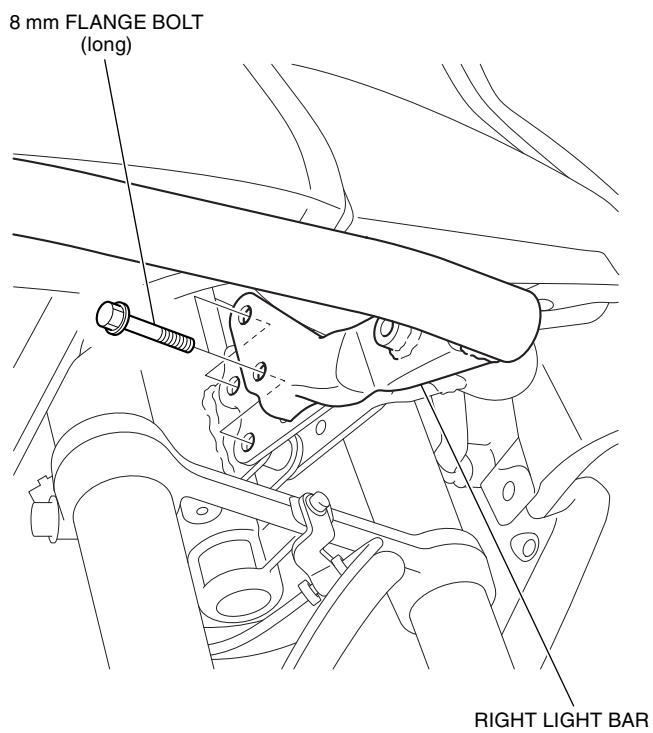


8. Loosely install the right light bar as shown.

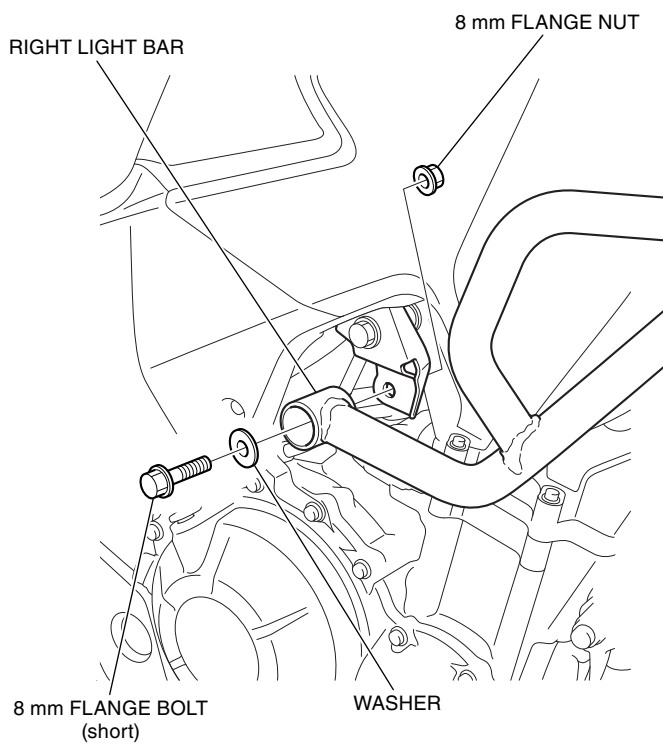


9. Loosely install the left light bar as shown.

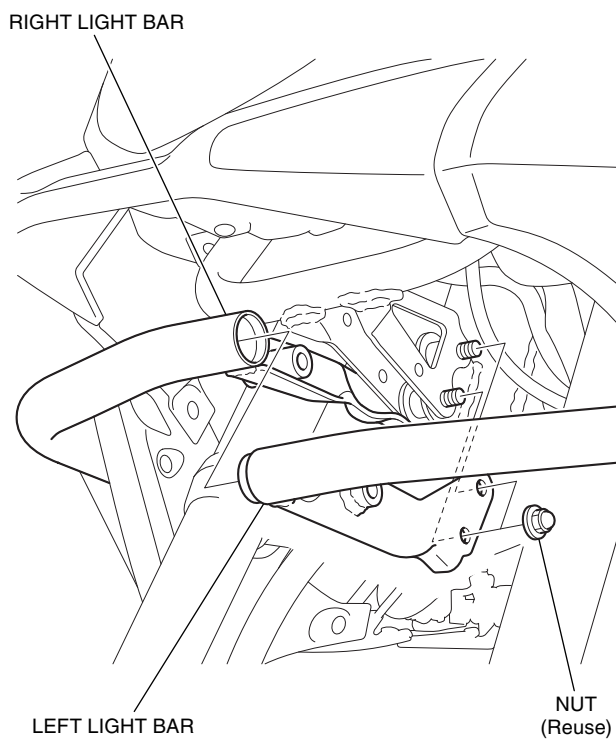

10. Loosely install the left light bar as shown.

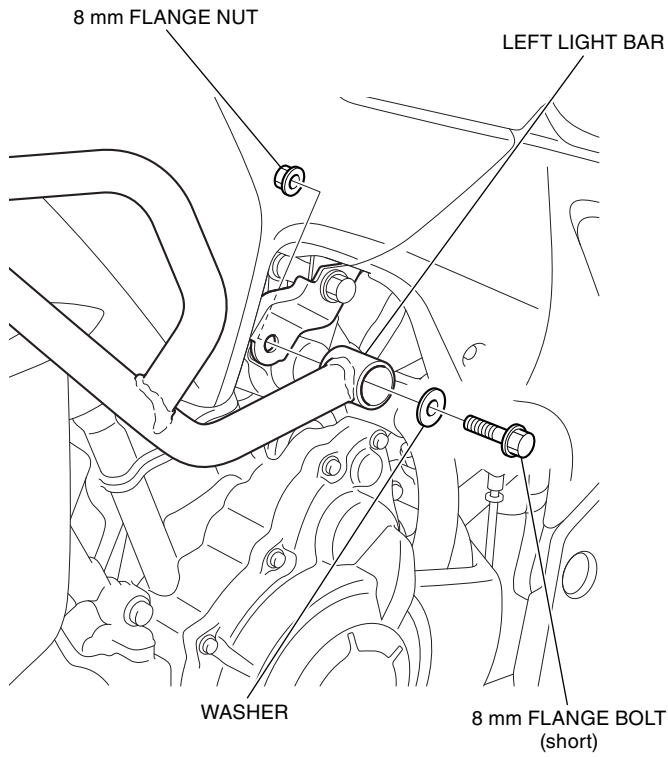

11. Install the 6 mm flange bolt and nut as shown.

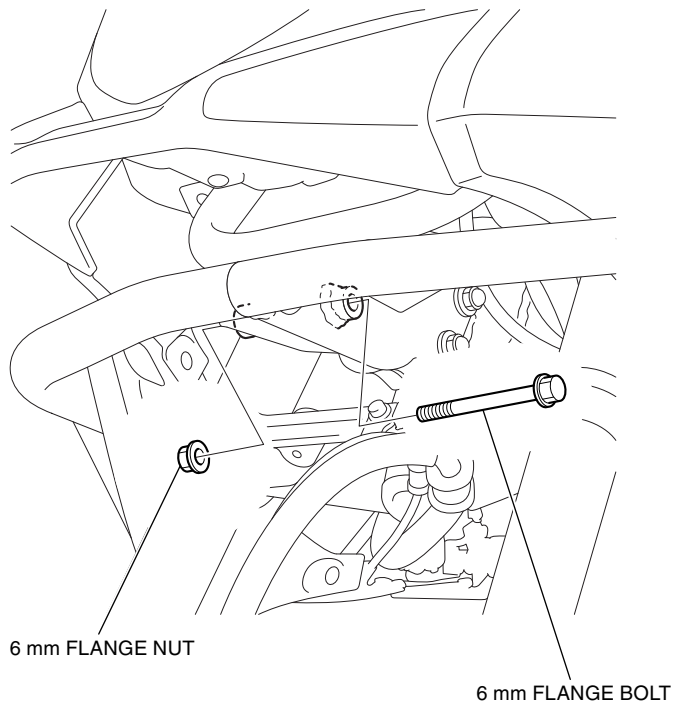

12. Tighten all loosely installed hardware to the specifications in the torque chart.

13. Install the left and right caps as shown.

- Repeat on the right side.

