

# HONDA

## INSTALLATION INSTRUCTIONS


Accessory  
**ALUMINUM SKID PLATES**  
 P/N 08P72-HL4-A00

Application  
**SXS1000M3/M3P/M5D/M5P**

Publication No.  
**MII 15262**  
 Issue Date  
**September 2015**

**Honda Dealer: Please give a copy of these instructions to your customer.**

### PARTS LIST

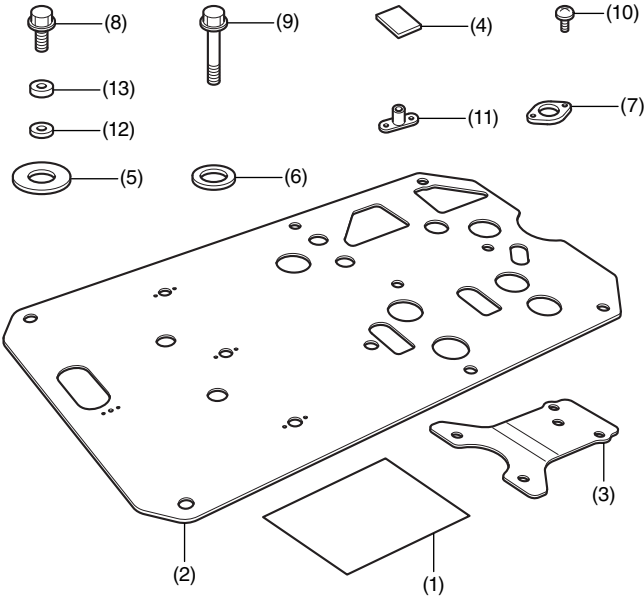

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	Middle skid plate	1
(3)	Rear skid plate	1
(4)	Cushion	1
(5)	Washer (large)	15
(6)	Washer (small)	1
(7)	Skid rigid spacer	3
(8)	6 mm flange bolt (short)	15
(9)	6 mm flange bolt (long)	1
(10)	6 mm screw	8
(11)	Skid rigid collar	1
(12)	Collar (thin)	12
(13)	Collar (thick)	3

### TOOLS AND SUPPLIES REQUIRED

- Socket (10 mm)
- Ratchet
- Phillips ® screwdriver
- Hondalock 2 or equivalent thread lock
- Isopropyl alcohol
- Shop towel
- Torque wrench

### TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
6 mm screw	3.5	0.4	2.6
6 mm flange bolt	16	1.6	12


### INSTALLATION

#### ▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- Remove the front skid plate as shown.


<Under side>

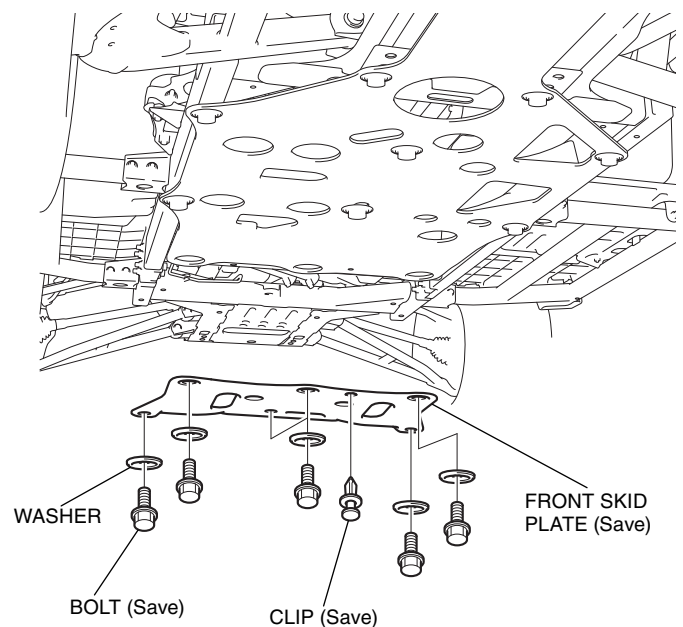

2. Remove the parts as shown.


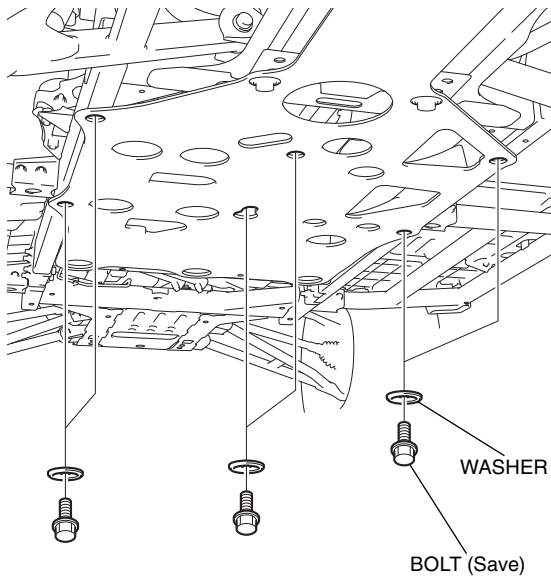


3. Remove the middle skid plate as shown.

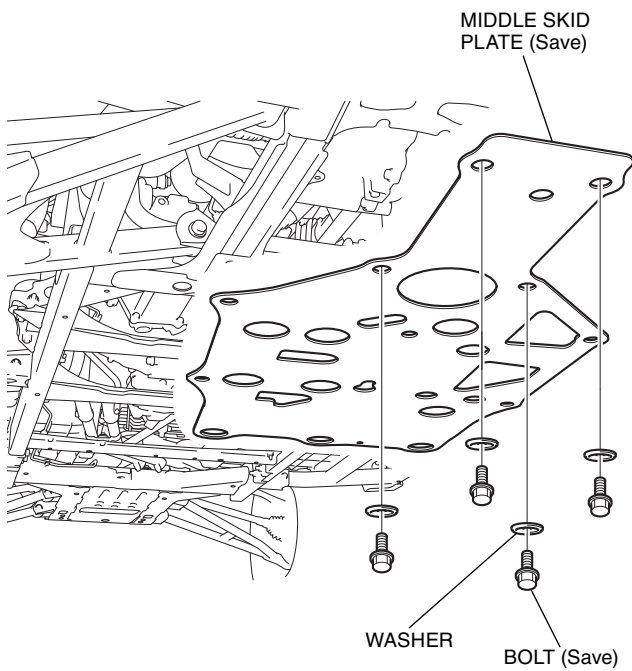


4. Install the rear skid plate as shown.


- Clean the bolts with isopropyl alcohol before applying thread lock.
- Be sure to apply to the threads of the bolt.

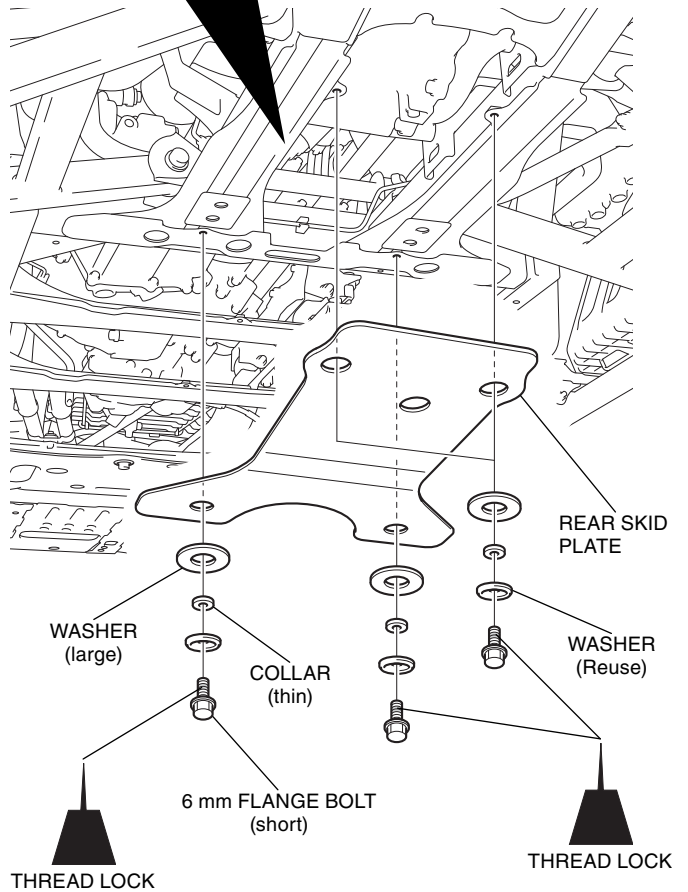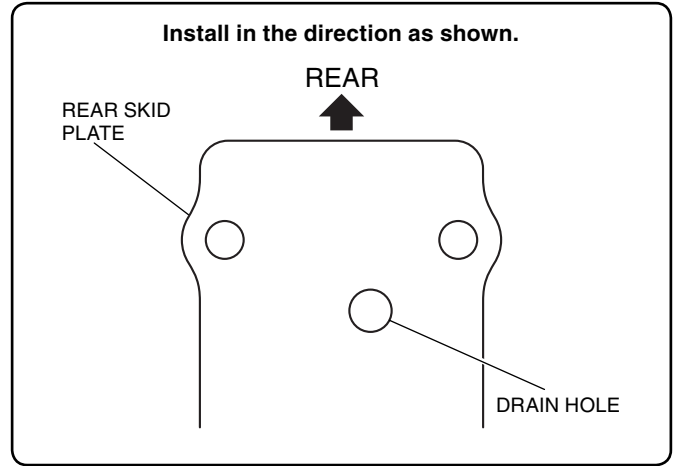


5. Clean the surface of the shaded area shown with isopropyl alcohol.

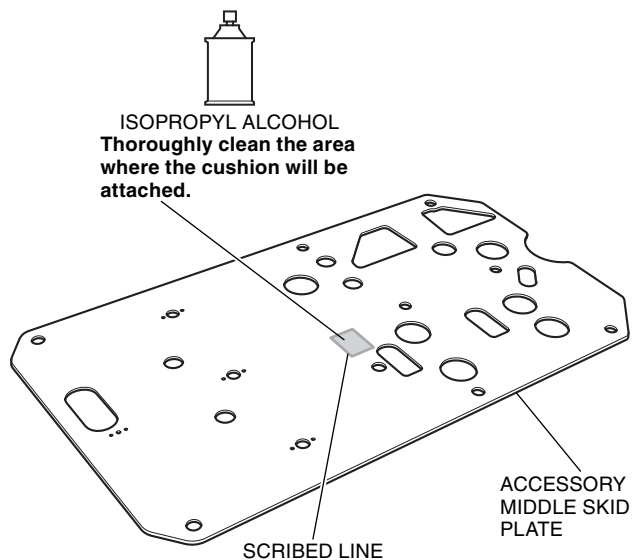


6. Attach the cushion to the middle skid plate as shown.

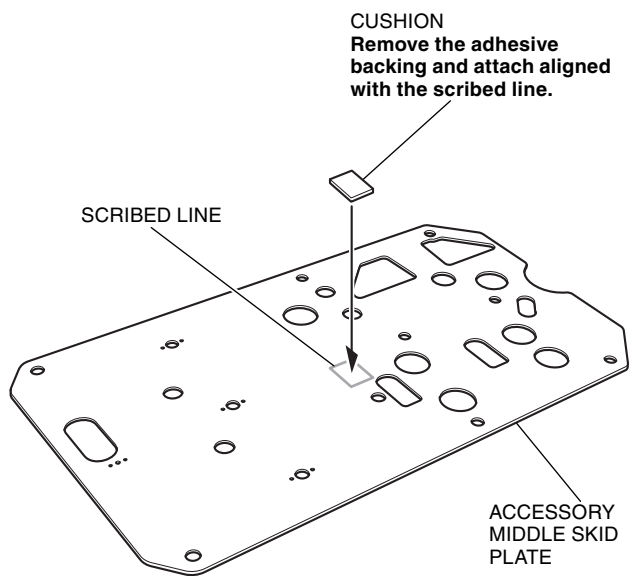


7. Install the skid rigid spacer as shown.

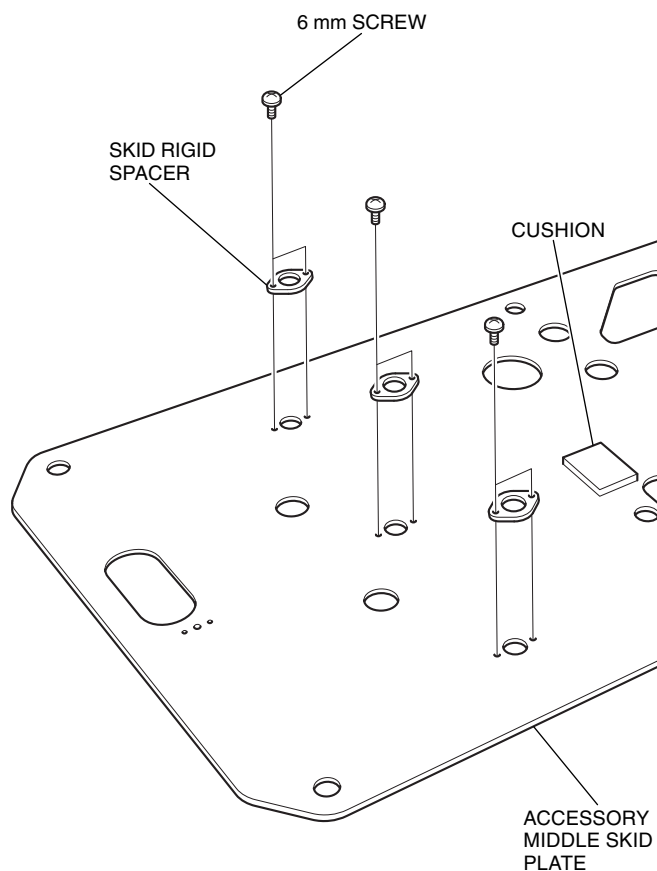


8. Install the skid rigid collar as shown.

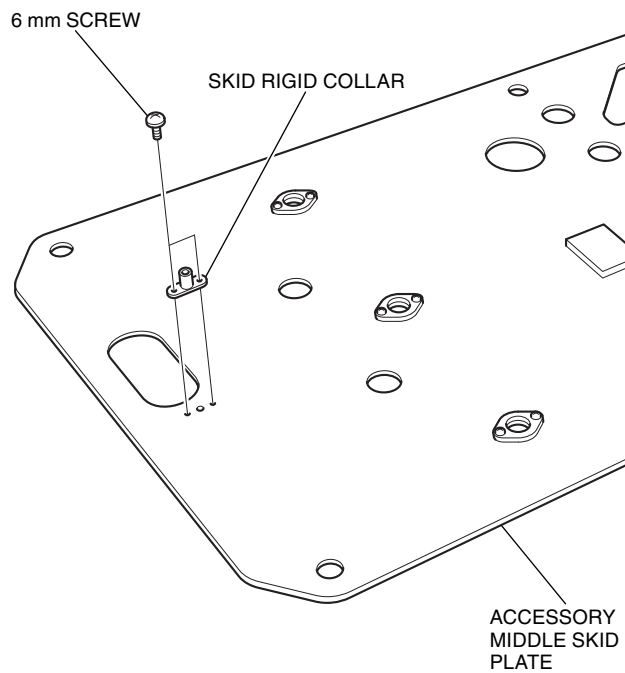


9. Loosely install the accessory middle skid plate as shown.
- Clean the bolts with isopropyl alcohol before applying thread lock.
  - Apply thread lock to the threads of the bolt.

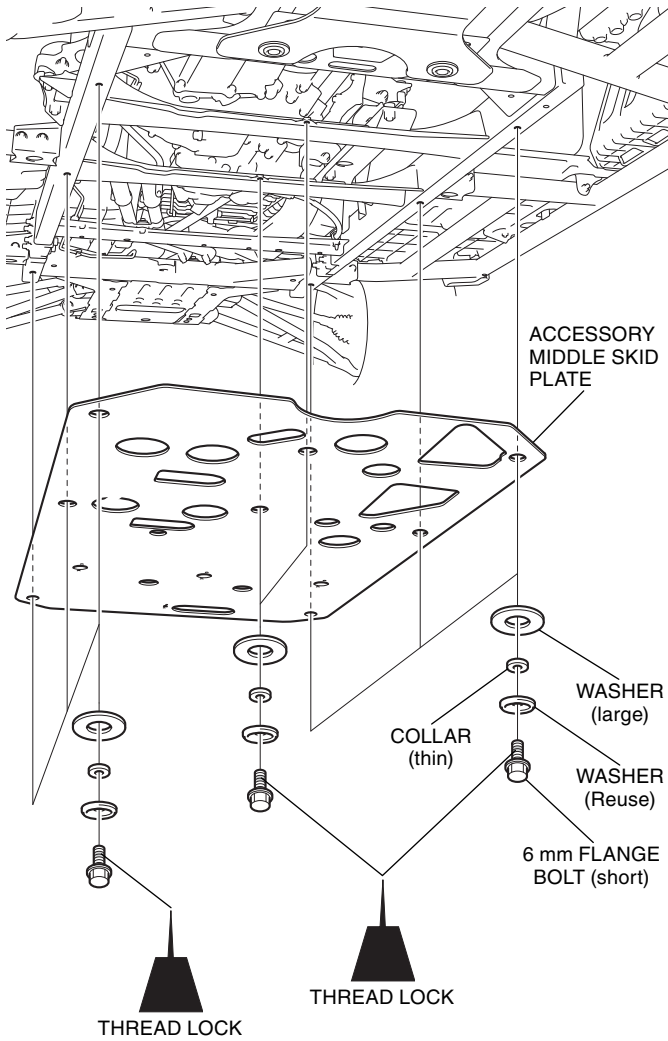

10. Loosely install the parts as shown.
- Clean the bolts with isopropyl alcohol before applying thread lock.
  - Apply thread lock to the threads of the bolt.

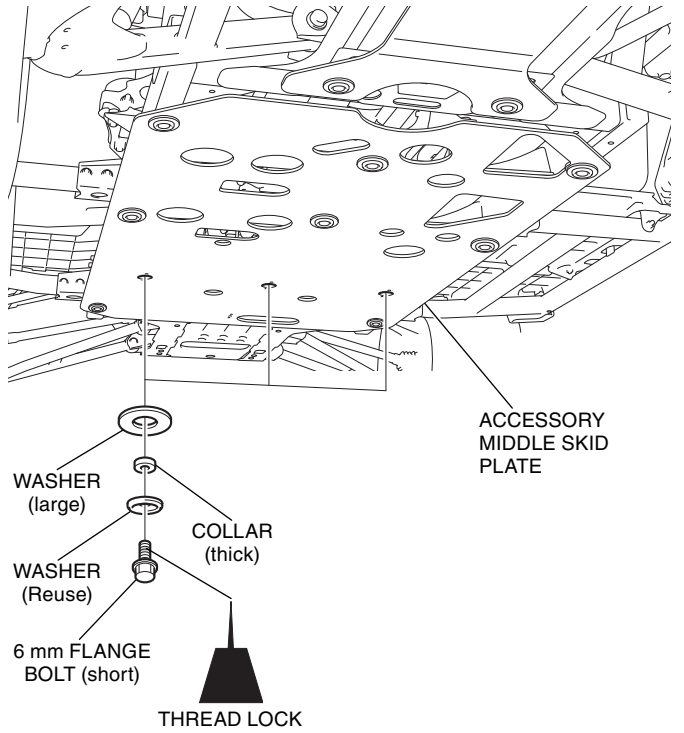

11. Install the parts as shown.
- Clean the bolts with isopropyl alcohol before applying thread lock.
  - Apply thread lock to the threads of the bolt.

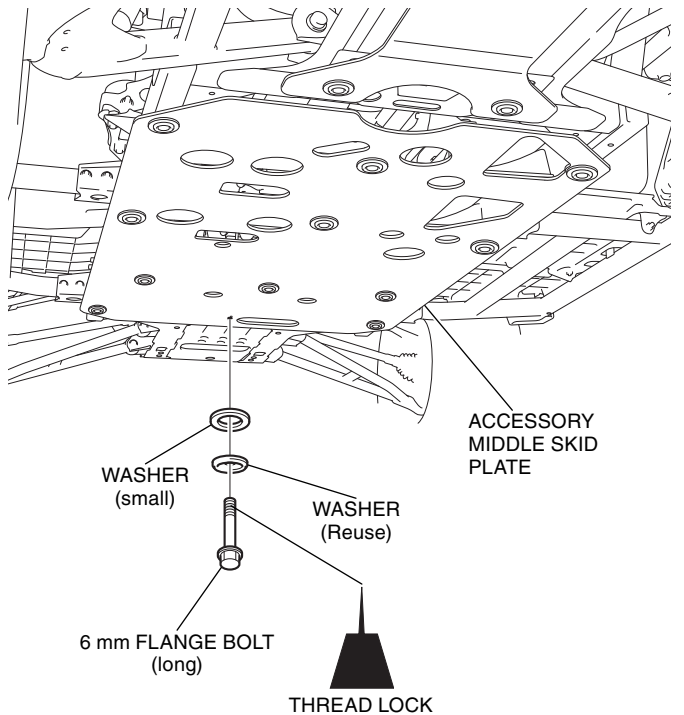

12. Tighten the loosely installed hardware to the values specified in the Torque Chart.