 


COMMON

- Added accessories can affect a motor scooter's stability, performance and safe riding speed.


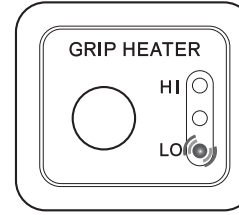


- INDICATOR OFF
- INDICATOR BLINKING

- If an indicator blinks, the battery is probably low. If the indicator continues to blink after riding for a while, charge or replace the battery.
 - When you are making a temporary stop or riding at low speed, the battery voltage level may go down. This can turn off the grip heater automatically. The heater then resumes operation when the battery voltage level recovers after riding for a while.
- If you find any other cases of abnormalities, see your dealer.

GRIP HEATER


Not available in U.S.A.

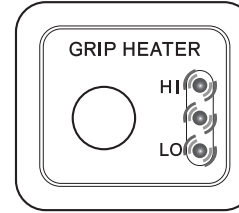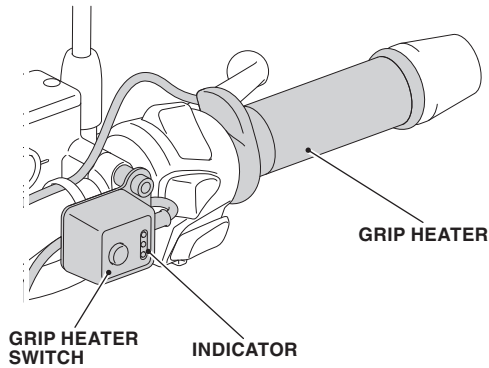


- INDICATOR OFF
- INDICATOR BLINKING

- If all three indicators blink, turn the ignition switch to the OFF position, then, turn it back to the ON position.
- If indicators continue to blink, or if you find other abnormalities with the indicators, see your dealer.

- The grip heater warms up the right and left grips of the handlebar for comfortable riding on a cold day.
- The grip heater switch is located on the right handlebar. To operate, adjust the grip heater switch with the engine started.
- Adjust the temperature by repeatedly pressing the grip heater switch. The temperature can be set between five levels.
- Do not leave the grip heater in the high position for a long time on a warm day. Wear gloves to protect your hands from the grip heaters.
- Do not use the grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.

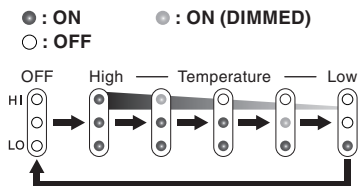


REAR CARRIER

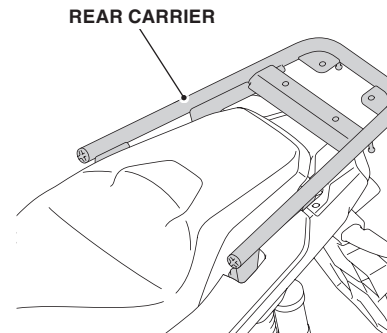


- The weight of the cargo must not exceed the following maximum loading capacity:
Only using rear carrier: 8.0 kg (17.6 lb)
- Secure the cargo with a rope or bungee cord.
- Do not grab the rear carrier when moving the motor scooter.
- Check the accessory mounts frequently and retighten if necessary.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then, wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

TOP BOX BASE

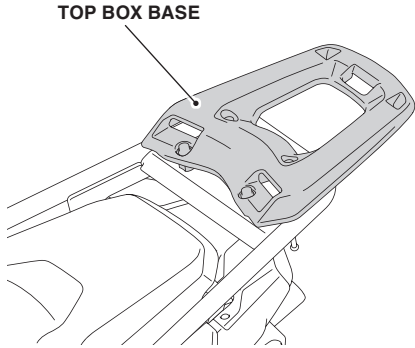


- The weight of the cargo must not exceed the following maximum loading capacity:
Cargo weight in top box: 3.0 kg (6.6 lb)
- Check the accessory mounts frequently and retighten if necessary.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then, wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

TOP BOX

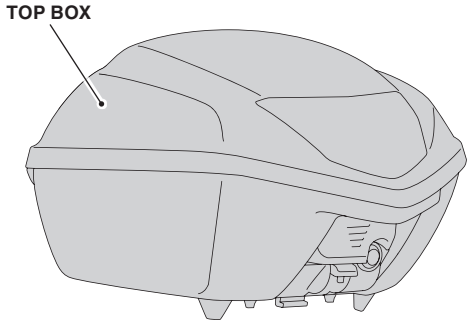


- The weight of the cargo must not exceed the following maximum loading capacity:
Cargo weight in top box: 3.0 kg (6.6 lb)

- Do not store valuables or easily breakable items in the top box.
- Don't place a heavy object on the opened lid or apply excessive force to the top of the opened lid.
- Be sure the top box is installed securely before riding.
- The top box is not perfectly watertight, and water may enter when washing the motor scooter, or when it rains.
- Check the accessory mounts frequently.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then, wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.


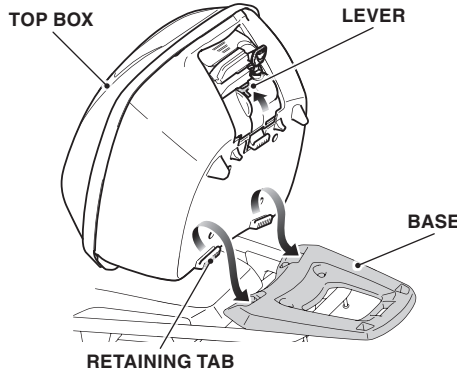


HOW TO INSTALL THE TOP BOX


NOTE:
• The key must be turned clockwise before installing the top box.

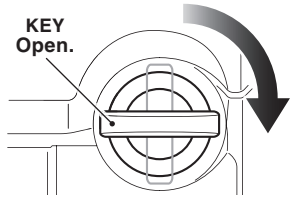

1. Insert the retaining tabs of the top box into the base with the lever in the raised position as shown.
2. Position the hook of the lock assembly to the base as shown.

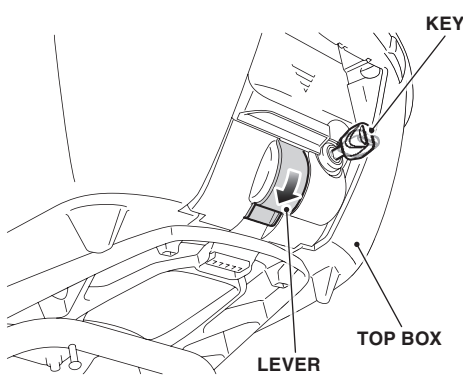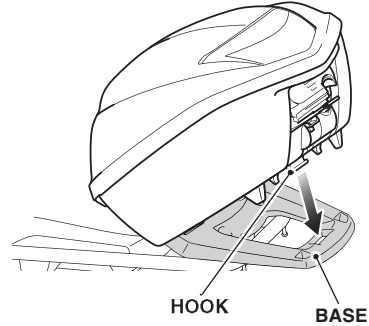


3. Secure the hook by pressing the lever down as shown, and lock with the key.

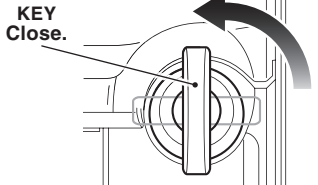

4. Remove the key. Be sure that lid and hook cannot be released and the top box is installed securely.
• The top box can come off while riding if it is not mounted securely.



ADV150A

Genuine Accessory User's Guide

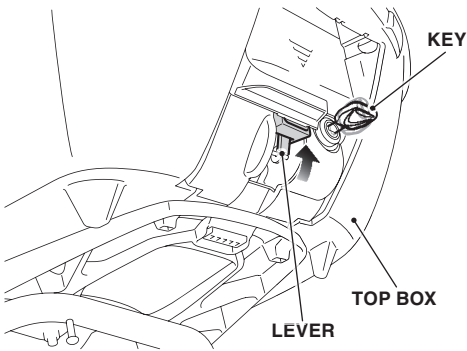

REMOVAL



1. Turn the key clockwise as shown and press the lever up.

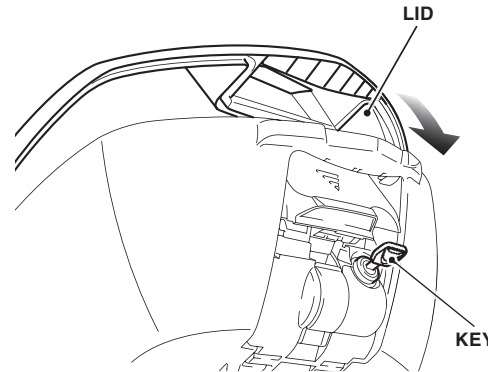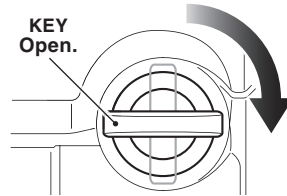

HOW TO CLOSE THE TOP BOX



NOTE:

- Be sure the lid is closed securely before riding.
1. Close the lid, turn the key clockwise and pull the hinge up.
 - Confirm the key position is as shown.

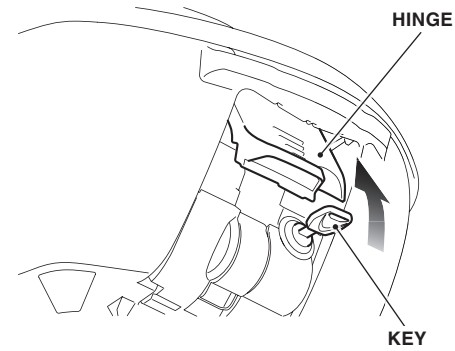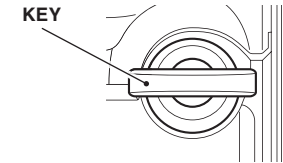


HOW TO OPEN THE TOP BOX


1. Release the lock by turning the key clockwise.

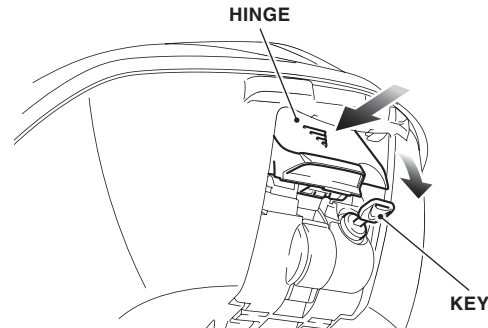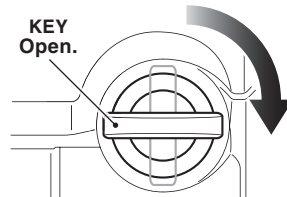


2. Holding the upper part of hinge, push the hinge down and turn the key counter-clockwise as shown.

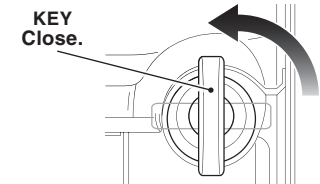

3. Remove the key.
- Make sure the lid is locked down securely.

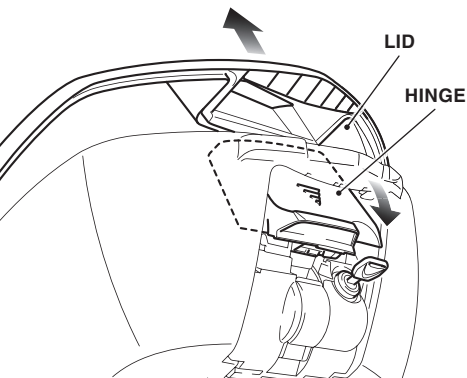

2. Raising the upper part of hinge, move the hinge down as shown, then, open the lid.

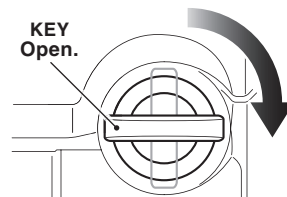

SAFETY INFORMATION

The following sentences show the label meaning.
Some labels warn you of potential hazards that could cause serious injury.
Others provide important safety information.
Read this information carefully and don't remove the label.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read the use and care information in installation instructions or genuine accessory user's guide carefully.
Read the LOAD LIMITS AND GUIDELINES, and TYRES sections in owner's manual.

DANGER (with RED background)

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING (with ORANGE background)

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION (with YELLOW background)


You CAN be HURT if you don't follow instructions.

Refer to this information for the meanings of the symbols shown on the accessory.

CARRIER WARNING LABEL



TOP BOX & PANNIER WARNING LABEL

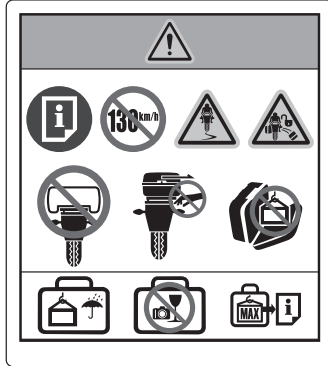

Never ride a motor scooter equipped with accessories and a cargo at speeds above 130 km/h (80 mph).



Added accessories and cargo can reduce a motor scooter's stability, performance and safe riding speed. A motor scooter's stability is influenced by an improper loading, worn or under-inflated tyres, the overall motor scooter condition and environmental conditions.



When driving with the motor scooter, all locks of all bags must be securely locked. Panniers or top box may fall off if not locked properly to the carrier or stay. Check for secure locking before riding.



When the carrier base is used as a rear carrier without mounting the top box, load the cargo on the carrier base in such a manner that the ability of the carrier base to slide is not impaired.



Do not insert your fingers or your hand into the bracket installation part at the bottom of the top box. Your fingers may get caught between top box and bracket.



Heavy cargo placed on the opened lid can damage the pannier or top box and the lid.



Entry of water is possible when the vehicle is washed etc.



Please be careful when placing important objects into the box. Also be careful with breakable and valuable items. Do not leave valuable items in the bags.



Regarding the maximum loading capacity. Read the use and care information carefully in each of the accessory installation instructions or genuine accessory user's guide.