

# Contents

**Motorcycle Safety** P. 2

**Operation Guide** P. 16

**Maintenance** P. 34

**Troubleshooting** P. 80

**Information** P. 99

**Specifications** P. 121

**Index** P. 125

# Welcome

Congratulations on your purchase of a new Honda motorcycle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the motorcycle.

To protect your investment, we urge you to take responsibility for keeping your motorcycle well serviced and maintained. Also, observe the break-in guidelines, and always perform the pre-ride inspection and other periodic checks in this manual.

When service is required, remember that your Honda dealer knows your motorcycle best. If you have the required mechanical "know-how" and tools, you can purchase an official Honda Service Manual to help you perform many maintenance and repair tasks.

➤ [P. 116](#)

Read the warranty information thoroughly so that you understand the warranty coverage and that you are aware of your rights and responsibilities. ➤ [P. 117](#)

You may also want to visit our website at [www.powersports.honda.com](http://www.powersports.honda.com).

**Canada** [www.honda.ca](http://www.honda.ca).

Happy riding!

California Proposition 65 Warning

**WARNING:** This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

## A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the motorcycle
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

### **Other important information is provided under the following titles:**

**NOTICE** Information to help you avoid damage to your motorcycle, other property, or the environment.

# Motorcycle Safety

This section contains important information for safe riding of your motorcycle.  
Please read this section carefully.

<b>Safety Guidelines</b> .....	P. 3
<b>Safety Labels</b> .....	P. 7
<b>Safety Precautions</b> .....	P. 9
<b>Riding Precautions</b> .....	P. 10
<b>Accessories &amp; Modifications</b> .....	P. 14
<b>Loading</b> .....	P. 15

## Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flame away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

### Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved motorcycle helmet and protective apparel. ➔ [P. 9](#)

### Before Riding

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check that you and your passenger are both wearing an approved motorcycle helmet and protective apparel. Instruct your passenger on holding onto the seat strap or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the motorcycle is stopped.

### Take Time to Learn & Practice

Even if you have ridden other motorcycles, practice riding in a safe area to become familiar with how this motorcycle works and handles, and to become accustomed to the motorcycle's size and weight.

## Safety Guidelines

We recommend that all riders take a certified course approved by the Motorcycle Safety Foundation (MSF). New riders should start with the basic course, and even experienced riders will find the advanced course beneficial. For information about the MSF training course nearest you, call the national toll-free number: (800) 446-9227.

**USA** Other riding tips can be found in the You and Your Motorcycle Riding Tips booklet that came with your motorcycle.

### Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

### Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

### Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

### Don't Drink and Ride

Alcohol and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. Don't drink and ride, and don't let your friends drink and ride either.

## Keep Your Honda in Safe Condition

It's important to keep your motorcycle properly maintained and in safe riding condition. Inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits (➔P. 15), and do not modify your motorcycle or install accessories that would make your motorcycle unsafe (➔P. 14).

## If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first evaluate the condition of your motorcycle. If the engine is still running, turn it off. Inspect for fluid leaks,

check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously. Your motorcycle may have suffered damage that is not immediately apparent. Have your motorcycle thoroughly checked at a qualified service facility as soon as possible.

### Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colorless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide. Never run your motorcycle inside a garage or other enclosure.

### **WARNING**

Carbon monoxide gas is toxic.  
Breathing it can cause  
unconsciousness and even kill you.


Avoid any areas or activities that  
expose you to carbon monoxide.




## Safety Labels

Safety and information labels on your motorcycle provide important safety information and may warn you of potential

hazards that could cause serious injury. Read these labels carefully and don't remove them. If a label comes off or becomes hard to read, contact your dealer for a replacement.

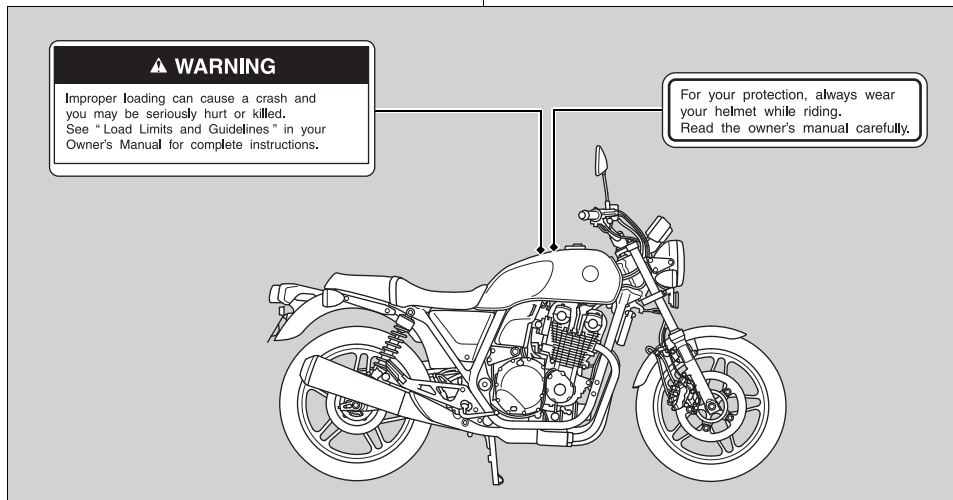

TIRE INFORMATION		
Cold tire pressures :		
(Up to maximum weight capacity)		
Front	250kPa 2,50kgf/cm <sup>2</sup>	36psi
Rear	290kPa 2,90kgf/cm <sup>2</sup>	42psi
(Up to 90kg(200lbs) load)		
Front	250kPa 2,50kgf/cm <sup>2</sup>	36psi
Rear	290kPa 2,90kgf/cm <sup>2</sup>	42psi
Maximum weight capacity :159kg(351lbs)		
Tire size : Front 110/80R18M/C 58V		
Rear 140/70R18M/C 67V		
Tire brand	Front	Rear
BRIDGESTONE	BT-54F RADIAL G	BT-54R RADIAL G
DUNLOP	D205F	D205
Min. recommend tire center tread depth.		
Front 1,5mm(0,06in.)		Rear 2,0mm(0,08in.)
Read owner's manual.		
This motorcycle is equipped with tubeless tires.		

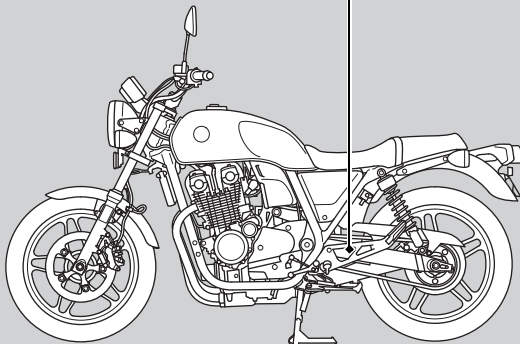

## Safety Precautions

- Ride cautiously and keep your hands on the handlebars and feet on the footpegs.
- Keep passenger's hands on the seat strap, passenger's feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

### Protective Apparel

Make sure that you and any passenger are wearing an approved motorcycle helmet, eye protection, and high-visibility protective clothing. Ride defensively in response to weather and road conditions.

#### ■ Helmet

Should be safety-standard certified, high-visibility, and correct size for your head.

- Must fit comfortably but securely, with the chin strap fastened.

- Face shield with unobstructed field of vision or other approved eye protection.

**USA** Look for a DOT (Department of Transportation) certification label on any helmet you buy.

### **WARNING**

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

#### ■ Gloves

Full-finger leather gloves with high abrasion resistance

## Riding Precautions

### ■ Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection

### ■ Jacket and Pants

Protective, highly visible, long-sleeved jacket and durable long pants for riding (or a protective suit).

## Riding Precautions

### Break-in Period

During the first 300 miles (500 km) of running, follow these guidelines to ensure your motorcycle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking.
- Ride conservatively.

### Brakes

Observe the following guidelines:

- Avoid excessively hard braking and sudden shifting to a lower gear.
  - ▶ Sudden braking can reduce the motorcycle's stability.
  - ▶ Where possible, reduce speed before turning; otherwise you risk wheel slippage.

- Exercise caution on low traction surfaces.
  - ▶ The wheels lock more easily on such surfaces, and braking distances are longer.
- Avoid continuous braking.
  - ▶ Repeated braking can overheat the brakes, reducing their effectiveness.

### ■ Combined ABS (CB1100A only)

Your motorcycle's rear brake system is linked to the front brake. This means that operating the rear brake pedal applies the rear brake and a portion of the front brake. Operating the front brake lever applies only the front brake.

For full braking effectiveness, operate both the lever and pedal together.

This model is also equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may actually result in a longer stopping distance.
- ABS does not function at speeds below 6 mph (10 km/h).
- The brake lever and pedal may recoil slightly when applying the brakes. This is normal.
- Always use the recommended tires to ensure correct ABS operation.

### ■ Engine Braking

Engine braking helps slow your motorcycle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

## Riding Precautions

### Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

### Parking

- Park on a firm, level paved surface.
- If you must park on a slight incline or loose surface, park so that the motorcycle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.

- To reduce the likelihood of theft, always lock the handlebars and remove the key when leaving the motorcycle unattended. Use of an anti-theft device is also recommended.

### Parking with the Side Stand or Center Stand

1. Stop the engine.

2. **Using the side stand**

Push the side stand down.

Slowly lean the motorcycle to the left until its weight rests on the side stand.

#### Using the center stand

Let down the center stand, stand on the left side of the motorcycle. Hold the left handle grip and the left grab rail. Press down on the tip of the stand with your right foot and, simultaneously, pull up and back.

3. Turn the handlebar fully to the left.

▶ Turning the handlebars to the right reduces stability and may cause the motorcycle to fall.

4. Turn the ignition switch to the LOCK position and remove the key. ➤ P. 27

### Refueling and Fuel Guidelines

Follow these guidelines to protect the engine and catalytic converter:

- Use only unleaded gasoline.
- Use recommended octane number. Using lower octane gasoline will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➤ P. 115
- Do not use stale or contaminated gasoline or an oil/gasoline mixture.
- Avoid getting dirt or water in the fuel tank.

## Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed or approved for your motorcycle by Honda or make modifications to your motorcycle from its original design. Doing so can make it unsafe. Modifying your motorcycle may also void your warranty and make your motorcycle illegal to operate on public roads and highways. Before deciding to install accessories on your motorcycle be certain the modification is safe and legal.

### **WARNING**

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your motorcycle. Your motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.



## Loading

- Carrying extra weight affects your motorcycle's handling, braking and stability. Always ride at a safe speed for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.  
**➤ Maximum weight capacity P. 121**
- Tie all luggage securely, evenly balanced and close to the center of the motorcycle.
- Do not place objects near the lights or the muffler.

### **WARNING**

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

# Parts Location

Rear brake fluid reservoir ➡ P.66

Battery ➡ P.56

Air cleaner ➡ P.64

Front brake fluid reservoir  
➡ P.66

Front brake lever ➡ P.76

Throttle grip ➡ P.74


Engine oil fill cap ➡ P.60

Engine oil filter ➡ P.62


Engine oil inspection window  
➡ P.60

Rear brake pedal


Rear suspension spring  
preload adjuster ➡ P.78

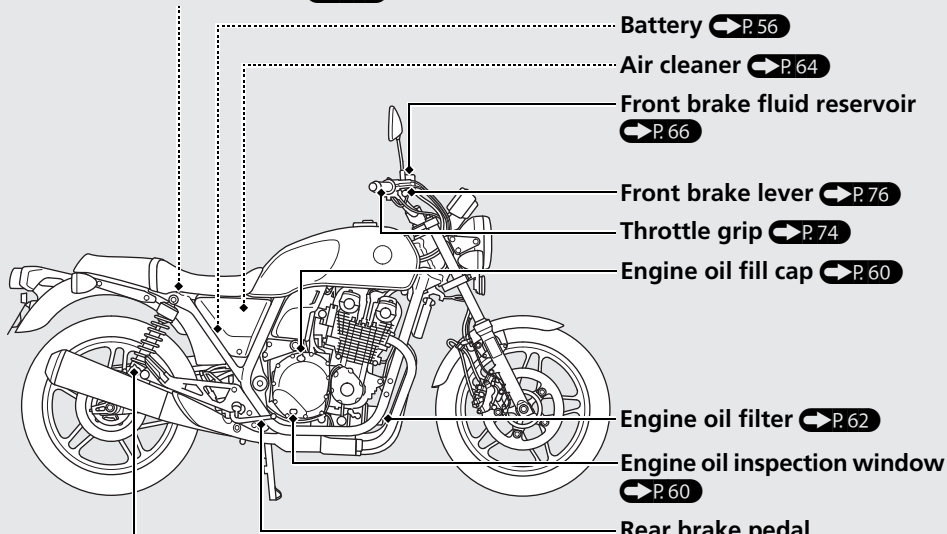

Front suspension spring  
preload adjuster ➔ P. 77

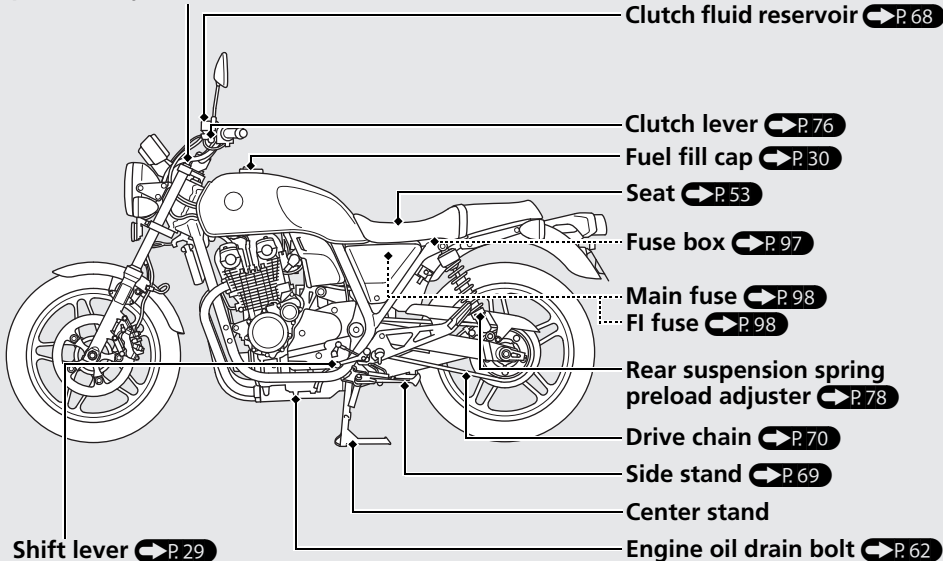

# Instruments

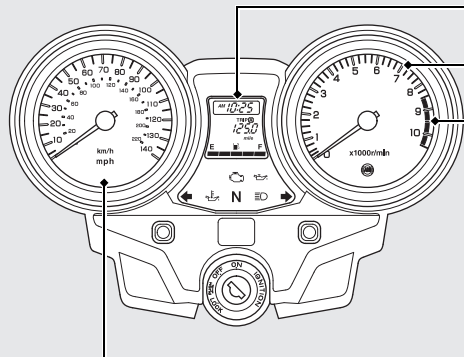

## Speedometer

This shows your speed in miles per hour (mph) and/or kilometer per hour (km/h) depend on type.


## Tachometer

### NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

## Tachometer red zone

(excessive engine rpm range)

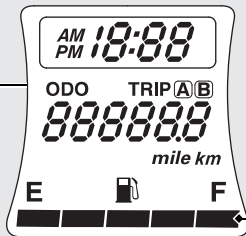

### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.92 US gal (3.5 liters).




### Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will continue flashing or turn off completely. If this occurs, see your dealer as soon as possible.

### Display Check

When the ignition switch is turned on, all the mode and digital segments will show. If any part of the display does not come on when it should, see your dealer.

## Instruments (Continued)

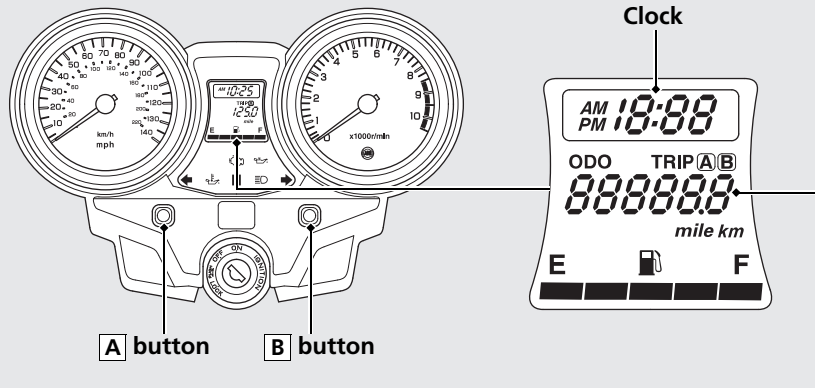

### Odometer [ODO] & Tripmeter [TRIP A/B]


**A** button switches between odometer and tripmeters.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold **B** button to reset to 0.0 mile/km).

## Display Setting

You can adjust the two settings.

- Clock setting
- Changing of mileage unit

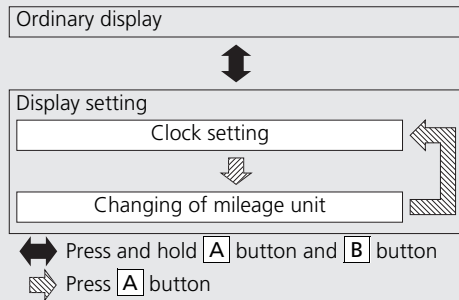

## To set the clock:

- 1 Turn the ignition switch on.
- 2 Press and hold [A] and [B] buttons until the hour digits start flashing.

AM 10:25 → AM 10:25

- 3 Press [B] button until the desired hour and AM/PM are displayed.
  - ▶ Press and hold to advance the hour fast.

AM 10:25 → PM 5:25

- 4 Press [A] button. The minute digits start flashing.

PM 5:25 → PM 5:25

- 5 Press **B** button until the desired minute is displayed.
- ▶ Press and hold to advance the minute fast.




- 6 Press **A** button. The clock is set, and then the display moves to the changing of the mileage unit.
- ▶ The setting can also be set by turning the ignition switch off.
  - ▶ The display will stop flashing automatically and the setting will be cancelled if the button is not pressed for about 30 seconds.



## Changing the mileage unit:

- 1 After clock setting, the mileage unit start flashing.
- 2 Press **B** button to select either km or mile.
- 3 Press and hold **A** and **B** buttons until the display stops flashing. The mileage unit is set.
  - ▶ The setting can also be set by turning the ignition switch off.
  - ▶ The display will stop flashing automatically and the setting will be cancelled if the button is not pressed for about 30 seconds.

# Indicators

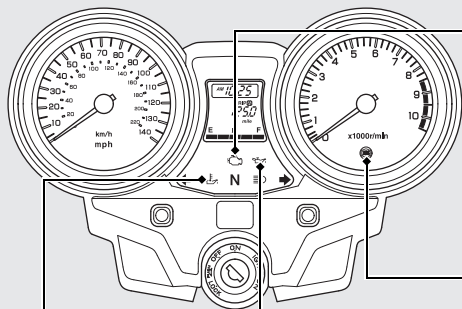

## High oil temperature indicator

Comes on briefly when the ignition switch is turned on with the engine stop switch in the (Run) position.  
**If it comes on while engine running:** ➔ P. 82



## PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the (Run) position.

**If it comes on while engine is running:**

➔ P. 83



## ABS (Anti-lock Brake System) indicator (CB1100A only)

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ P. 84




## Low oil pressure indicator


Comes on when the ignition switch is turned on. Goes off when the engine starts.

**If it comes on while engine is running:**

➔ P. 83

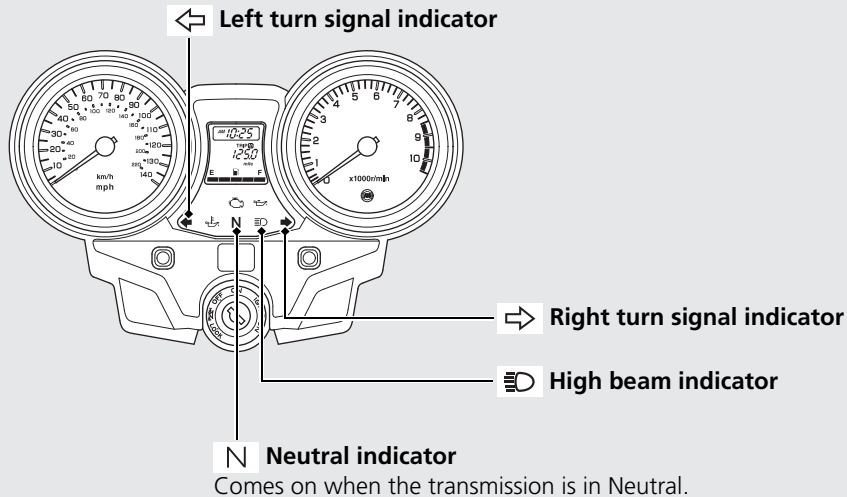

# Switches

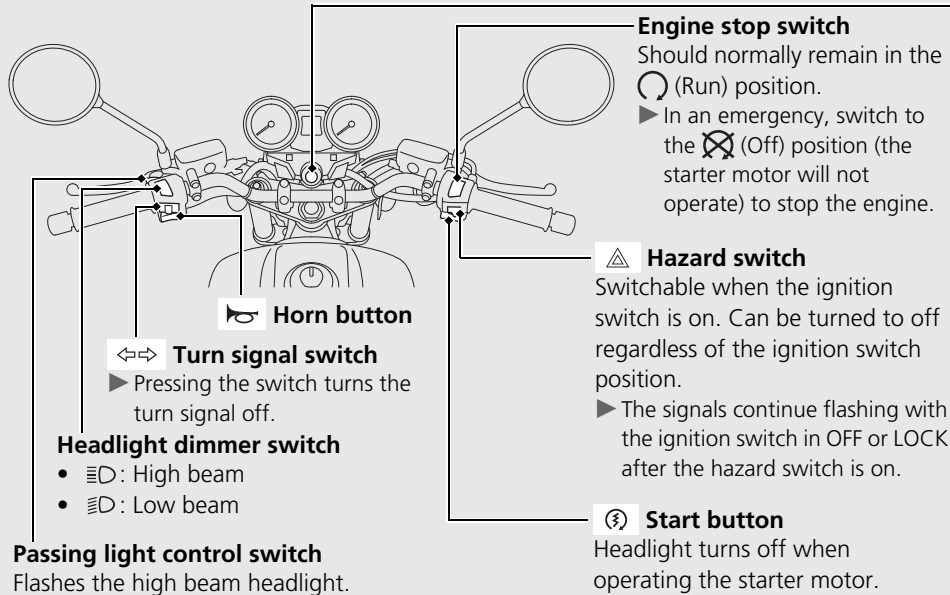

## Ignition Switch



Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

## Steering Lock

Locks the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

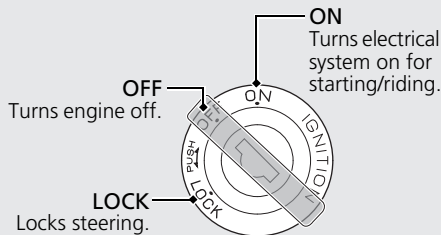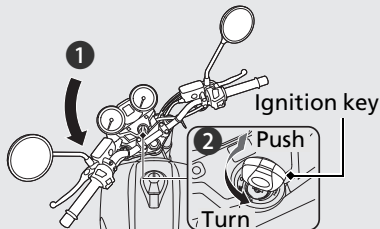

## Locking


- 1 Turn the handlebar all the way to the left.
- 2 Push the key down, and turn the ignition switch to the LOCK position.
  - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.


 
## Unlocking

Insert the key, push it in, and turn the ignition switch to the OFF position.

# Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

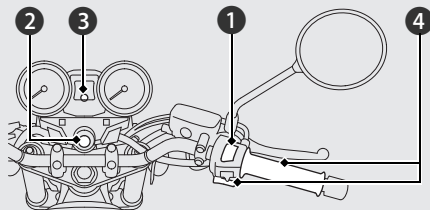

- 1 Make sure the engine stop switch is in the  (Run) position.
- 2 Turn the ignition switch to the ON position.
- 3 Shift the transmission to Neutral ( indicator comes on). Alternatively, pull in the clutch lever to start your motorcycle with the transmission in gear so long as the side stand is raised.
- 4 Press the start button with the throttle completely closed.

## NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again for recovery of battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.
- Do not "BLIP" the throttle (open and close rapidly) or idle for a long time, as the engine may be damaged by overheating.
- Do not leave the motorcycle unattended while the engine is running.


If the engine does not start:

- 1 Open the throttle fully and press the start button for 5 seconds.
- 2 Repeat the normal starting procedure.
- 3 If the engine starts, open the throttle slightly if idling is unstable.
- 4 If the engine does not start, wait 10 seconds before trying steps 1 & 2 again.

**If Engine Will Not Start**  P.81

# Shifting Gears

Your motorcycle transmission has five forward gears in a one-down, four-up shift pattern.

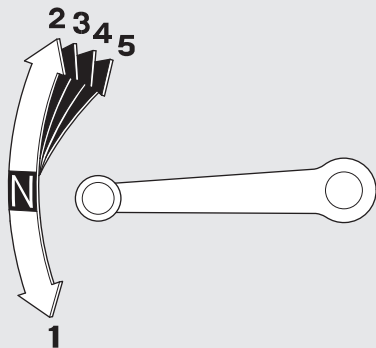

If you put the motorcycle in gear with the side stand down, the engine will shut off.

## Recommended Shift Points

### Shifting Up

From 1st to 2nd	16 mph (25 km/h)
From 2nd to 3rd	22 mph (35 km/h)
From 3rd to 4th	25 mph (40 km/h)
From 4th to 5th	28 mph (45 km/h)


### Shifting Down

From 5th to 4th	28 mph (45 km/h)
From 4th to 3rd	22 mph (35 km/h)

#### NOTICE

Improper shifting can damage the engine, transmission, and drive train. Also, coasting or towing the motorcycle for long distances with the engine off can damage the transmission.

# Refueling

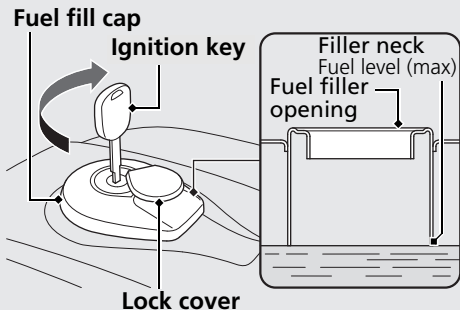

Do not fill with fuel above the plate.

**Fuel type:** Unleaded gasoline only

**Recommended fuel octane number:**

Pump Octane Number (PON) 86 or higher.

**Tank capacity:** 3.86 US gal (14.6 liters)

**Refueling and Fuel Guidelines** ➔ P.13

## Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key,

and turn it clockwise to open the cap.

## Closing the Fuel Fill Cap

- 1 After refueling, push the fuel fill cap closed until it locks.
- 2 Remove the key and close the cover.
  - ▶ The key cannot be removed if the cap is not locked.

## **⚠ WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.




# Storage Equipment


## Helmet holder

Helmet holders are located on the left side below the seat and under the seat. Use the helmet holders only when parked.

### Helmet holder

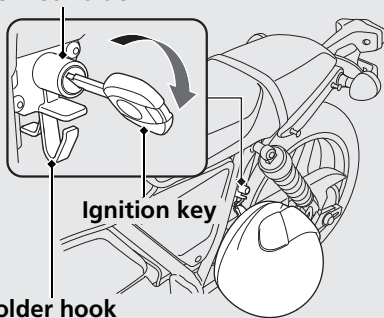

- ▶ Insert the ignition key and turn it clockwise to unlock. Hang your helmet on the holder hook. Turn the key counterclockwise to lock the holder hook and then remove the key.

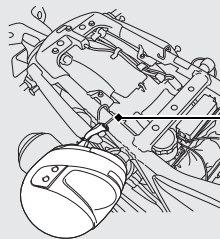

Removing the Seat → P.53


## ⚠ WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

## U-shaped lock/Document bag

Space to store a U-shaped lock is located under the seat. A document bag is located on the underside of the seat.

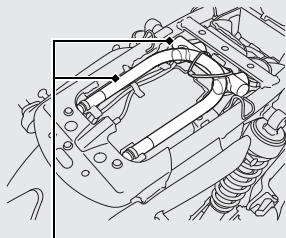


U-shaped lock

- ▶ The U-shaped lock is held in place above the rear fender by a rubber strap.
- ▶ Some U-shaped locks may not fit in the compartment due to their size or design.

**Removing the Seat** ➔ P.53

## Under side of the seat

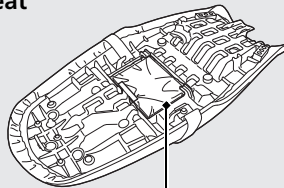


Document bag

## Tool kit

A tool kit is located under the seat. There is also space to store light weight items.

**Tool kit**


- ▶ The tool kit is held in the center compartment by a rubber strap.

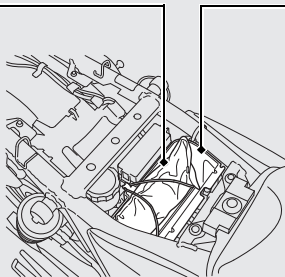**Center compartment**

Never exceed the maximum weight limit.

**Maximum Weight: 6.6 lb (3.0 kg)**

- ▶ Do not store any items that are flammable or susceptible to heat damage.

**Removing the Seat**  **P. 53**

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional larger tool kit may be available. Check with your Honda dealer’s parts department.

<b>Importance of Maintenance</b> .....	P. 35	<b>Side Stand</b> .....	P. 69
<b>Maintenance Schedule</b> .....	P. 37	<b>Drive Chain</b> .....	P. 70
<b>Maintenance Fundamentals</b> .....	P. 40	<b>Throttle</b> .....	P. 74
<b>Removing &amp; Installing Body Components</b> ...	P. 53	<b>Crankcase Breather</b> .....	P. 75
Seat.....	P. 53	<b>Other Adjustments</b> .....	P. 76
Side Cover .....	P. 54	Clutch and Brake Levers.....	P. 76
Clip .....	P. 55	Front Suspension .....	P. 77
Battery .....	P. 56	Rear Suspension.....	P. 78
<b>Spark Plugs</b> .....	P. 58	Headlight Aim.....	P. 79
<b>Engine Oil</b> .....	P. 60	Brake Light Switch .....	P. 79
<b>Air Cleaner</b> .....	P. 64		
<b>Brakes/Clutch</b> .....	P. 66		

# Importance of Maintenance

## Importance of Maintenance

Keeping your motorcycle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your motorcycle before each ride, and perform the periodic checks specified in the Maintenance Schedule. ➔ P. 37

## **WARNING**

Improperly maintaining your motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

## Importance of Maintenance

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Environment Canada (EC). ➤ P. 108

### USA

**Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are “certified” to EPA standards.**

## Maintenance Safety

Always read the maintenance instructions before you begin each task, and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and remove the key.
- Park your motorcycle on a firm, level surface using the side stand, center stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.







## Maintenance Schedule

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.


Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your motorcycle is properly maintained. Make sure that whomever performs the maintenance completes this record.


All scheduled maintenance is considered a normal owner operating cost and will be charged for by your dealer. Retain all receipts. If you sell the motorcycle, these receipts should be transferred with the motorcycle to the new owner.

## Maintenance Schedule

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	74
	Air Cleaner*2						I			I	64
	Crankcase Breather*3				C	C	C	C	C	C	75
	Spark Plug				I	R	I	R	I	R	58
	Valve Clearance					I		I		I	-
	Engine Oil			R	R	R	R	R	R	R	60
	Engine Oil Filter			R		R		R		R	62
	Engine Idle Speed					I		I		I	-
	Secondary Air Supply System					I		I		I	-
	Evaporative Emission Control System*4							I		I	-

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual ([▶ P. 116](#)).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.



Items		Frequency	Odometer Reading*1							Refer to page		
			× 1,000 mi	0.6	4	8	12	16	20		24	
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4	
Non-Emission-Related Items	Drive Chain		Every 500 mi (800 km)	I	L							70
	Drive Chain Slider				I	I	I	I	I	I		73
	Brake Fluid*5				I	I	R	I	I	R		66
	Brake Pads Wear				I	I	I	I	I	I		67
	Brake System			I		I		I		I		66
	Brake Light Switch					I		I		I		79
	Headlight Aim					I		I		I		79
	Clutch System					I		I		I		76
	Clutch Fluid*5				I	I	R	I	I	R		68
	Side Stand					I		I		I		69
	Suspension	🔧				I		I		I		77
	Nuts, Bolts, Fasteners	🔧			I		I		I		I	-
	Wheels/Tires	🔧				I		I		I		49
Steering Head Bearings	🔧			I		I		I		I	-	

## Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace

## Notes:

- \*1 : At higher odometer readings, repeat at the frequency interval established here.
- \*2 : Service more frequently when riding in unusually wet or dusty areas.
- \*3 : Service more frequently when riding in rain or at full throttle.
- \*4 : 50 STATE type (meets California)
- \*5 : Replace every 2 years, or at indicated odometer intervals, whichever comes first. Replacement requires mechanical skill.

## Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

Check the following items before you ride your motorcycle:

- Fuel level-Fill fuel tank when necessary. ➤ P. 30
- Throttle-Check for smooth opening and full closing in all steering positions. ➤ P. 74
- Engine oil level-Add engine oil if necessary. Check for leaks. ➤ P. 60
- Drive chain-Check condition and slack, adjust and lubricate if necessary. ➤ P. 70
- Brakes-Check operation;  
Front and Rear: Check brake fluid level and pads wear. ➤ P. 66, 67
- Lights and horn-Check that lights, indicators and horn function properly.
- Engine stop switch-Check for proper function. ➤ P. 26
- Clutch-Check clutch fluid level. ➤ P. 68
- Side stand ignition cut-off system-Check for proper function. ➤ P. 69
- Wheels and tires-Check condition, air pressure and adjust if necessary. ➤ P. 49

## Periodic Checks

You should also perform other periodic maintenance checks at least once a month regardless of how often you ride, or more often if you ride frequently.


Also, check the odometer reading against the Maintenance Schedule and perform all maintenance that is due. ➤ P. 38

Tires and wheels	Check the air pressure (➤ P. 49), examine tread for wear and damage (➤ P. 49, 50), and check the wheels for damage.
Fluid levels	Check the engine oil level (➤ P. 60) and brake fluid level (➤ P. 66).
Lights	Check that the headlight, brake light, taillight, turn signals and license plate light are working properly.
Controls	Check the freeplay of the clutch lever (➤ P. 76), and throttle grip (➤ P. 74).
Drive chain	Check the slack (➤ P. 70), adjust the slack (➤ P. 71), and lubricate (➤ P. 48) as needed.
Fuses	Check that you have a full supply of spare fuses.
Nuts & bolts	Check the major nuts and bolts, and tighten as needed.

### Replacing Parts

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety. When ordering colored components, specify the model name, color, and code mentioned on the color label. The color label is attached to the frame under the seat.

▶ P. 53

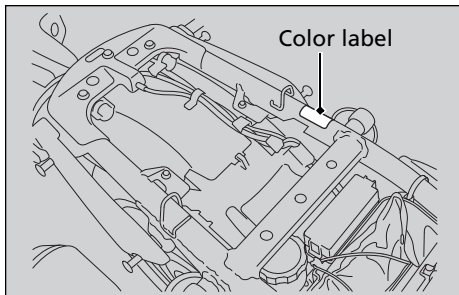

### **⚠ WARNING**

Installing non-Honda parts may make your motorcycle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your motorcycle.

## Battery

Your motorcycle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

### What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
  - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
  - ▶ Remove affected clothing and wash your skin thoroughly using water.

- Electrolyte splashes into your mouth:
  - ▶ Rinse mouth thoroughly with water, and do not swallow.

## WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.


**Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.**

**WARNING:** Battery posts, terminals, and related accessories contain lead and lead compounds.

**Wash your hands after handling.**

### Cleaning the Battery Terminals

1. Remove the battery. ➔ P. 56
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.
3. If the terminals are heavily corroded, clean the terminals with a wire brush or sandpaper. Wear safety glasses.

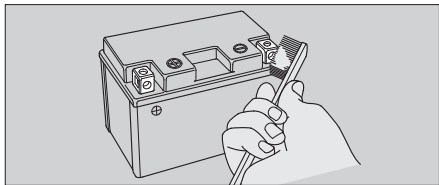

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

### Charging

If you use electrical accessories that drain the battery or you do not ride frequently, we recommend that you charge the battery every 30 days using a charger designed specifically for your Honda, which can be purchased from your dealer. Read the information that came with your battery charger and follow the instructions on the battery. Avoid using an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

Make sure the ignition switch is in the OFF position before charging the battery.

#### NOTICE

Improper charging can damage the battery. If you can't charge the battery or it appears unable to hold a charge, contact your dealer.

**NOTICE**

Jump starting using an automobile battery can damage your motorcycle's electrical system and is not recommended. Bump starting is also not recommended.

**NOTICE**

 
Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

**Fuses**

Fuses protect the electrical circuits on your motorcycle. If something electrical on your motorcycle stops working, check for and replace any blown fuses. ➔ [P. 97](#)

**Inspecting and Replacing Fuses**

Turn off the ignition switch to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➔ [P. 123](#)

**Blown fuse****NOTICE**

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your motorcycle inspected by your dealer.

### Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


#### Selecting the Engine Oil

For recommended engine oil, see “Specifications.” [P. 122](#)


If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:

- JASO T 903 standard\*1: MA
- SAE standard\*2: 10W-30
- API classification\*3: SG or higher

- \*1. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

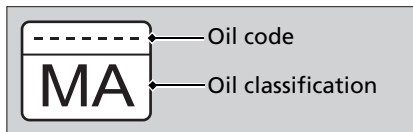

- \*2. The SAE standard grades oils by their viscosity.
- \*3. The API classification specifies the quality and performance rating of engine oils. Use SG or higher oils, excluding oils marked as “Energy Conserving” or “Resource Conserving” on the circular API service symbol.

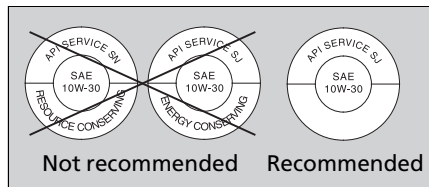



## Brake Fluid (Clutch Fluid)

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

### NOTICE

Brake fluid can damage plastic and painted surfaces. Wipe up spills immediately and wash thoroughly.

### Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent

## WARNING


Clean filler cap before removing. Use only DOT 4 fluid from a sealed container.

## Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration.

If the chain does not move smoothly, makes strange noises, has damaged rollers or loose pins or missing O-rings, or kinks, have the chain inspected by your dealer.

Also inspect the engine sprocket and rear wheel sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.

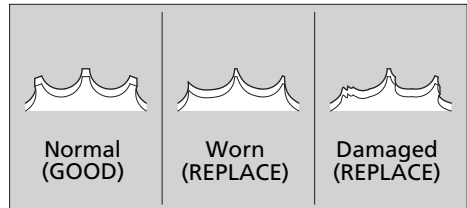

### NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.


### Cleaning and Lubricating

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with a lubricant designed specifically for use on O-ring chains.

#### Recommended lubricant:

Pro Honda HP Chain Lube or equivalent chain lube

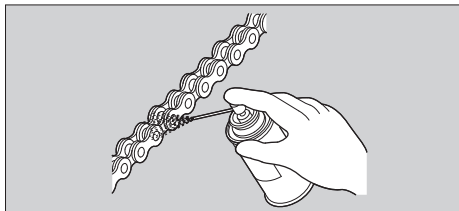

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as gasoline and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tires. Avoid applying excess chain lubricant to prevent spray onto your clothes and the motorcycle.

## Crankcase Breather

Service more frequently when riding in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube. [P. 75](#)


## Tires (Inspecting/Replacing)

### Checking the Air Pressure


Visually inspect your tires and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tires look low. Always check air pressure when your tires are cold.

### Inspecting for Damage

Inspect the tires for cuts, slits, or cracks that exposes fabric or cords, or nails or other foreign objects embedded in the side of the tire or the tread. Also inspect for bumps or bulges in the side walls of the tires.

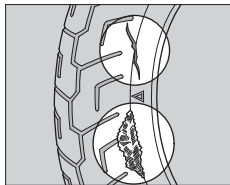


### Inspecting for Abnormal Wear

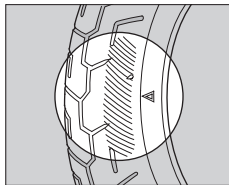

Inspect the tires for signs of abnormal wear on the contact surface.

### Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tires immediately. For your safety, you should replace the tires when the minimum tread depth is reached.

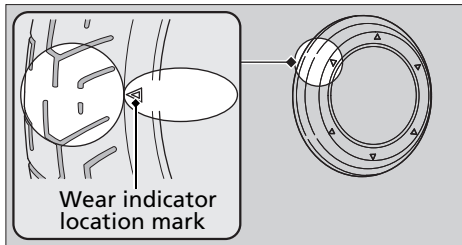

### **⚠ WARNING**

Riding on tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Have your tires replaced by your dealer. For recommended tires, air pressure and minimum tread depth, see “Specifications.”

➤ P. 122

Follow these guidelines whenever you replace tires.

- Use the recommended tires or equivalents of the same size, construction, speed rating, and load range.
- Have the wheel balanced with Honda Genuine balance weights or equivalent after the tire is installed.
- Do not install a tube inside a tubeless tire on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tires on this motorcycle. The rims are designed for tubeless tires, and during hard acceleration or braking, a tube-type tire could slip on the rim and cause the tire to rapidly deflate.

## **WARNING**

Installing improper tires on your motorcycle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

### Tire Service Life

The service life of your tires is dependent on many factors, including, but not limited to, riding habits, road conditions, vehicle loading, tire air pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to your regular inspections and maintenance, it is recommended that you have annual inspections performed once the tires reach 5 years old. It is also recommended that all tires be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

The last four digits of the TIN (tire identification number) indicate the date of manufacture.

### Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters located on the sidewall of the tire.


①      ②      ③

#### DOT XXXX XXXX 22 09

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.


- ① XXXX: Factory code
- ② XXXX: Tire type code
- ③ 22 09: Date of manufacture (week & year).  
Example: week 22 in year 09.

#### Tire Labeling Example

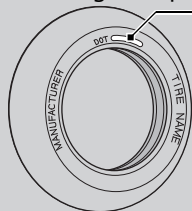

Tire identification number (TIN)

## Seat

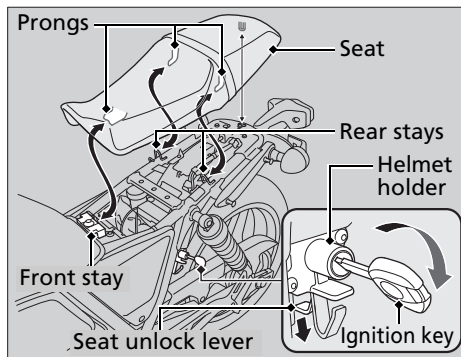

### Removal

1. Insert the ignition key into the helmet holder, and turn it clockwise.
2. Pull the seat unlock lever downward to unlock the seat.
3. Pull the seat back and up.

### Installation


1. Insert the front and rear prongs into the front and rear stays on the frame.
2. Push forward and down on the rear of the seat until it locks in place. Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when closed. Take care not to lock your key in the underseat compartment.

## Side Cover

The right side cover must be removed for the air cleaner maintenance.

The left side cover must be removed for the fuse maintenance.

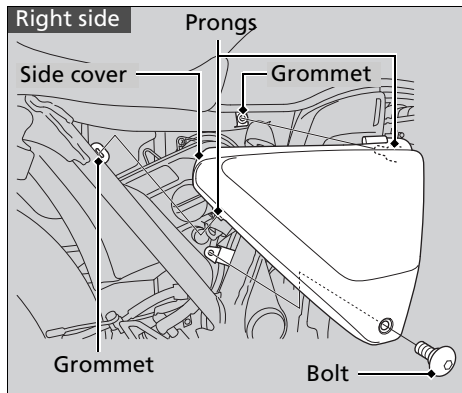

The right and left side covers can be removed in the same way.

### Removal

1. Remove the bolt.
2. Remove the prongs from the grommets.
3. Remove the side cover.

### Installation


Install the parts in the reverse order of removal.



## Clip


The clip must be removed to remove the battery.

### Removal

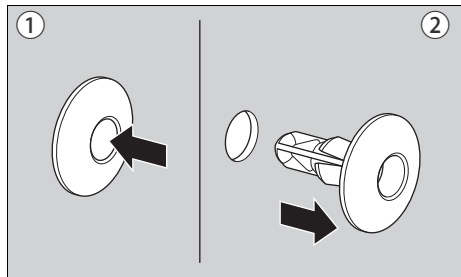


1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.

### Installation

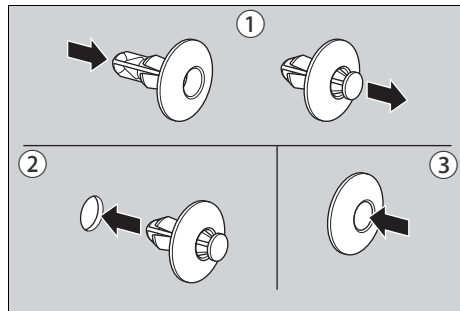

1. Push the bottom of the center pin.
2. Insert the clip into the hole.
3. Press down on the center pin to lock the clip.


## Battery

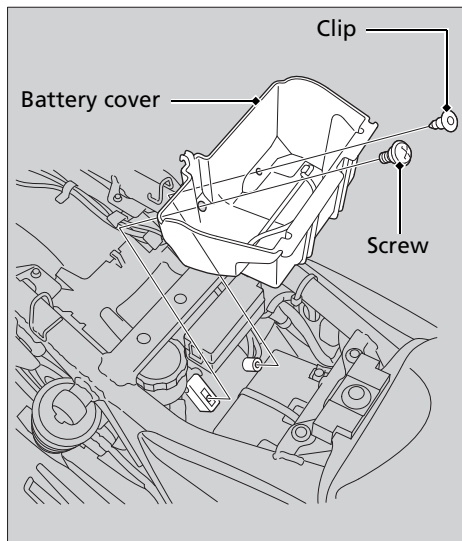

### Removal

Make sure the ignition switch is off.

1. Remove the seat. ► P. 53
2. Remove the tool kit.
3. Remove the screw and clip. ► P. 55
4. Remove the battery cover.

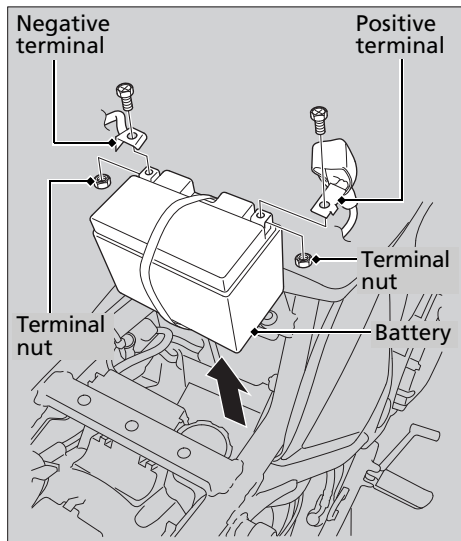

5. Disconnect the negative  $\ominus$  terminal lead from the battery.
6. Disconnect the positive  $\oplus$  terminal lead from the battery.
7. Remove the battery taking care not to drop the terminal nuts.

## Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

The clock will be reset to AM 1:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 43  
 "Battery Goes Dead." ➤ P. 93

## Checking Spark Plugs


For the recommended spark plugs, see “Specifications.” [▶ P. 122](#)

Use only the recommended type of spark plugs in the recommended heat range.

### NOTICE

Using spark plugs with an improper heat range can cause engine damage.

1. Disconnect the spark plug caps from the spark plugs.
2. Clean any dirt from around the spark plug bases.
3. Remove the spark plugs using a spark plug wrench.

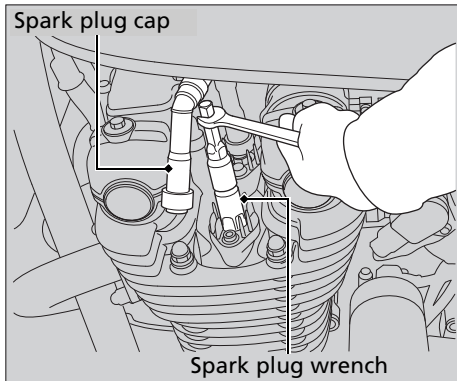


4. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
  - ▶ If the erosion or deposit is heavy, replace the plug.
  - ▶ Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

5. Check the spark plug gap using a wire-type feeler gauge.  
► If adjustment is necessary, bend the side electrode carefully.

**The gap should be:**

0.031 to 0.035 in (0.80 to 0.90 mm)

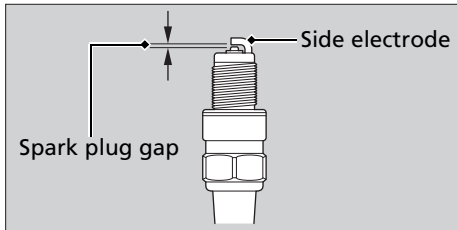

6. Make sure the plug washer is in good condition.  
7. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

8. Tighten the spark plug:
- If the old plug is good:
    - 1/5 turn after it seats
  - If installing a new plug, tighten it twice to prevent loosening:
    - a) First, tighten the plug:
      - NGK: 1/4 turn after it seats.
    - b) Then loosen the plug.
    - c) Next, tighten the plug again:
      - 1/5 turn after it seats.


**NOTICE**

Improperly tightened spark plugs can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

9. Reinstall the spark plug caps. Take care avoid pinching any cables or wires.

## Checking the Engine Oil

1. Park your motorcycle on its center stand on a firm, level surface.
2. If the engine is cold, idle the engine for 3 to 5 minutes.
3. Turn the ignition switch off, stop the engine and wait 2 to 3 minutes.
4. Check that the oil level is between the upper and lower level marks in the oil inspection window.
  - ▶ If required, clean the inspection window by turning the wiper.

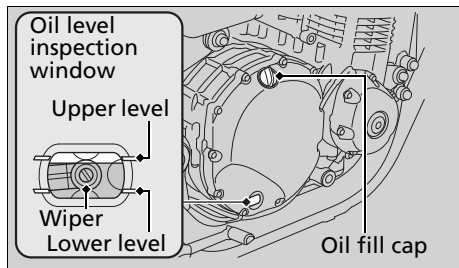

## Adding Engine Oil

---

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 46

1. Remove the oil fill cap. Add the recommended oil until it reaches the upper level mark.
  - Place your motorcycle on its centre stand on a firm, level surface when checking the oil level.
  - Do not overfill above the upper level mark.
  - Make sure no foreign objects enter the oil filler opening.
  - Wipe up any spills immediately.
2. Securely reinstall the oil fill cap.

### NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see “Maintenance Fundamentals.” ► P. 46

## Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your motorcycle serviced by your dealer.


Use a new Honda Genuine oil filter or equivalent specified for your model.

### NOTICE

Using the wrong oil filter can result in serious damage to the engine.


1. Park your motorcycle on its center stand on a firm, level surface.
2. If the engine is cold, idle the engine for 3 to 5 minutes.
3. Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
4. Place a drain pan under the drain bolt.

5. Remove the oil fill cap, drain bolt, and sealing washer to drain the oil.

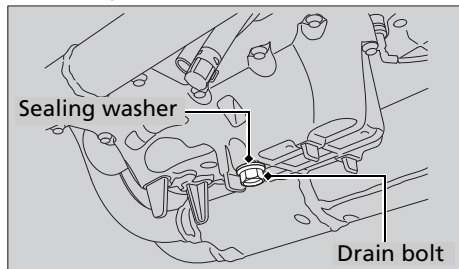



6. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
  - Discard the oil and oil filter at an approved recycling center.

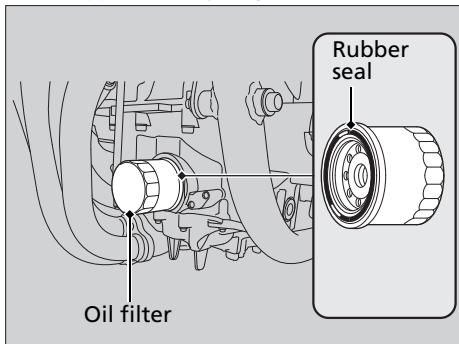

7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install a new oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m).

10. Fill the crankcase with the recommended oil (► P. 46) and install the oil fill cap.

**Required oil**

**When changing oil & engine oil filter:**

4.1 US qt (3.9 liters)

**When changing oil only:**

4.0 US qt (3.8 liters)

11. Check the oil level. ► P. 60
12. Check that there are no oil leaks.



## Changing/Cleaning Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the right side cover. [▶ P. 54](#)
2. Remove the attaching screws and air cleaner housing cover.
3. Pull out the air cleaner element and check it for any damage.
  - ▶ Blow away the remaining dust by applying compressed air from the outside of the air cleaner element.
  - ▶ Replace the air cleaner element if it is excessively dirty, torn or damaged.

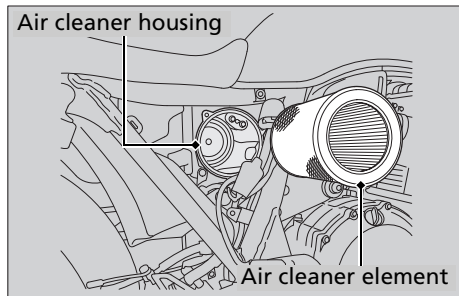
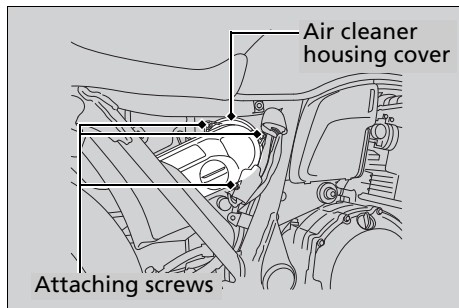


4. Thoroughly clean the inside of the air cleaner housing.
  5. Install the air cleaner element.
  6. Install the parts in the reverse order of removal.
-

## Checking Brake Fluid

1. Park your motorcycle on its center stand on a firm, level surface.
2. **Front** Check that the brake fluid reservoir is horizontal and that the fluid level is above the LOWER level mark.
3. **Rear** Remove the seat. ➔ P. 53
4. **Rear** Check that the brake fluid reservoir is horizontal and that the fluid level is between the LOWER level and UPPER level marks.

If the brake fluid level in either reservoir is below the LOWER level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear. If the brake pads are not worn, you most likely have a leak. Have your motorcycle inspected by your dealer.

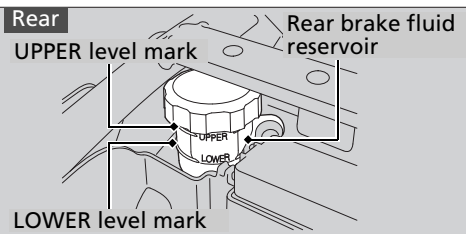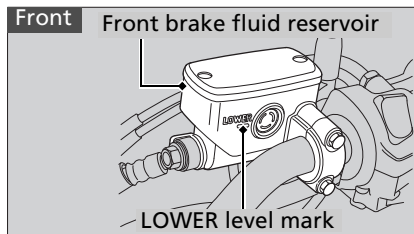

## Inspecting the Brake Pads

Check the condition of the brake pad groove wear indicators.

### Front

#### (CB1100)

The pads need to be replaced if a brake pad is worn to the bottom of the groove.

#### (CB1100A)

The pads need to be replaced if a brake pad is worn to the groove.

### Rear

The pads need to be replaced if a brake pad is worn to the groove.

### 1. Front


#### (CB1100)

Inspect the brake pads from in front of the brake caliper.

#### (CB1100A)

Inspect the brake pads from the bottom of the brake caliper.

► Always inspect both left and right calipers.

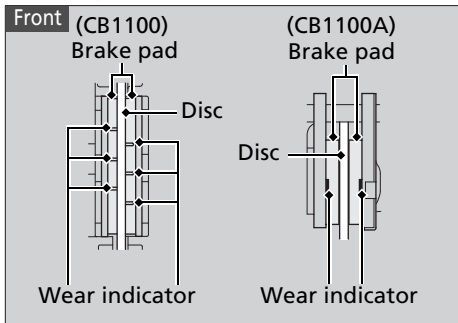


## Brakes/Clutch ► Checking the Clutch Fluid


2. **Rear** Inspect the brake pads from the rear right of the motorcycle.

If necessary have the pads replaced by your dealer.

Always replace both left and right brake pads at the same time.

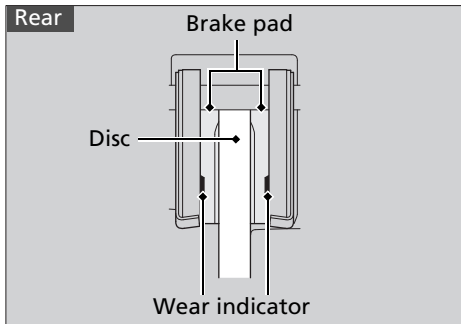


## Checking the Clutch Fluid

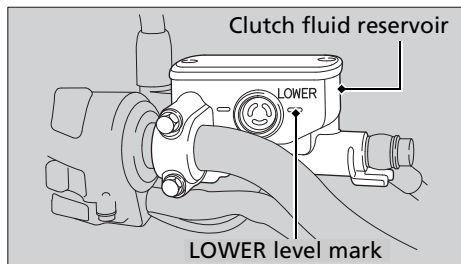

1. Park your motorcycle on its center stand on a firm, level surface.
2. Check that the clutch fluid reservoir cap is horizontal and that the fluid level is above the LOWER level mark.

If the fluid level is low or if you find fluid leaks, or deterioration or cracks in the hoses and fittings, have the clutch system serviced by your dealer.

## Side Stand

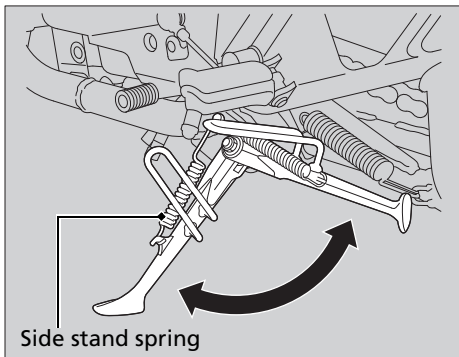

1. Park your motorcycle on its center stand on a firm, level surface.
2. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
3. Check the spring for damage or loss of tension.

4. Sit on the motorcycle, put the transmission in Neutral, and raise the side stand.
5. Start the engine, pull the clutch lever in, and shift the transmission into gear.
6. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your motorcycle inspected by your dealer.

## Inspecting the Drive Chain Slack

Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding.


Have the chain inspected by your dealer.

1. Park your motorcycle on its center stand on a firm, level surface.
2. Stop the engine. Place the transmission in Neutral.
3. Check the slack in the lower half of the drive chain midway between the sprockets.

### Drive chain slack:

1.0 to 1.4 in (25 to 35 mm)

- ▶ Do not ride your motorcycle if the slack exceeds 2.0 in (50 mm).

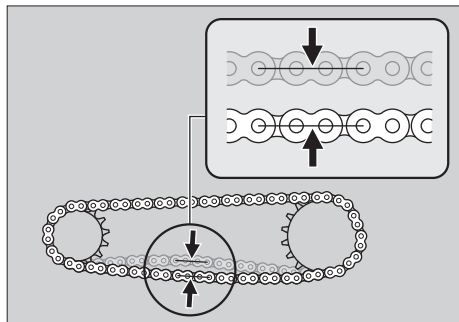


4. Rotate the rear wheel and check that the chain moves smoothly.
5. Inspect the sprockets. ➤ P. 47
6. Clean and lubricate the drive chain. ➤ P. 48



## Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Park your motorcycle on its center stand on a firm, level surface.
2. Stop the engine. Place the transmission in Neutral.
3. Loosen the rear axle nut.

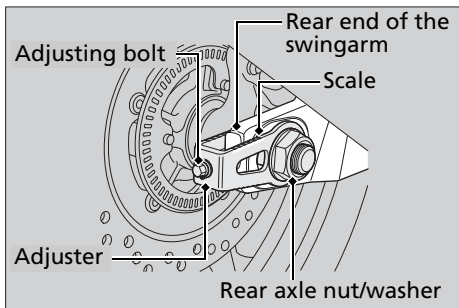

## Drive Chain ► Adjusting the Drive Chain Slack

4. Turn both adjusting bolts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counterclockwise to tighten the chain, or clockwise to provide more slack.  
Adjust the chain slack at a point midway between the drive sprocket and the rear wheel sprocket.  
Check the drive chain slack. [▶ P. 70](#)
5. Check rear axle alignment by making sure the rear end of the swingarm aligns with the corresponding scale on the adjuster.  
Both left and right swingarm ends should align with the same mark on the corresponding scale. If the axle is misaligned, turn the left or right adjusting bolt until the marks correspond.

6. Tighten the rear axle nut.

**Torque:** 83 lbf·ft (113 N·m, 11.5 kgf·m).

7. Tighten the adjusting bolts lightly.
8. Recheck drive chain slack.


If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

## Checking the Drive Chain Wear

Check the chain wear label when adjusting the drive chain. If the red zone on the label aligns with the rear end of the swingarm after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.


**Chain:** DID50ZVM2 or RK50LFOZ2

If necessary have the drive chain replaced by your dealer.

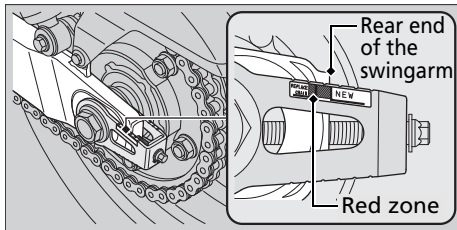

## Checking the Drive Chain Slider

Check the condition of the drive chain slider. The drive chain slider need to be replaced if a chain slider is worn to the wear limit line. If necessary have the drive chain slider replaced by your dealer.

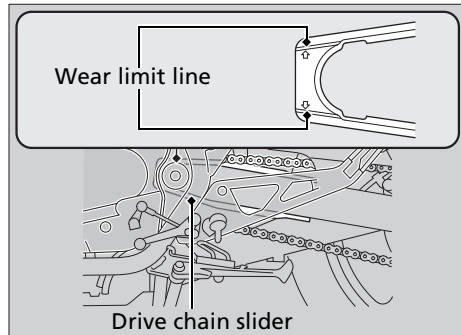


## Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly, close automatically, or if the cable is damaged, have the motorcycle inspected by your dealer.


### Freeplay at the throttle grip flange:

1/16 to 1/4 in (2 to 6 mm).

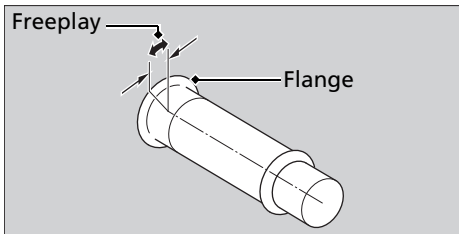

## Adjusting the Throttle Freeplay


1. Loosen the lock nut.
2. Turn the adjuster until the freeplay is 1/16 to 1/4 in (2 to 6 mm).
3. Tighten the lock nut and inspect the throttle action again.

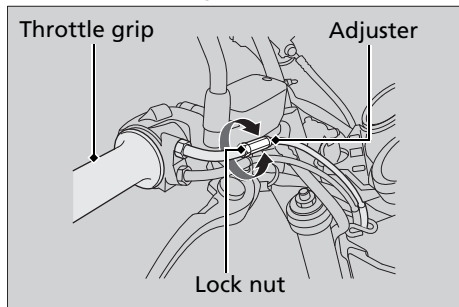

# Crankcase Breather


1. Place a drain pan under the crankcase breather tube.
2. Remove the crankcase breather tube plug and drain deposits.
3. Reinstall the plug.

Front

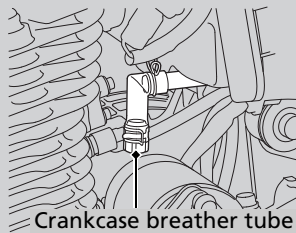

Crankcase breather tube plug

Rear

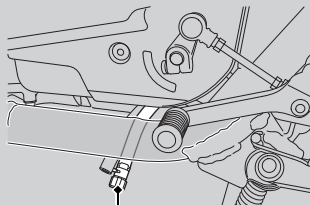

Crankcase breather tube plug

### Adjusting the Clutch and Brake Levers

You can adjust the distances between the tip of the clutch lever and handle grip, and between the tip of the brake lever and handle grip.


#### Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.

After adjustment, check that the levers operate correctly before riding.

#### NOTICE


Do not turn the adjuster beyond its natural limit.

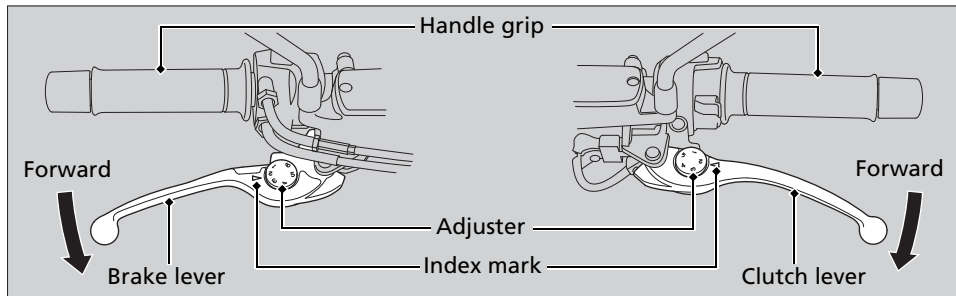

## Adjusting the Front Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is the 3rd groove from the top aligning with the top surface of the fork bolts.

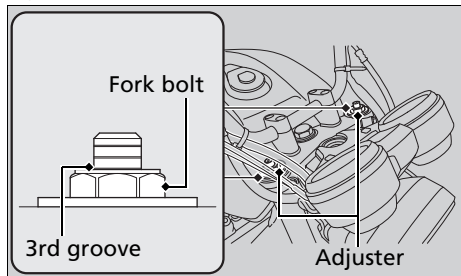


#### NOTICE

Do not turn the adjuster beyond its limits.  
Adjust both left and right forks to the same spring preload.

## Adjusting the Rear Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner and extension bar to turn the adjuster. Position 1 is for a decreased spring preload (soft), or turn to the position 3 to 5 for a increased spring preload (hard). The standard position is 2.

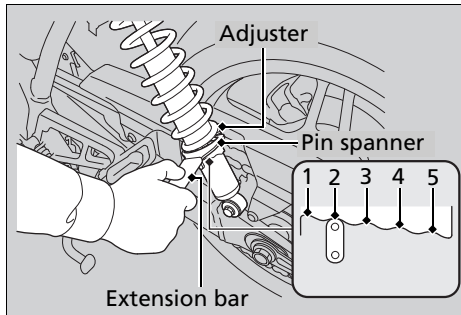


#### NOTICE

Do not turn the adjuster beyond its limits.  
Adjust both left and right shock absorbers to the same spring preload.




## Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Loosen the bolts and move the headlight case as necessary. Tighten the bolts after adjustment. Obey local laws and regulations.

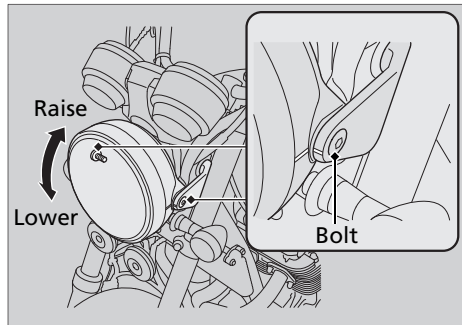

## Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

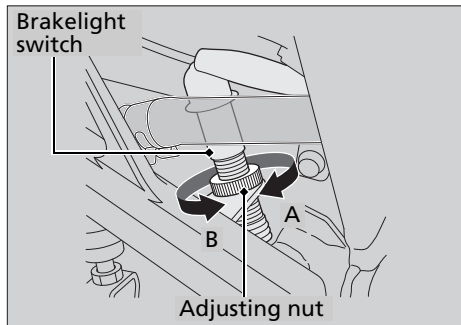

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 81	Burned-out Light Bulb .....	P. 93
<b>Overheating (High oil temperature indicator is on)</b> .....	P. 82	Blown Fuse .....	P. 97
<b>Warning Indicators on or Flashing</b> .....	P. 83		
Low Oil Pressure Indicator.....	P. 83		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL) .....	P. 83		
ABS (Anti-lock Brake System) Indicator			
(CB1100A only) .....	P. 84		
<b>Tire Puncture</b> .....	P. 85		
<b>Electrical Trouble</b> .....	P. 93		
Battery Goes Dead.....	P. 93		

## Engine Will Not Start


### I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ [P. 28](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### I Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position ➤ [P. 28](#)
- Check for a blown fuse ➤ [P. 97](#)
- Check for a loose battery connection or battery terminal corrosion ➤ [P. 44](#)
- Check the condition of the battery ➤ [P. 93](#)

If the problem continues, have your motorcycle inspected by your dealer.

## Overheating (High oil temperature indicator is on)

The high oil temperature indicator may come on when idling or riding at very low speeds for a long time at high air temperature. If the indicator comes on while idling or riding, stop the engine and let it cool down. If the indicator remains on or lights again, take the motorcycle to your dealer as soon as possible.

### NOTICE

Idling or riding with the indicator on may cause serious engine damage.

### Low Oil Pressure Indicator

---

If the low oil pressure indicator comes on, pull safely to the side of the road and stop the engine.

#### NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary. ➤ P. 60
2. Start the engine.
  - ▶ Only continue riding if the low oil pressure indicator goes off.

Rapid acceleration may momentarily cause the low oil pressure indicator to come on, especially if the oil is at or near the low level. If the low oil pressure indicator stays on when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your motorcycle may have a leak or another serious problem. Have your motorcycle inspected by your dealer.

### PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

---

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your motorcycle inspected by your dealer as soon as possible.

## ABS (Anti-lock Brake System) Indicator (CB1100A only)

---

If the indicator operates in one of the following ways, you may have a serious problem with the brake system. Reduce your speed and have your motorcycle inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the ignition switch is in the ON position.
- Indicator does not go off at speeds above 6 mph (10 km/h).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while your motorcycle is lifted off the ground. In this case, turn the ignition switch off and then on again. The ABS indicator will go off after your speed reaches 19 mph (30 km/h).

## Tire Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tire inspected/replaced by your dealer.

### Emergency Repair Using a Tire Repair Kit

---

If your tire has a minor puncture, you can make an emergency repair using a tubeless tire repair kit.

Follow the instructions provided with the emergency tire repair kit.

Riding your motorcycle with a temporary tire repair is very risky. Do not exceed 30 mph (50 km/h). Have the tire replaced by your dealer as soon as possible.

### **WARNING**

Riding your motorcycle with a temporary tire repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire is permanently repaired or replaced.

### Removing Wheels

---

Follow these procedures if you need to remove a wheel in order to repair a puncture.


## (CB1100A)

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

### Front Wheel

#### Removal


1. Park your motorcycle on its center stand on a firm, level surface.
2. Cover both sides of the front wheel and brake caliper with protective tape or cloth.

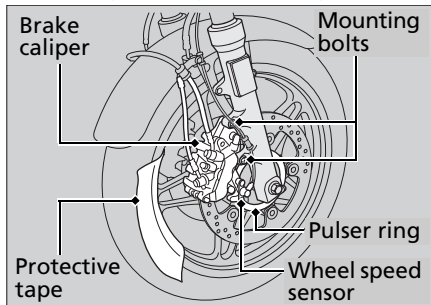


3. On the right side, remove the mounting bolts and remove the brake caliper.
4. On the left side, remove the mounting bolts and remove the brake caliper.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - Do not pull the brake lever (CB1100A: the brake lever and brake pedal) while the brake caliper is removed.
  - Take care to prevent the brake caliper from scratching the wheel during removal.



5. Remove the front axle bolt.
6. Loosen the right axle pinch bolts.
7. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.

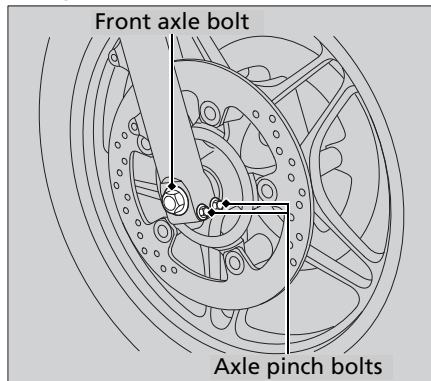


8. Loosen the left axle pinch bolts.
9. On the left side, withdraw the front axle shaft, and remove the side collars and wheel.

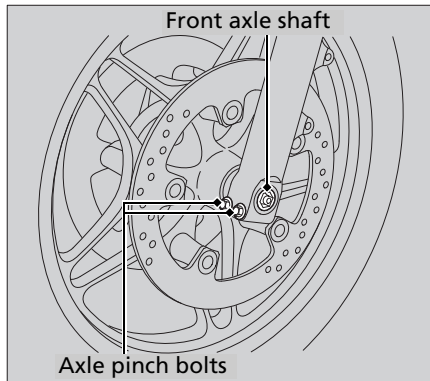

## Installation

1. Attach the side collars to the wheel.
2. On the left side, place the wheel between the fork legs and insert the lightly greased front axle shaft to the end, through the left fork leg and wheel hub.
3. Align the end of the front axle shaft with the surface of the fork leg.

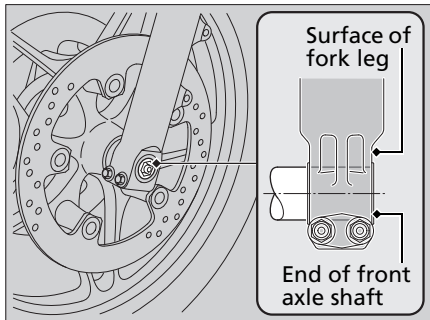

4. Tighten the left axle pinch bolts to hold the axle.
5. Tighten the axle bolt.

**Torque:** 43 lbf·ft (59 N·m, 6.0 kgf·m).

6. Loosen the left axle pinch bolts.
7. Tighten the right axle pinch bolts.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

8. Install the right brake caliper and tighten the mounting bolts.

**Torque:** 23 lbf·ft (31 N·m, 3.2 kgf·m).

9. Install the left brake caliper and tighten the mounting bolts.

**Torque:** 23 lbf·ft (31 N·m, 3.2 kgf·m).

- Take care to prevent the brake caliper from scratching the wheel during installation.
- Use new mounting bolts when installing the brake caliper.

**NOTICE**

When installing the brake calipers into position on the fork legs, carefully fit the brake disc between the pads to avoid scratching them.

10. Lower the front wheel on the ground.
11. Apply the brake lever (CB1100A: the brake lever and brake pedal) several times. Then, pump the fork several times.

12. Retighten the left axle pinch bolts.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).


13. Remove the protective tape or cloth.
14. Raise the front wheel off the ground again, and check that the wheel rotates freely after you release the brake.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.


## Rear Wheel

### Removal

1. Park your motorcycle on its center stand on a firm, level surface.
2. Loosen the rear axle nut and adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut/washer.

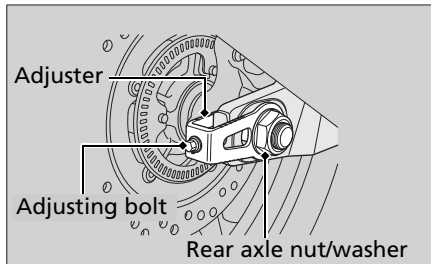

4. Remove the drive chain from the rear wheel sprocket by pushing the rear wheel forward.
5. Remove the rear axle shaft, adjusters, and adjusting bolts.

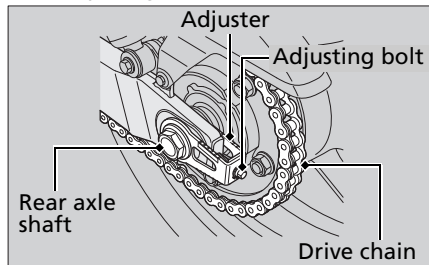

6. Remove the brake caliper bracket and rear wheel, side collars.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - Do not push the brake pedal while the brake caliper is removed.


### Installation

1. To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

#### NOTICE

When installing the brake calipers into position, carefully fit the brake disc between the pads to avoid scratching them.

2. Make sure that the lug on the swingarm is located in the slot on the brake caliper bracket.

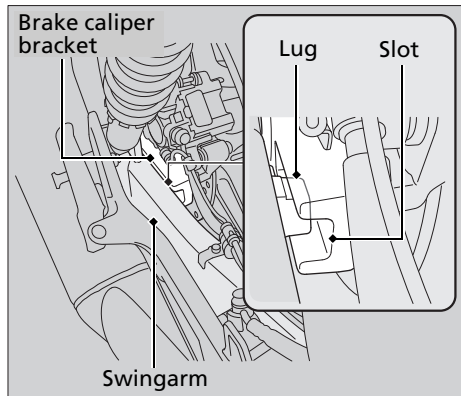

## Tire Puncture ► Removing Wheels

3. Adjust the drive chain. [► P. 71](#)
4. Install the rear axle nut/washer and tighten the rear axle nut.

**Torque:** 83 lbf·ft (113 N·m, 11.5 kgf·m).

5. After installing the wheel, apply the brake pedal several times, then recheck the disc for caliper holder to disc clearance. Do not operate the motorcycle without adequate clearance.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

### Battery Goes Dead

---

Charge the battery using a motorcycle battery charger.

Remove the battery from the motorcycle while charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

If the battery does not recover after recharging, contact your dealer.

#### NOTICE

Jump starting using an automobile battery is not recommended, as this can damage your motorcycle's electrical system.

### Burned-out Light Bulb

---

Follow the procedure below to replace a burned-out light bulb.



Turn the ignition switch to the OFF or LOCK position.

Allow the bulb to cool before replacing it. Do not use bulbs other than those specified.

Check the replacement bulb for correct operation before riding.

For the light bulb wattage, see "Specifications." ➔ [P. 123](#)

## Headlight Bulb

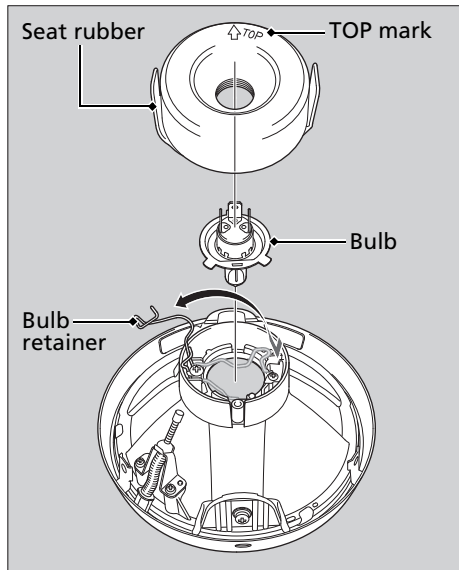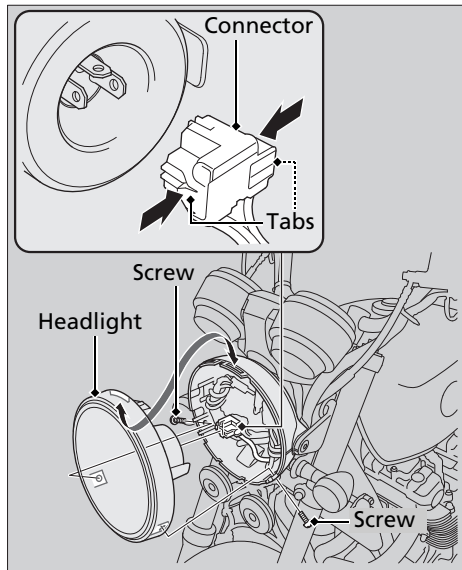





1. Remove the screws from the headlight case.
2. Gently pull the lower end of the headlight forward and remove the headlight.
3. Disconnect the connector by pressing tabs.
4. Remove the seat rubber.
5. Press the bulb retainer down and pull out the bulb without turning it.
6. Install a new bulb and parts in the reverse order of removal.
  - Install the seat rubber with its "TOP" mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.

## ► Brake/Tail Light Bulb

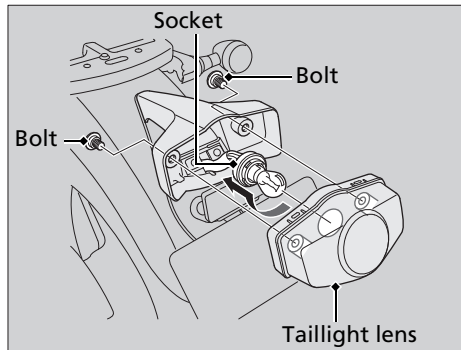


1. Remove the taillight lens by removing the bolts.
2. Turn the socket counterclockwise, then pull it out.

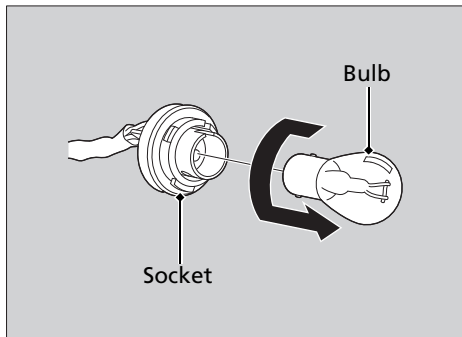

3. Slightly press the bulb and turn it counterclockwise.
4. Install a new bulb and parts in the reverse order of removal.

## Front/Rear Turn Signal Bulb

1. Remove the screw.
2. Remove the turn signal lens and lens packing.
3. Slightly press the bulb and turn it counterclockwise.

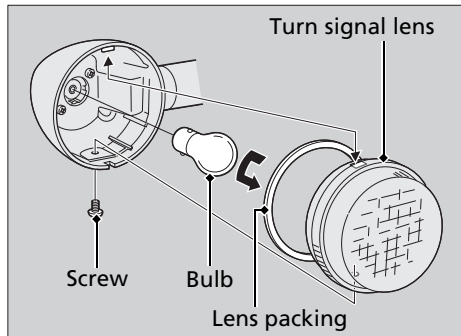


4. Install a new bulb and parts in the reverse order of removal.

## Blown Fuse


Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 45

### Fuse Box Fuses

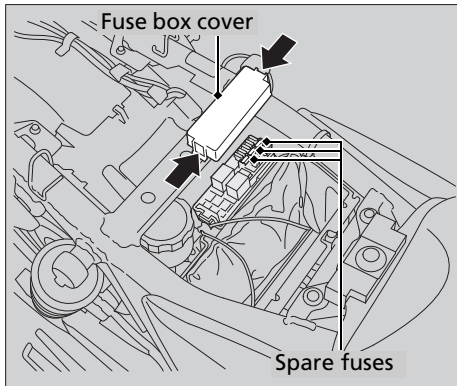

1. Remove the seat. ► P. 53
2. Remove the fuse box cover.
3. Using the fuse puller provided in the tool kit (► P. 32), pull the fuses out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the seat.

## Main Fuse & FI Fuse

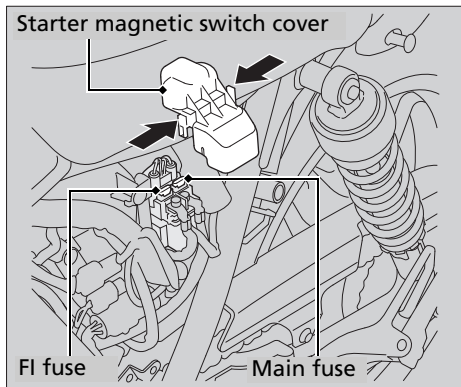

1. Remove the left side cover. ► P. 54
2. Remove the starter magnetic switch cover.
3. Using the fuse puller provided in the tool kit (► P. 32), pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
  - Spare fuses are provided in the fuse box. ► P. 97
4. Reinstall parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

# Information

<b>Keys</b> .....	P. 100
<b>Instruments, Controls, &amp; Other Features</b> ...	P. 101
<b>Caring for Your Motorcycle</b> .....	P. 102
<b>Storing Your Motorcycle</b> .....	P. 104
<b>Transporting Your Motorcycle</b> .....	P. 105
<b>You &amp; the Environment</b> .....	P. 106
<b>Vehicle Identification Number</b> .....	P. 107
<b>Emission Control Systems</b> .....	P. 108
<b>Catalytic Converter</b> .....	P. 114
<b>Oxygenated Fuels</b> .....	P. 115
<b>Authorized Manuals</b> .....	P. 116
<b>Warranty Coverage and Service</b> .....	P. 117

<b>Honda Contacts</b> .....	P. 118
<b>USA Reporting Safety Defects</b> .....	P. 120

## Keys

### Ignition key

Be sure to record the key number provided with the key number plate. Store the spare key and recorded key number in a safe location.

To make a duplicate, take the spare key or the key number to a locksmith.

If you lose all keys and the key number, the ignition switch assembly will probably have to be removed by your dealer to determine the key number.

A metal key holder may cause damage to the area surrounding the ignition switch.

# Instruments, Controls, & Other Features

## Ignition Switch

The headlight is always on when the ignition switch is on. Leaving the ignition switch on with the engine stopped will drain the battery. Do not turn the key while riding.

## Engine Stop Switch

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe. If you stop the engine using the engine stop switch, turn the ignition switch off. Failing to do so will drain the battery.

## Odometer

The display locks at 999,999 when the readout exceeds 999,999.

## Tripmeter

The tripmeter A and B return to 0.0 when the readout exceeds 999.9.

## Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located under the seat.

[▶ P. 32](#)

## Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the motorcycle falls over. To reset the sensor, you must turn the ignition switch to OFF and back to the ON position before the engine can be restarted.

## Caring for Your Motorcycle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean motorcycle makes it easier to spot potential problems.

In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Always wash your motorcycle thoroughly after riding on coastal or treated roads.

### Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your motorcycle thoroughly using a garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
  - ▶ Clean the headlight lens, panels, and other plastic components with extra care to avoid scratching them.

Avoid directing water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your motorcycle with plenty of clean water and dry with a soft, clean cloth.
4. After the motorcycle dries, lubricate any moving parts.
  - ▶ Make sure that no lubricant spills onto the brakes or tires. Brake discs or pads contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the motorcycle.
6. Apply a coat of wax to prevent corrosion.
  - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your motorcycle.Keep the wax clear of the tires and brakes.



## Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
  - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
- Do not direct water at the muffler:
  - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
  - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the seat:
  - ▶ Water in the under seat compartment can damage your documents and other belongings.
- Do not direct water at the air cleaner:
  - ▶ Water in the air cleaner can prevent the engine from starting.

- Do not direct water near the headlight:
  - ▶ Any condensation inside the headlight should dissipate after a few minutes of running the engine.

## Aluminum Components

Aluminum will corrode from contact with dirt, mud, or road salt. Clean aluminum parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

## Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.

## Storing Your Motorcycle

- Avoid getting gasoline, brake fluid, or detergents on the instruments, panels, or headlight.

### Exhaust Pipe and Muffler

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust. To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel. If necessary, remove heat stains by using a commercially available fine texture compound. Then rinse by the same manner as removing mud or dust.

#### NOTICE

Even though the exhaust is made of stainless steel, it can become stained. Remove all marks and blemishes as soon as they are noticed.

## Storing Your Motorcycle

If you store your motorcycle outdoors, you should consider using a full-body motorcycle cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your motorcycle and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. [▶ P. 48](#)
- Place your motorcycle on its center stand and position a block so that both tires are off the ground.
- After rain, remove the body cover and allow the motorcycle to dry.
- Remove the battery ([▶ P. 56](#)) to prevent discharge. Charge the battery in a shaded, well-ventilated area.
  - ▶ If you leave the battery in place, disconnect the negative  $\ominus$  terminal to prevent discharge.

After removing your motorcycle from storage, inspect all maintenance items required by the Maintenance Schedule.

**USA** For more information about storage, refer to the Honda Winter Storage Guide, available from your dealer.

## Transporting Your Motorcycle

If your motorcycle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your motorcycle with a wheel or wheels on the ground.

### **NOTICE**

Towing your motorcycle can cause serious damage to the transmission.

## You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect the environment.

### Choose Sensible Cleaners

Use a biodegradable detergent when you wash your motorcycle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.

### Recycle Wastes



Put oil and other toxic wastes in approved containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area, and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash, or pour it down a drain or on the ground. Used oil, gasoline, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.


## Vehicle Identification Number

The VIN and engine serial numbers uniquely identify your motorcycle and are required in order to register your motorcycle. They may also be required when ordering replacement parts. The VIN is stamped on the right side of the steering head and also appears on the Safety Certification Label attached to the left side of the frame.

The engine number is stamped on top of the crankcase.

You should record these numbers and keep them in a safe place.

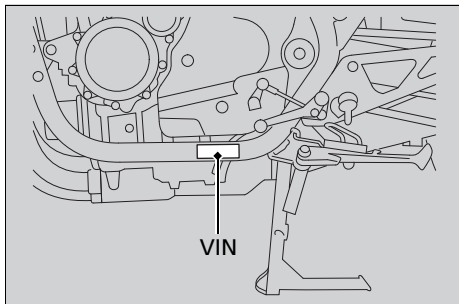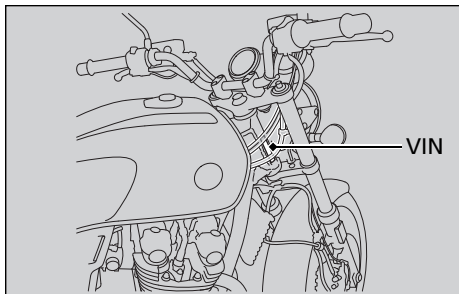

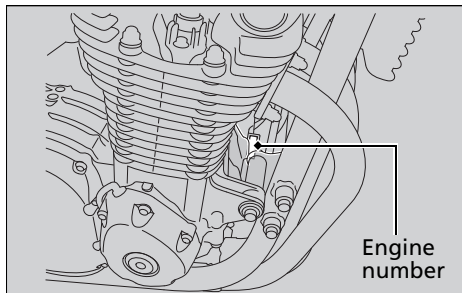

## Emission Control Systems

Your motorcycle engine emits combustion byproducts, including carbon monoxide (CO), oxides of nitrogen (NOx), and hydrocarbons (HC). Gasoline evaporation also emits hydrocarbons. Controlling the production of NOx, CO, and HC is important for the environment.

## Exhaust Emission Requirements

The U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Environment Canada (EC) require that your motorcycle comply with applicable exhaust, crankcase, and fuel permeation emission standards during its useful life, when operated and maintained according to the instructions provided.


CARB also requires that your motorcycle comply with applicable evaporative emission requirements during its useful life, when operated and maintained according to the instructions provided.

Compliance with the terms of the Distributor's Warranties for Honda Motorcycle Emission Control Systems is necessary in order to maintain a valid emissions system warranty (USA only). The Vehicle Emission Control Information label is located under the seat.

➤ P. 53


**USA**

**Vehicle emission control information label**

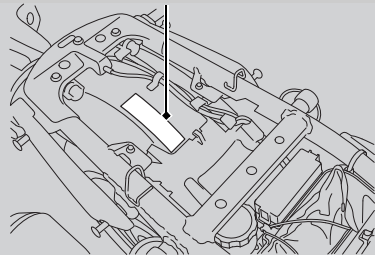

**Canada**

**Vehicle emission control information label**

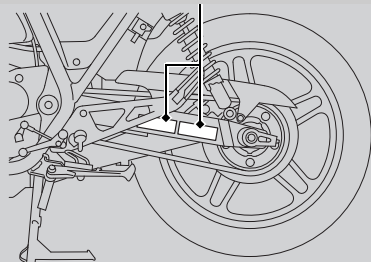

### Noise Emission Requirements

The EPA requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of purchase when operated and maintained according to the instructions provided.

### Exhaust Emission Control System

The exhaust emission control system includes the following components that should not need adjustment, although periodic inspection by your Honda dealer is recommended.

#### ■ PGM-FI System

The PGM-FI (programmed fuel injection) system uses sequential multiport fuel injection, and is comprised of air intake, engine control, fuel control, and exhaust control subsystems. The engine control module (ECM) uses sensors to determine how much air enters the engine, and then controls how much fuel to inject.

#### ■ Ignition Timing Control System

The ignition timing control system adjusts the ignition timing to reduce the amount of HC, CO, and NOx produced.



### ■ Secondary Air Injection System

The secondary air injection system adds filtered air into the exhaust gas to help improve emission control performance.

### ■ Catalytic Converter

The exhaust system contains a catalytic converter. Catalytic converter uses a catalyst to convert most of the harmful exhaust gas compounds into harmless compounds.

### Evaporative Emission Control System

50 STATE type (meets California)

An evaporative emissions control system uses a canister filled with charcoal to absorb fuel vapor from the fuel tank while the engine is off. The vapor is drawn into the engine and burned while riding.

### Crankcase Emissions Control System

The positive crankcase ventilation system prevents gases that build up in the engine's crankcase from being released into the atmosphere. The gases are drawn into the engine and burned while riding.

### Fuel Permeation Emission Control

The fuel tank, fuel hoses, and fuel vapor charge hoses use fuel permeation control technologies to prevent fuel vapor emissions.

Tampering with these components to reduce or defeat the effectiveness of the fuel permeation technologies is prohibited.

### Noise Emission Control System

#### ■ TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:

U. S. federal law prohibits, and Canadian provincial laws may prohibit, the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

**AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE FOLLOWING ACTS:**

1. Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

**Problems Affecting Motorcycle Exhaust Emissions**

Have your motorcycle inspected and repaired by your dealer if you experience any of the following symptoms:

- Hard starting or stalling after starting
- Rough idling
- Misfiring or backfiring during acceleration
- Poor engine performance and poor fuel economy

## Catalytic Converter

This motorcycle is equipped with an three-way catalytic converter. The catalytic converter contain precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gasses into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your motorcycle's catalytic converter.

- Always use unleaded gasoline. Leaded gasoline will damage the catalytic converter.
- Keep the engine in good running condition. A poorly running engine can cause the catalytic converter to overheat causing damage to the converter or the motorcycle.
- If your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine. Have your motorcycle serviced as soon as possible.

## Oxygenated Fuels

Some conventional fuels blended with alcohol or an ether compound are available in some locales to help reduce emissions to meet clean air standards. These gasolines are collectively referred to as oxygenated fuels. If you plan to use oxygenated fuel, check that it is unleaded and meets the minimum octane rating and blend requirement.

The following fuel blends are EPA-approved and have been approved for use in your motorcycle:

- Ethanol (ethyl alcohol) 10% by volume (max). Gasoline containing ethanol may be marketed under the name “Gasohol.”
- MTBE (Methyl Tertiary Butyl Ether) 15% by volume (max)
- Methanol (methyl alcohol) 5% by volume (max) that contain cosolvents and corrosion inhibitors to protect the fuel system. Never use a blend containing more than 5%.

If you accidentally fill your fuel tank with an oxygenated fuel containing higher percentages, you may experience performance problems. To resolve the problem, have your dealer drain the fuel tank and replace with the correct fuel. Fuel system or performance problems resulting from the use of an oxygenated fuel containing higher percentages are not covered by your warranty.

### NOTICE

Improper use of oxygenated fuels can damage metal, rubber, and plastic parts of your fuel system. Oxygenated fuel can also damage paint. Damage caused by spilled fuel is not covered by warranty.

If you notice any undesirable operating symptoms or performance problems, try a different brand of gasoline.

## Authorized Manuals

The Service Manual used by your authorized Honda dealer is available from your Honda dealer or Helm, Inc.

(USA only, Canada: See your Honda dealer to order authorized manuals.)

Also available, but not necessary to service your model, is the Honda Common Service Manual, which explains basic service information for various systems on Honda motorcycles, scooters, ATV's, MUVs, and PWCs.

These Honda manuals are written for the professional technician. However, if you possess the proper tools, observe the safety standards, and are mechanically capable, you should find them easy to use.

Special Honda tools are necessary for some procedures.

**Order On-Line: [www.helminc.com](http://www.helminc.com)**

**Order Toll Free: 1-888-CYCLE93**

(1-888-292-5393)

(NOTE: For Credit Card Orders Only)

Monday – Friday 8:00 AM – 6:00 PM EST

Publication Item No.	Description
61MGC00	2013 CB1100/A Service Manual
61CM002	Common Service Manual
31MGC600	2013 CB1100/A Owner's Manual

## Warranty Coverage and Service

### Coverage

Your new Honda is covered by the following warranties:

- Motorcycle Limited Warranty
- Emission Control System Warranty
- Noise Control Warranty

The responsibilities, restrictions, and exclusions that apply to these warranties are explained in the Warranties Booklet given to you by your Honda dealer at the time of purchase. Always keep your Honda owner's card with your Warranties Booklet.

**Canada** Please refer to the Warranty Booklet posted on our web site at [www.honda.ca](http://www.honda.ca).

It is important to realize that your warranty applies only to defects in material or

workmanship of your Honda. Your warranty coverage does not apply to the normal wear and deterioration associated with use of the motorcycle.

Your warranty coverage is not voided if you perform your own maintenance. However, failures that occur due directly to improper maintenance are not covered by these warranties.

You can extend almost all of your warranty coverage through the Honda Protection Plan (USA only). For more information, see your Honda dealer.

### Service

Please remember that maintenance recommended in the Maintenance Schedule is not included in your warranty coverage.

## Honda Contacts

If you believe you have a problem with your motorcycle, call the service department of your Honda dealer. Make an appointment for an inspection and diagnosis. You will be asked to authorize that inspection, and your dealer will return the results of the inspection. If a problem exists and is covered under warranty, your dealer will perform the warranty repairs.

If you have any questions about your warranty coverage or the nature of the repair, talk to the Service Manager of your Honda dealer.

If a misunderstanding occurs and you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If you are still not satisfied, contact the owner of the dealership or their designated representative.

## Honda Contacts

### American Honda Motor Co., Inc.

If you wish to contact Honda directly to comment on your experiences with your motorcycle or with your dealer, please send your comments to the following address:

Motorcycle Division,  
American Honda Motor Co., Inc.,  
P.O. Box 2200, Torrance,  
CA 90509-2200  
Mailstop: 100-4C-7B,  
Telephone: (866) 784-1870.

**Canada** Honda Canada Inc., Customer Relation Dept, 180 Honda Boulevard, Markham, Ontario L6C 0H9, telephone: (888) 946-6329, facsimile: (877) 939-0909

Please include the following information in your letter:

- Name, address, and telephone number



- Product model, year, and VIN
- Date of purchase
- Dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

### Your Honda Dealer

The service department of your Honda dealer offers trained personnel to perform regular maintenance and most repairs. It has the latest available service information from Honda and also handles warranty inspections and repairs.

The parts department offers Honda Genuine Parts, Pro Honda products, Honda Genuine Accessories (USA only), and Honda accessories and products (Canada only) that provide the same quality that went into your motorcycle.

The sales department offers the Honda Protection Plan to extend almost all of your warranty coverage (USA only)

Your Honda dealer can also supply information about, riding events, and information about safety training available in your local area, and the Honda Rider's Club of America (USA only).

### Honda Rider's Club of America (HRCA)

The Honda Rider's Club of America (HRCA) sponsors local riding chapters at Authorized Honda Dealerships across the country. You can log on to the HRCA Clubhouse website for more information at [www.hrca.honda.com](http://www.hrca.honda.com).

## USA Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at: 1-888-327-4236

(TTY: 1-800-424-9153); go to

*<http://www.safercar.gov>*;

or write to:

Administrator, NHTSA,  
1200 New Jersey Avenue, SE.,  
Washington, DC 20590.

You can also obtain other information about motor vehicle safety from:

*<http://www.safercar.gov>*.

# Specifications

## ■ Main Components

Type	SC65	
Overall length	87.0 in (2,210 mm)	
Overall width	32.9 in (835 mm)	
Overall height	44.5 in (1,130 mm)	
Wheelbase	58.7 in (1,490 mm)	
Minimum ground clearance	4.92 in (125 mm)	
Caster angle	27° 00'	
Trail	4.5 in (114 mm)	
Curb weight	<b>CB1100</b>	540 lb (245 kg)
	<b>CB1100A</b>	549 lb (249 kg)
Maximum weight capacity*1	351 lb (159 kg)	
Passenger capacity	Rider and 1 passenger	
Minimum turning radius	8.86 ft (2.70 m)	

\*1 Including rider, passenger, all luggage, and accessories

Displacement	69.5 cu-in (1,140 cm <sup>3</sup> )	
Bore x stroke	2.89 x 2.65 in (73.5 x 67.2 mm)	
Compression ratio	9.5:1	
Fuel	Unleaded gasoline Recommended fuel octane number: Pump Octane Number (PON) 86 or higher.	
Tank capacity	3.86 US gal (14.6 liters)	
Battery	YTZ14S	
	12V-11.2Ah (10 HR)	
Gear ratios	1st	3.166
	2nd	2.062
	3rd	1.545
	4th	1.250
	5th	1.111
Reduction ratios (primary / final)	1.652 / 2.166	

## Specifications

### ■ Service Data

Tire size	Front	110/80R18M/C 58V
	Rear	140/70R18M/C 67V
Tire type	Radial, tubeless	
Recommended Tires	Front	BRIDGESTONE BT-54F RADIAL G DUNLOP D205F
	Rear	BRIDGESTONE BT-54R RADIAL G DUNLOP D205
Tire air pressure	Front	36 psi (250 kPa, 2.50 kgf/cm <sup>2</sup> )
	Rear	42 psi (290 kPa, 2.90 kgf/cm <sup>2</sup> )
Minimum tread depth	Front	0.06 in (1.5 mm)
	Rear	0.08 in (2.0 mm)
Spark plugs	(standard)	LMAR8A-9S (NGK)
Spark plug gap	0.031 to 0.035 in (0.80 to 0.90 mm)	
Idle speed	1,100 ± 100 rpm	

Recommended engine oil	API Service Classification SG or higher except oils labeled as energy conserving or resource conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil (USA & Canada) or Honda 4-stroke oil, or an equivalent motorcycle oil	
	After draining	4.0 US qt (3.8 liters)
Engine oil capacity	After draining & engine oil filter change	4.1 US qt (3.9 liters)
	After disassembly	5.2 US qt (4.9 liters)
	Recommended brake (clutch) fluid	Honda DOT 4 Brake Fluid

Recommended drive chain lubricant	Pro Honda HP Chain Lube	
Drive chain slack	1.0 to 1.4 in (25 to 35 mm)	
Standard drive chain	DID50ZVM2 or RK50LF0Z2	
	No. of links	110
Standard sprocket sizes	Engine sprocket	18T
	Rear wheel sprocket	39T

### ■ Bulbs

Headlight	12V-60/55W	
Brake/Tail light	12V-21/5W	
Front turn signal lights	12V-21W x 2	
Rear turn signal lights	12V-21W x 2	

### ■ Fuses

Main fuse	30A	
Other fuses	<b>CB1100</b>	20A, 10A
	<b>CB1100A</b>	30A, 20A, 10A

### ■ Torque Specifications

Engine oil drain bolt	22 lbf·ft (30 N·m, 3.1 kgf·m)
Oil filter	19 lbf·ft (26 N·m, 2.7 kgf·m)
Front wheel axle bolt	43 lbf·ft (59 N·m, 6.0 kgf·m)
Front wheel brake caliper mounting bolts	23 lbf·ft (31 N·m, 3.2 kgf·m)
Front wheel axle pinch bolts	19 lbf·ft (26 N·m, 2.7 kgf·m)
Rear wheel axle nut	83 lbf·ft (113 N·m, 11.5 kgf·m)

## Information Record

VIN	
Engine No.	
Color Label & Code	
Owner's Name	
Address	
City/State	
Phone	
Dealer's Name	
Address	
City/State	
Phone	
Service Manager	

- A**
- ABS (Anti-lock Brake System)
    - Indicator ..... 24, 84
  - Accessories..... 14
  - Air Cleaner ..... 64
  - Authorized Manuals..... 116
- B**
- Battery ..... 43, 56
  - Brakelight Switch..... 79
- Brakes**
- Fluid..... 47, 66
  - Pad Wear ..... 67
- Braking** ..... 10
- Bulb**
- Brake/Tail Light ..... 95
  - Front Turn Signal..... 96
  - Headlight..... 94
  - Rear Turn Signal..... 96
- C**
- Caring for Your Motorcycle ..... 102
  - Clock ..... 20
- Clutch**
- Fluid ..... 68
- Color Label**.....42
- Combined ABS**..... 11
- Crankcase Breather** ..... 75
- D**
- Digital Clock Adjustment..... 21
  - Drive Chain ..... 47, 70
  - Drive Chain Slider..... 73
- E**
- Electrical Trouble..... 93
  - Emission Control Systems..... 108
- Engine**
- Number ..... 107
  - Oil ..... 46, 60
  - Oil Filter..... 62
  - Overheats..... 82
  - Starting ..... 28
  - Stop Switch ..... 26, 101
  - Stopping ..... 101
- Environment**..... 106

<b>F</b>	
Flooded Engine .....	28
Front Brake Lever Adjustment .....	76
Front Suspension .....	77
<b>Fuel</b>	
Recommended .....	30
Remaining .....	19
Tank Capacity.....	30
Fuel Gauge.....	19
Fuses.....	45, 97
<b>G</b>	
Gasohol .....	115
Gasoline .....	30, 115
<b>H</b>	
Hazard Switch.....	26
Headlight Aim .....	79
Headlight Dimmer Switch.....	26
Helmet Holder .....	31
High Beam Indicator .....	25
High Oil Temperature Indicator .....	24, 82
Honda Contacts.....	118
<b>Horn Button .....</b>	<b>26</b>
<b>I</b>	
<b>Ignition Cut-off System</b>	
Banking Sensor .....	101
Side Stand .....	69
Ignition Key.....	100
Ignition Switch.....	27
Indicators.....	24
Information Record .....	124
Instruments .....	18
<b>L</b>	
Labels.....	7
Load Limits .....	15
Loading Guidelines.....	15
Low Oil Pressure Indicator .....	24, 83
<b>M</b>	
<b>Maintenance</b>	
Fundamentals .....	40
Importance .....	35
Safety .....	36



Schedule .....	37
Maximum Weight Limit.....	15
Modifications .....	14

## **N**

Neutral Indicator.....	25
------------------------	----

## **O**

Odometer .....	20, 101
----------------	---------

## **Oil**

Engine .....	46, 60
Overheating .....	82
Oxygenated Fuels .....	115

## **P**

Parking .....	12
Parts Location.....	16
Passing light control switch.....	26
PGM-FI (Programmed Fuel Injection)	
malfunction indicator lamp (MIL) ....	24, 83
Protective Apparel .....	9

## **R**

### **Recommended**

Fuel .....	30
Oil .....	46
Refueling .....	30

### **Removal**

Clip .....	55
Seat.....	53
Side Cover .....	54

Repair Kit .....	85
------------------	----

Reporting Safety Defects (U.S.) .....	120
---------------------------------------	-----

Riding Precautions .....	10
--------------------------	----

## **S**

Safety Labels.....	7
--------------------	---

Safety Precautions.....	9
-------------------------	---

Seat .....	53
------------	----

Shifting Gears .....	29
----------------------	----

Side Stand .....	69
------------------	----

Side Stand Ignition Cut-off System .....	69
--	----

Specifications.....	121
---------------------	-----

Speedometer .....	18
-------------------	----

Start Button .....	26
--------------------	----

Starting the Engine .....	28
Steering Lock .....	27
Stopping Engine .....	101
<b>Storage</b>	
Equipment .....	31
Owner's Manual .....	32, 101
Storing Your Motorcycle .....	104
Switches .....	26
<b>T</b>	
Tachometer .....	18
Throttle .....	74
<b>Tires</b>	
Air Pressure .....	49
Puncture .....	85
Replacing .....	49
Transporting Your Motorcycle .....	105
Tripmeter .....	20, 101
Troubleshooting .....	80
Turn signal indicators .....	25
Turn Signal Switch .....	26

**V**

Vehicle Identification Number .....	107
-------------------------------------	-----

**W**

Warning Indicators ON .....	83
Warranty Coverage and Service .....	117
Washing Your Motorcycle .....	102
Weight Limit .....	15, 121

**Wheels**

Front removal .....	86
Rear removal .....	90