

Contents

Motorcycle Safety P. 2

Operation Guide P. 18

Maintenance P. 51

Troubleshooting P. 105

Information P. 126

Specifications P. 151

Index P. 156

Welcome

Congratulations on your purchase of a new Honda motorcycle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the motorcycle.

To protect your investment, we urge you to take responsibility for keeping your motorcycle well serviced and maintained. Also, observe the break-in guidelines, and always perform the pre-ride inspection and other periodic checks in this manual.

When service is required, remember that your Honda dealer knows your motorcycle best. If you have the required mechanical "know-how" and tools, you can purchase an official Honda Service Manual to help you perform many maintenance and repair tasks.

➤ [P. 145](#)

Read the warranty information thoroughly so that you understand the warranty coverage and that you are aware of your rights and responsibilities. ➤ [P. 146](#)

You may also want to visit our website at www.powersports.honda.com.

Canada www.honda.ca

Happy riding!

California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- Safety labels on the motorcycle
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Other important information is provided under the following titles:

NOTICE Information to help you avoid damage to your motorcycle, other property, or the environment.

Motorcycle Safety

This section contains important information for safe riding of your motorcycle. Please read this section carefully.

| | |
|---|-------|
| Safety Guidelines | P. 3 |
| Safety Labels | P. 7 |
| Safety Precautions | P. 9 |
| Riding Precautions | P. 11 |
| Accessories & Modifications | P. 15 |
| Loading | P. 16 |
| Suspension Settings for Race Track (experienced riders only) | P. 17 |

Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flame away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved motorcycle helmet and protective apparel. ➤ P. 9

Before Riding

Make sure that you are physically fit, mentally focused and free of alcohol and drugs.

CBR1000RR/RA

Check that you and your passenger are both wearing an approved motorcycle helmet and protective apparel. Instruct your passenger on holding onto the seat strap or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the motorcycle is stopped.

CBR1000S

Check that you are wearing an approved motorcycle helmet and protective apparel.

Take Time to Learn & Practice

Even if you have ridden other motorcycles, practice riding in a safe area to become familiar with how this motorcycle works and handles, and to become accustomed to the motorcycle's size and weight.

Safety Guidelines

We recommend that all riders take a certified course approved by the Motorcycle Safety Foundation (MSF). New riders should start with the basic course, and even experienced riders will find the advanced course beneficial. For information about the MSF training course nearest you, call the national toll-free number: (800) 446-9227.

USA Other riding tips can be found in the You and Your Motorcycle Riding Tips booklet that came with your motorcycle.

Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Never Carry a passenger

CBR1000S only

There are no handholds, seat, or footrest carry a passenger.

Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgment and ride safely.

Don't Drink and Ride

Alcohol and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. Don't drink and ride, and don't let your friends drink and ride either.

Keep Your Honda in Safe Condition

It's important to keep your motorcycle properly maintained and in safe riding condition. Inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits (➤ P. 16), and do not modify your motorcycle or install accessories that would make your motorcycle unsafe (➤ P. 15).

If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first evaluate the condition of your motorcycle. If the engine is still running, turn it off. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously. Your motorcycle may have suffered damage that is not immediately apparent. Have your motorcycle thoroughly checked at a qualified service facility as soon as possible.

Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colorless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide. Never run your motorcycle inside a garage or other enclosure.

WARNING


Carbon monoxide gas is toxic.
Breathing it can cause
unconsciousness and even kill you.

Avoid any areas or activities that
expose you to carbon monoxide.

Safety Labels

Safety and information labels on your motorcycle provide important safety information and may warn you of potential

hazards that could cause serious injury. Read these labels carefully and don't remove them. If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

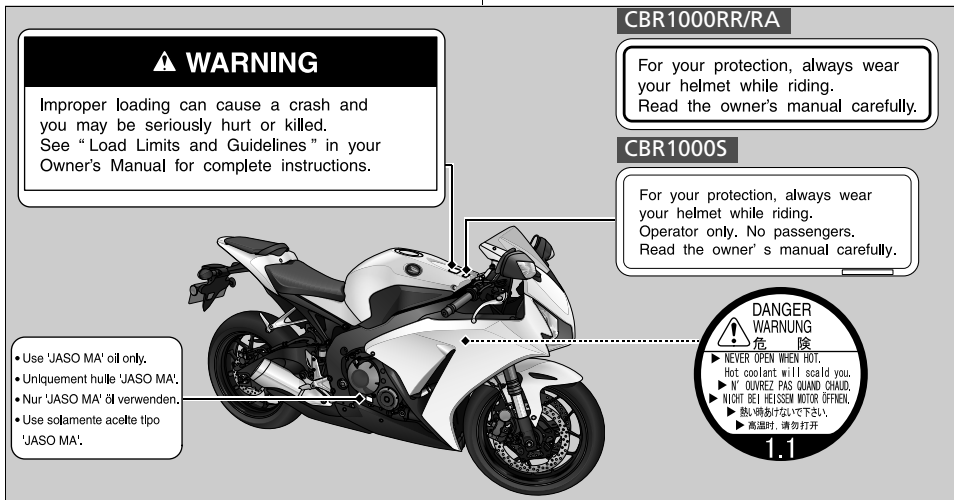


CBR1000RR/RA

| TIRE INFORMATION | |
|--|--|
| <p>Cold tire pressures : [Up to maximum weight capacity] Front 250kPa 2.50kgf/cm² 36psi Rear 290kPa 2.90kgf/cm² 42psi [Up to 90kg(200lbs) load] Front 250kPa 2.50kgf/cm² 36psi Rear 290kPa 2.90kgf/cm² 42psi Maximum weight capacity : 166kg(366lbs) Tire size : Front 120/70ZR17M/C(58W) Rear 190/50ZR17M/C(73W)</p> | <p>Tire brand Front Rear BRIDGESTONE S20F G S20R G DUNLOP Qualifier II K Qualifier II K Min. recommend tire center tread depth. Front 1.5mm (0,06in.) Rear 2,0mm (0,08in.)</p> <p>Read owner's manual.</p> <p>This motorcycle is equipped with tubeless tires.</p> |

CBR1000S

| TIRE INFORMATION | |
|---|---|
| <p>Cold tire pressures : [Up to maximum weight capacity] Front 250kPa 2.50kgf/cm² 36psi Rear 290kPa 2.90kgf/cm² 42psi</p> <p>Maximum weight capacity : 110 kg (243 lbs) Tire size : Front 120/70ZR17M/C(58W) Rear 190/50ZR17M/C(73W)</p> | <p>Tire brand PIRELLI Front DIABLO SUPERCORSA SP Rear DIABLO SUPERCORSA SP Min. recommend tire center tread depth. Front 1.5mm (0,06in.) Rear 2,0mm (0,08in.)</p> <p>Read owner's manual.</p> <p>This motorcycle is equipped with tubeless tires.</p> |

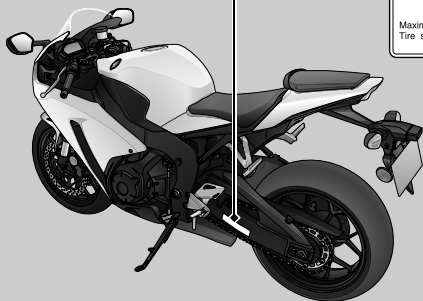

Safety Precautions

- Ride cautiously and keep your hands on the handlebars and feet on the footpegs.
- **CBR1000RR/RA only**
Keep passenger's hands onto the seat strap or your waist, passenger's feet on the footpegs while riding.
- **CBR1000RR/RA**
Always consider the safety of your passenger, as well as other drivers and riders.
- **CBR1000S**
Always consider the safety of other drivers and riders.

Protective Apparel

CBR1000RR/RA

Make sure that you and any passenger are wearing an approved motorcycle helmet, eye protection, and high-visibility protective clothing. Ride defensively in response to weather and road conditions.

CBR1000S

Make sure that you are wearing an approved motorcycle helmet, eye protection, and high-visibility protective clothing. Ride defensively in response to weather and road conditions.

Safety Precautions

■ Helmet

Should be safety-standard certified, high-visibility, and correct size for your head

- Must fit comfortably but securely, with the chin strap fastened
- Face shield with unobstructed field of vision or other approved eye protection

USA Look for a DOT (Department of Transportation) certification label on any helmet you buy.

CBR100RR/RA

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

CBR100S

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you always wear an approved helmet and protective apparel.

■ Gloves

Full-finger leather gloves with high abrasion resistance

■ Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection

■ Jacket and Pants

Protective, highly visible, long-sleeved jacket and durable long pants for riding (or a protective suit).

Riding Precautions

Break-in Period

During the first 300 miles (500 km) of running, follow these guidelines to ensure your motorcycle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking and rapid down-shifts.
- Ride conservatively.

Brakes

Observe the following guidelines:

- Avoid excessively hard braking and down-shifts.
 - ▶ Sudden braking can reduce the motorcycle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise you risk sliding out.

- Exercise caution on low traction surfaces.
 - ▶ The tires slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

Combined ABS

CBR1000RA only

Even when the brake lever and brake pedal are applied separately, the combined ABS distributes braking pressure between the front and rear wheels according to braking force and wheel speed to enhance your stopping power and stability. The system also controls braking pressure to prevent wheel lockup. To get the best results, operate the lever and pedal together and perform most of your braking in a straight line to avoid sliding out in a turn.

- Combined ABS cannot make up for road conditions, bad judgment, or improper operation of the brakes, and cannot stop rear wheel lift completely.
 - ▶ Never ride faster than conditions permit and always leave enough space to safely brake to a stop.
- When Combined ABS does not function, the brakes work like a conventional braking system. On conventional braking systems, operating the front brake lever applies the

front brake and operating the rear brake pedal applies the rear brake.

- ▶ The system is always turned off at speeds less than 4 mph (6 km/h).
 - It is important to follow the tire recommendations (▶ P. 152), because the Combined ABS computer works by comparing wheel speed. Incorrect tires can affect wheel speed and confuse the system.
 - Combined ABS may not always reduce stopping distance over a motorcycle equipped with conventional brakes.
 - Combined ABS does not operate when the battery level is discharged.
 - Combined ABS does not operate when the ABS main or ABS motor fuses are burned out.
- You may feel a change in the way the brake lever/pedal reacts when it is operated under the following conditions:
- Immediately after turning the ignition switch to ON.
 - After braking to a stop and applying the brakes again.

■ Engine Braking

Engine braking helps slow your motorcycle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

■ Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

Parking

- Park on a firm, level paved surface.
- If you must park on a slight incline or loose surface, park so that the motorcycle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebars and remove the key when leaving the motorcycle unattended. Use of an anti-theft device is also recommended.

Parking with the Side Stand

1. Stop the engine.
2. Push the side stand down.
3. Slowly lean the motorcycle to the left until its weight rests on the side stand.

4. Turn the handlebars fully to the left.
 - ▶ Turning the handlebars to the right reduces stability and may cause the motorcycle to fall.
5. Turn the ignition switch to the LOCK position and remove the key. ➤ P. 45

Refueling and Fuel Guidelines

Follow these guidelines to protect the engine and catalytic converter:

- Use only unleaded gasoline.
- Use recommended octane number. Using lower octane gasoline will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➤ P. 144
- Do not use stale or contaminated gasoline or an oil/gasoline mixture.
- Avoid getting dirt or water in the fuel tank.

Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed or approved for your motorcycle by Honda or make modifications to your motorcycle from its original design. Doing so can make it unsafe. Modifying your motorcycle may also void your warranty and make your motorcycle illegal to operate on public roads and highways. Before deciding to install accessories on your motorcycle be certain the modification is safe and legal.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your motorcycle. Your motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.

CBR1000S only

Do not attempt to modify the motorcycle to carry a passenger. The sub-frame was not designed to carry the additional weight of a passenger.

Loading

● CBR1000S only

Never carry a passenger. Your motorcycle was not designed to carry a passenger.

- Carrying extra weight affects your motorcycle's handling, braking and stability. Always ride at a safe speed for the load you are carrying.

- Avoid carrying an excessive load and keep within specified load limits.

➤ **Maximum weight capacity / Maximum luggage weight** P. 151

- Tie all luggage securely, evenly balanced and close to the center of the motorcycle.
- Do not place objects near the lights or the muffler.

CBR1000RR/RA

WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

CBR1000S

WARNING

Overloading or carrying a passenger loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Suspension Settings for Race Track (experienced riders only)

CBR1000S only

The suspension settings for race tracks were developed as a baseline setting for experienced riders weighing approximately 75 kg (165 lb). Depending on your skill level and weight, you may find that slightly softer or stiffer suspension settings provide better performance. Track surface conditions and course layout can also have a large influence on a particular setting or combination of settings.

Always be sure to return the settings to their original specifications before resuming street riding.

🔧 **Adjusting the Front Suspension** [P. 97](#)

🔧 **Adjusting the Rear Suspension** [P. 102](#)

Parts Location

CBR1000RR/RA

Rear brake fluid reservoir ➔ P.82

Fuse box ➔ P.123

Battery ➔ P.74

Main fuse ➔ P.124

Front brake fluid reservoir
➔ P.82

Front brake lever ➔ P.94

Throttle grip ➔ P.93

Engine oil fill cap ➔ P.76

Engine oil dipstick ➔ P.76

Front suspension spring
preload adjuster ➔ P.95


Engine oil filter ➔ P.78


Engine oil drain bolt ➔ P.78

Lower fairing ➔ P.73

Coolant reserve
tank ➔ P.80


Brakelight switch ➔ P.84

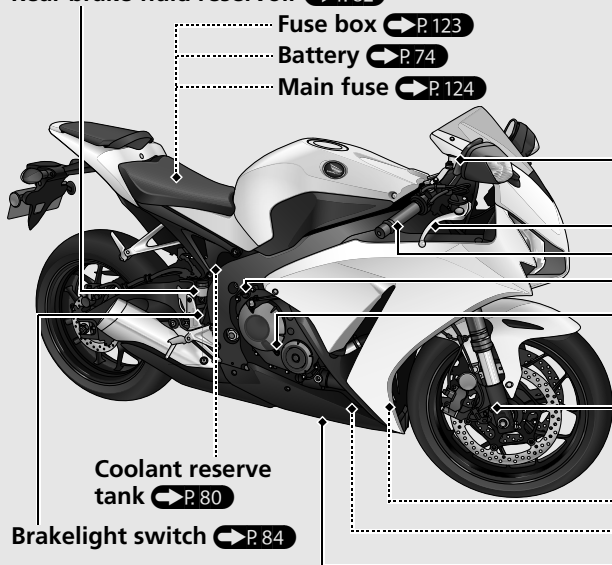


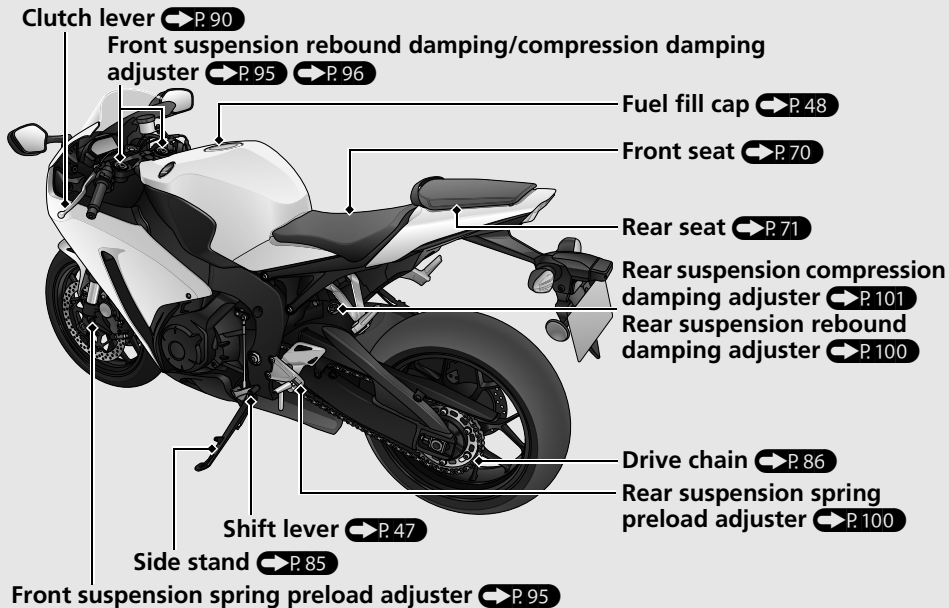


Parts Location *(Continued)*

CBR1000S

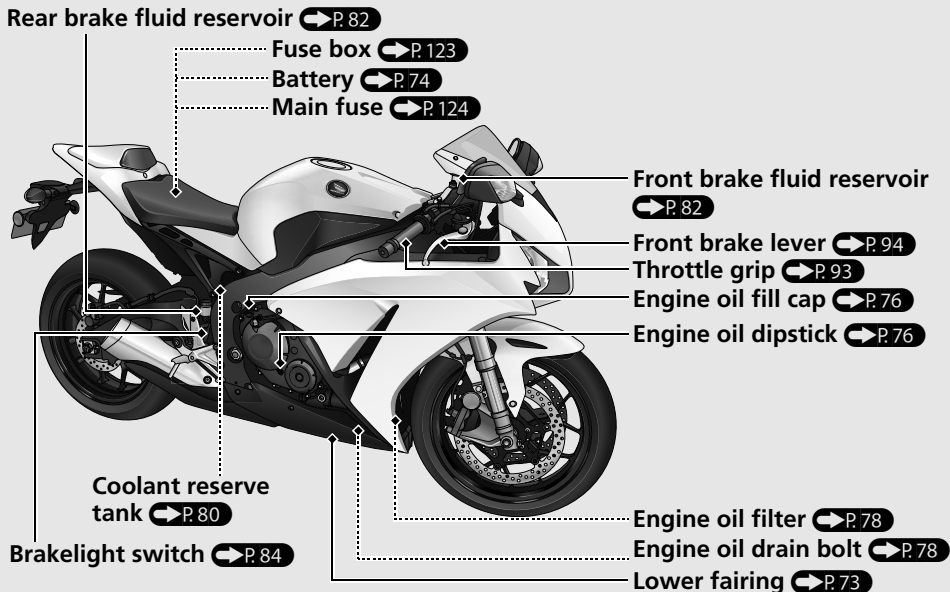

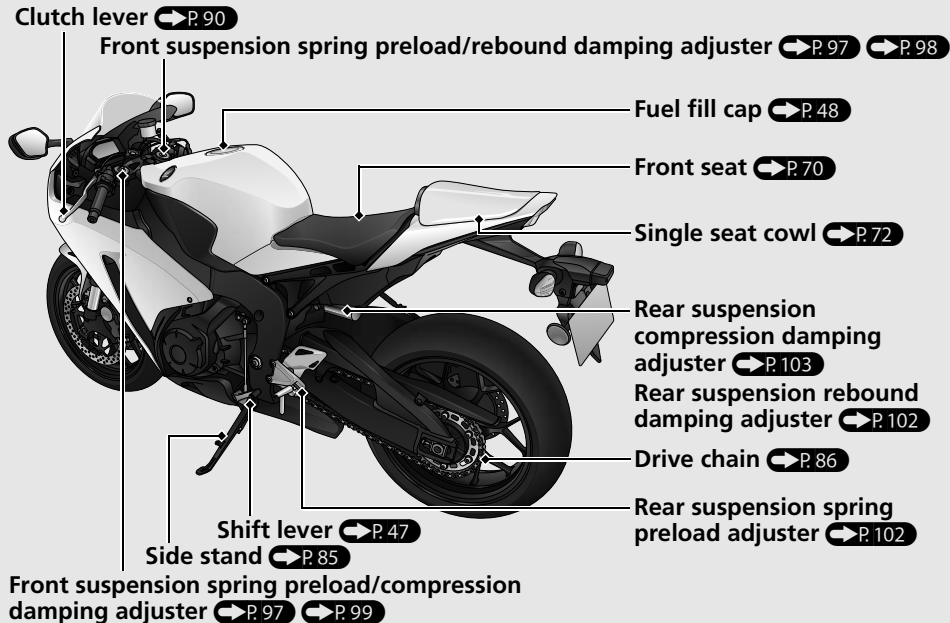

Instruments

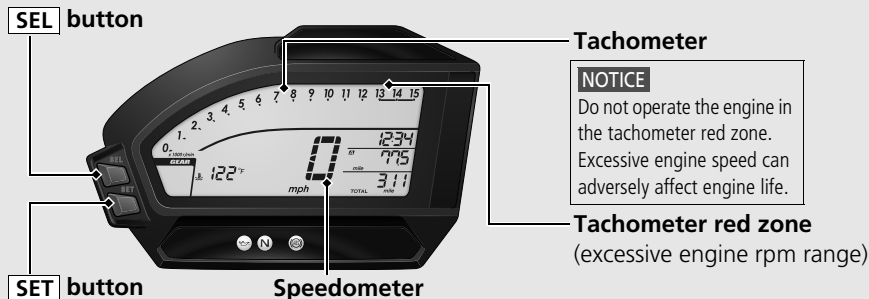

Display Check

Alternately displays the contents of two patterns.

Pattern 1


When the ignition switch is turned on, tachometer segment progress to maximum scale and then disappear.

Pattern 2

When the ignition switch is turned on, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

Gear position indicator

Shows 1st to 6th gear position.

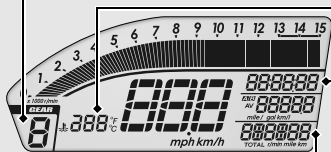

Odometer [TOTAL]/Numerical tachometer display

SET button switches between odometer & numerical tachometer display.

- Odometer: Total distance ridden.
- Numerical tachometer display: Shows engine revolutions per minutes digit.


Coolant temperature gauge ()

Display range: 95 °F (35 °C) to 270 °F (132 °C)

- Below 94 °F (34 °C): “- -” displays
 - Between 251 °F (122 °C) and 269 °F (131 °C):
 - High coolant temperature indicator lights
 - Coolant temperature digit flash
 - Above 270 °F (132 °C):
 - High coolant temperature indicator lights
 - “270” (°F) / “132” (°C) flashes
- ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

Clock (12-hour display)/Lap timer

To set the clock:  P.27

Lap timer  P.36


Instruments (Continued)



Tripmeter [A/B] & Fuel mileage meter & Fuel consumption meter

SEL button selects the tripmeter A, tripmeter B, current fuel mileage, average fuel mileage and fuel consumption.

▶ To reset the tripmeter: **➡ P.26**

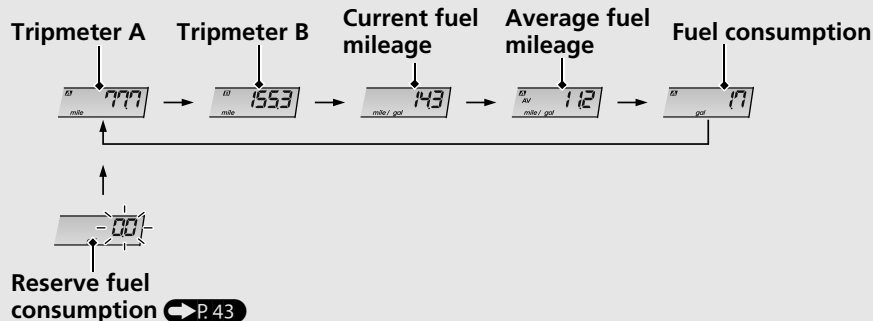

The average fuel mileage and fuel consumption will be based on tripmeter A.


- Current fuel mileage:
Current instant fuel mileage. If your speed is 0.6 mph (1 km/h) or less, "--.:" is displayed.
- Average fuel mileage:
Average fuel mileage since tripmeter A was reset. When "--.:" is displayed, see your dealer for service.
- Fuel consumption:
Total fuel consumption since tripmeter A was reset. When "--.:" is displayed, see your dealer for service.

► **To reset the average fuel mileage and fuel consumption:** ➡ P.26

Instruments *(Continued)*

To reset the tripmeter, average fuel mileage and fuel consumption

- 1 To reset tripmeter A, average fuel mileage, and fuel consumption together, press and hold **SEL** button.

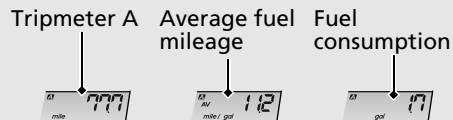


- 2 When they are reset, "0.0" is displayed at each indication.



- 3 Then, the display returns to the last selected indication.



 - 4 To reset tripmeter B, press and hold **SEL** button with tripmeter B displayed.




Also, after refueling more than the reserve amount, the tripmeter A, average fuel mileage, and fuel consumption can be automatically reset.

You can activate or deactivate the automatic reset mode by refueling. ➔ P.27


Display Setting

Setting Mode A

Following items to change sequentially  P.28

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of coolant temperature gauge unit

Setting Mode B

Following items to change sequentially  P.32

 
- Setting of REV indicators
(blinking RPM setting, interval RPM setting and REV indicators brightness adjustment)
- Setting display mode of tachometer

Instruments *(Continued)*


Setting Mode A

1 To set the clock:

- 1 Turn the ignition switch to ON.
- 2 Press and hold **SEL** button and **SET** button until the hour digits start flashing.



 
- 3 Press **SEL** button until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.




- 4 Press **SET** button. The minute digits start flashing.



 
- 5 Press **SEL** button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.



 - 6 Press **SET** button. The hour and minute digits start flashing.
- 7 If necessary, press **SEL** button to select the second display.



 
- 8 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.



2 Backlight brightness adjustment:

You can adjust the brightness five levels.


- 1 Press **[SEL]** button. The brightness is switched.
- 2 Press **[SET]** button. The backlight is set, and then the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.

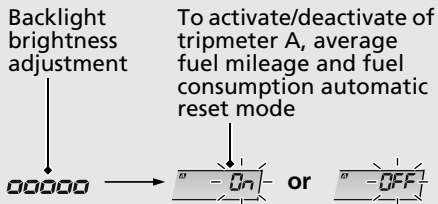

3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after low fuel indicator lights. Deactivation is initially set.

- 1 Press **[SEL]** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.
- 2 To end the selection, press **[SET]** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of the speed and mileage unit.

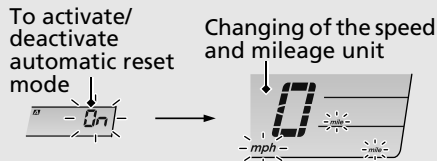

Instruments *(Continued)*

4 Changing the speed and mileage unit:

- 1 Press **SEL** button to select either "mph" and "mile" or "km/h" and "km".

When selecting the "mph" and "mile".

- Fuel mileage unit shows "mile/gal".
- Fuel consumption unit shows "gal".

When selecting the "km/h" and "km".

 
- Fuel mileage unit shows "km/l".
- Fuel consumption unit shows "l".

- 2 Press **SET** button. The speed and mileage unit is set, and then the display moves to the changing of the coolant temperature gauge unit.

Changing the speed and mileage unit



Changing the coolant temperature gauge unit



5 Changing the coolant temperature gauge unit:

- 1 Press **SEL** button to select "°F" (Fahrenheit) or "°C" (Centigrade).
- 2 To end the selection, press **SET** button.

The established setting can also be set by turning the ignition switch to OFF.

The control is automatically switched from the setting mode A to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.


Instruments *(Continued)*

Setting Mode B

1 Setting of REV indicators:

You can change the setting of the REV indicators.

- 1 To change the setting mode B, turn the ignition switch to ON while pressing **SEL** button until the display check is finished. The blinking of bar segment in the tachometer shows the currently applied blinking RPM, and the numerical tachometer display shows it. At the same time, all of the REV indicators blink.

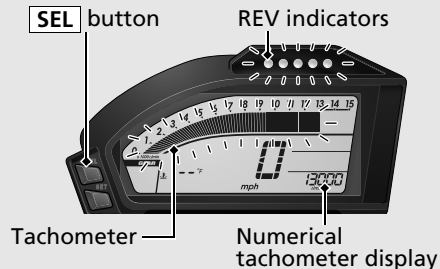

- 2 Each time **SEL** button is pressed, the blinking RPM set value increase by 200 r/min (rpm) (one segment). When the set value exceeds the allowable range, the RPM set value automatically returns to 4,000 r/min (rpm).
 - ▶ Press and hold to advance the blinking RPM setting value fast.


Available Setting Range

4,000 -to- 13,000 r/min (rpm)

- 3 Press **SET** button. The blinking RPM is set, and then the display moves to the setting of lighting interval RPM.





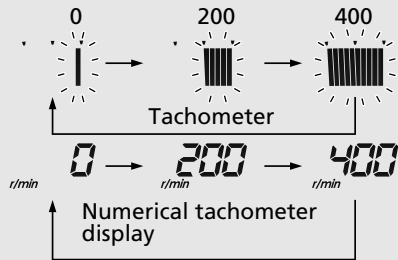

At the same time, the blinking bar segment shows the currently applied setting originated from the blinking RPM and the numerical tachometer display shows the interval RPM.

- 4 Each time **SEL** button is pressed, the number of lighting interval RPM is switched among 0 r/min (rpm), 200 r/min (rpm) and 400 r/min (rpm) in this order. During this setting, the REV indicators light one by one from left and when all indicators light, they go out, and then they start to light from left again.



Instruments *(Continued)*

Ex When blinking RPM is setting 13,000 r/min (rpm) and lighting interval RPM is 200 r/min (rpm).

| REV indicators | r/min (rpm) |
|---|--------------------|
|  | 12,000 r/min (rpm) |
|  | 12,200 r/min (rpm) |
|  | 12,400 r/min (rpm) |
|  | 12,600 r/min (rpm) |
|  | 12,800 r/min (rpm) |
|  | 13,000 r/min (rpm) |

If the lighting interval RPM is 0, the REV indicators start to blink when reaching to the blinking RPM.


- Press **SET** button. The interval RPM is set, and then the display moves to the brightness adjustment of the REV indicators. At the same time, the currently applied brightness level is displayed in the numerical tachometer display "00000". The brightness can be adjusted to five levels by pressing **SEL** button.
- Press **SET** button. The brightness of the REV indicators are set, and then the display moves to the displaying setting of the tachometer. At the same time, the tachometer sweeps from 1,200 r/min (rpm) to the initial blinking RPM.

2 Changing of tachometer display mode:

You can change the display mode of the tachometer.

- Press **SEL** button to switch the displaying mode of tachometer.

Ex Engine revolutions per minutes 8,000 r/min (rpm)

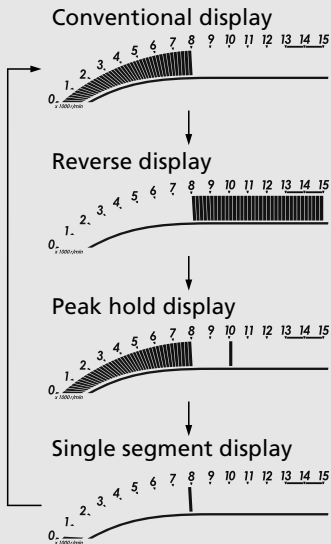

- 2 Press **SET** button. The currently selected displaying mode is set, and the control returns to the ordinary display.

In setting mode B, this setting is maintained when the ignition switch is turned off.

If the button is not pressed for about 30 seconds in this mode, the control returns to the ordinary display and the established setting is maintained.

Instruments *(Continued)*


Lap Timer

You can display and record lap time, fuel consumption, travel distance, driving time, and average fuel mileage.

Press **SEL** button and **SET** button at the same time when the motorcycle is stopped. The ordinary display switches to the lap time mode. **➡ P.37**

Press and hold **SEL** button when the motorcycle is stopped. The display switches between the lap time mode and lap time recall mode. **➡ P.39**

To return to the ordinary display, press **SEL** button and **SET** button at the same time when the motorcycle is stopped.

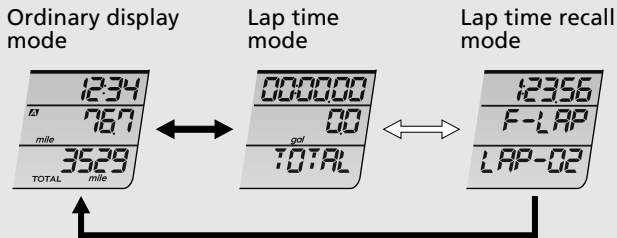

SEL button press and hold \Rightarrow

SEL button and **SET** button press \rightarrow

Lap time mode

You can display the most recent lap time, fuel consumption, travel distance, driving time, and average fuel mileage.

Recordable data

LAP number until 99

LAP time until 59:59.99

Fuel consumption until 99.9


Travel distance until 999.9

Driving time 99 Hr 59:59.99

Switching of displays in lap time mode


Press **[SEL]** button to switch each mode.

Press and hold **[SET]** button to reset the current displaying items.

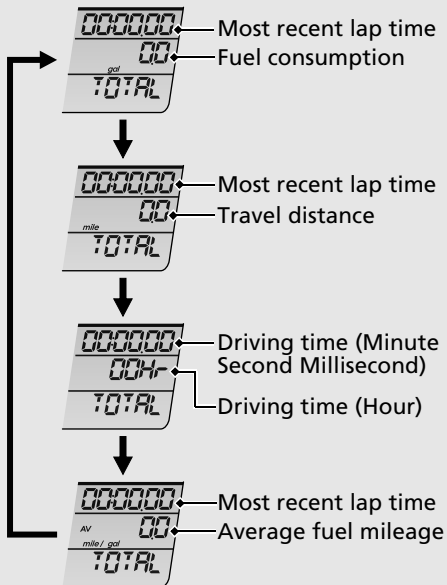

Instruments *(Continued)*

Measurement of lap time

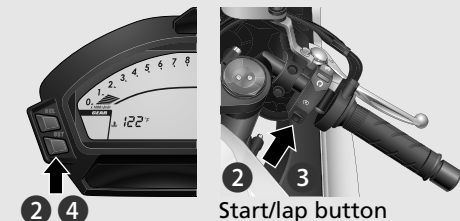


SET button

- 1 Switch the display to the lap time mode.

➔ P. 36


- 2 Press **SET** button or start/lap button then start measuring.

 While measuring 1 lap



- 3 Press start/lap button at each lap.

In completion of 1 lap

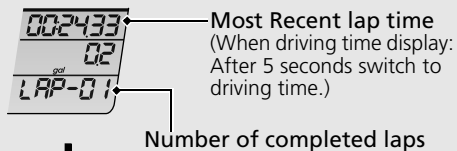

In completion of 21 laps



- 4 Press **SET** button to end the measurement.
 - ▶ During the measurement, switching to other modes is not available.

Lap time recall mode

- The history of recorded lap time and the fastest lap time is displayed.
- The lap time is reset.

Fastest lap time (F-LAP) is minimum lap time.


Fastest lap time (F-LAP) excludes start and last lap time.

Each time **[SEL]** button is pressed, the display is switched F-LAP, LAP-01, LAP-02 ~ (ascending sequence).


Each time **[SET]** button is pressed, the display is switched, F-LAP, ~ LAP-02, LAP-01 (descending sequence).

Lap time reset

Press and hold **[SET]** button to display the "CLEAR" and then press **[SET]** button, measured lap time is all reset.

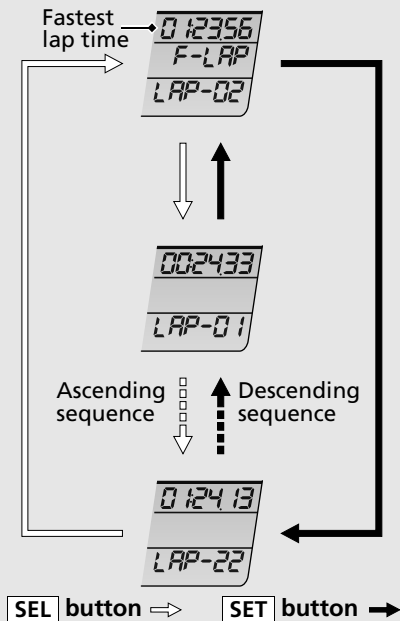

Indicators

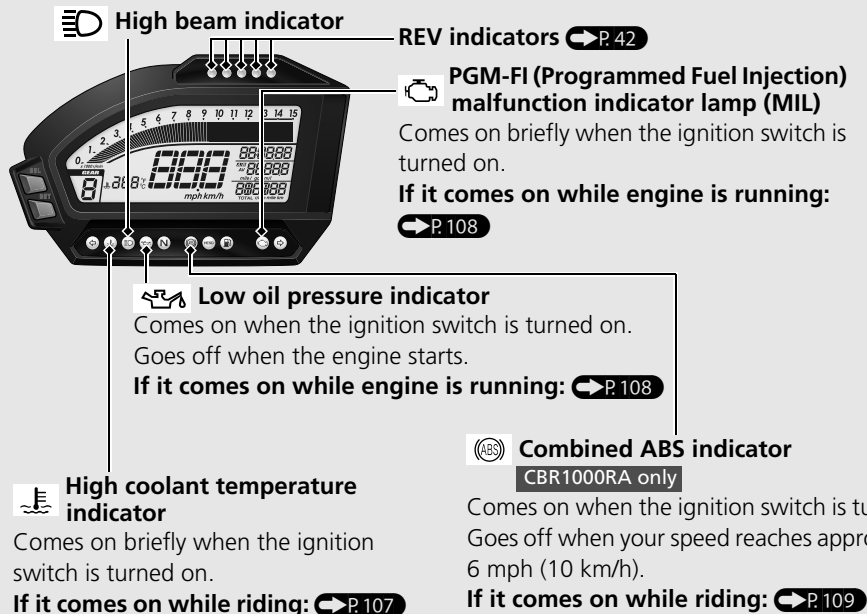

High beam indicator

REV indicators ➔ P. 42



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running:

➔ P. 108



Low oil pressure indicator

Comes on when the ignition switch is turned on.

Goes off when the engine starts.

If it comes on while engine is running: ➔ P. 108



High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

If it comes on while riding: ➔ P. 107



Combined ABS indicator


CBR1000RA only

Comes on when the ignition switch is turned on.

Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ P. 109

 **Left turn signal indicator**

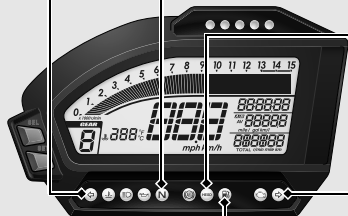

 **Neutral indicator**

Comes on when the transmission is in Neutral.

 **HESD (Honda Electronic Steering Damper) indicator**

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running:

 **P. 109**

 **Right turn signal indicator**

 **Low fuel indicator**

- Comes on when the ignition switch is turned on.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on:
0.92 US gal (3.5 liters)

Low fuel indicator and reserve fuel consumption display:  **P. 43**

Indicators *(Continued)*







REV Indicators

- Comes on briefly when the ignition switch is turned on.

Initial setting

blinking RPM: 13,000 r/min (rpm)

interval RPM: 200 r/min (rpm)

| REV indicators | r/min (rpm) |
|---|----------------------------------|
|  | 12,000 r/min (rpm) |
|  | 12,200 r/min (rpm) |
|  | 12,400 r/min (rpm) |
|  | 12,600 r/min (rpm) |
|  | 12,800 r/min (rpm) |
|  | 13,000 r/min (rpm) (red zone) |

▶ Setting of REV indicators:  P.27

Low fuel indicator and reserve fuel consumption display

When the low fuel indicator comes on, the tripmeter & fuel mileage meter & fuel consumption meter switches to the reserve fuel consumption. You should refill the tank as soon as possible.




Low fuel indicator

Reserve fuel consumption display

- Flashes from “0.0” gal or l.
 - ▶ When the amount of consumed fuel is more than 0.26 US gal (1.0 liter) the display blinks faster.
 - ▶ If you change the display to tripmeter, fuel mileage meter and fuel consumption meter and so on **➡ P. 24**, it will automatically return to the reserve fuel consumption display if the buttons are not pressed for about 10 seconds.

After refueling more than the reserve amount, the display returns to normal when the ignition switch has been on for about a minute.

Switches

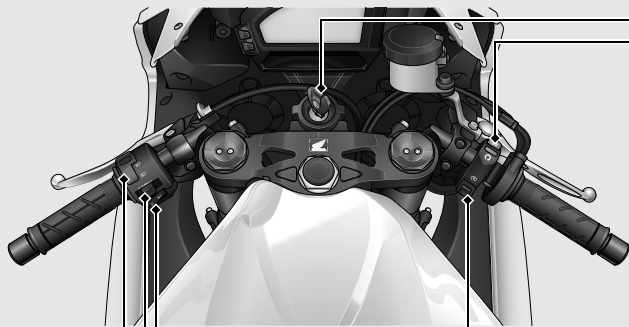


 
Horn button




Turn signal switch


▶ Pressing the switch turns the turn signal off.

Headlight dimmer switch

-  High beam
-  Low beam


Engine stop switch

Should normally remain in the RUN  position.

▶ In an emergency, switch to the OFF  position to stop the engine.



Start/lap button

Headlight turns off when operating the starter motor. Also use lap timer  P.38

Ignition Switch



Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

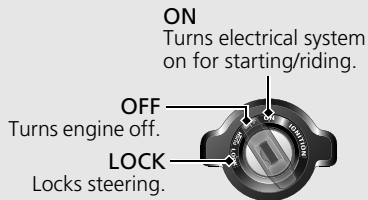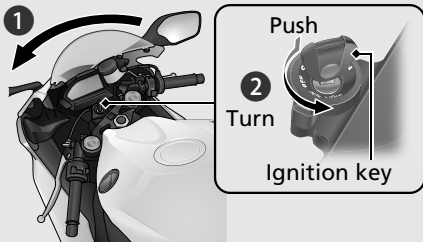

Locking


- 1 Turn the handlebars all the way to the left.
- 2 Push the key down, and turn the ignition switch to the LOCK position.
 - ▶ Jiggle the handlebars if the lock is difficult to engage.
- 3 Remove the key.

Unlocking

Insert the key, push it in, and turn the ignition switch to the OFF position.


Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

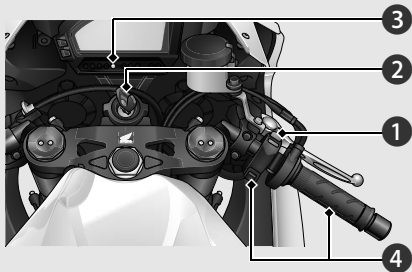


NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.

- 1 Make sure the engine stop switch is in the RUN  position.
- 2 Turn the ignition switch to the ON position.
- 3 Shift the transmission to Neutral (**N** indicator comes on). Alternatively, pull in the clutch lever to start your motorcycle with the transmission in gear so long as the side stand is raised.
- 4 Press the start/lap button with the throttle completely closed.


If the engine does not start:

- 1 Open the throttle fully and press the start/lap button for 5 seconds.
- 2 Repeat the normal starting procedure.
- 3 If the engine starts, open the throttle slightly if idling is unstable.
- 4 If the engine does not start, wait 10 seconds before trying steps 1 & 2 again.

If Engine Will Not Start  P.106

Shifting Gears

Your motorcycle transmission has 6 forward gears in a one-down, five-up shift pattern.

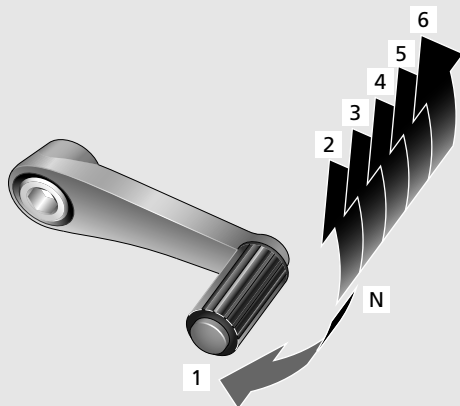

If you put the motorcycle in gear with the side stand down, the engine will shut off.

Recommended Shift Points

Shifting Up

| | |
|-----------------|------------------|
| From 1st to 2nd | 12 mph (20 km/h) |
| From 2nd to 3rd | 19 mph (30 km/h) |
| From 3rd to 4th | 25 mph (40 km/h) |
| From 4th to 5th | 31 mph (50 km/h) |
| From 5th to 6th | 37 mph (60 km/h) |


Shifting Down

| | |
|-----------------|------------------|
| From 6th to 5th | 31 mph (50 km/h) |
| From 5th to 4th | 25 mph (40 km/h) |
| From 4th to 3rd | 19 mph (30 km/h) |
| From 3rd to 2nd | 12 mph (20 km/h) |

NOTICE

Improper shifting can damage the engine, transmission, and drive train. Also, coasting or towing the motorcycle for long distances with the engine off can damage the transmission.

Refueling

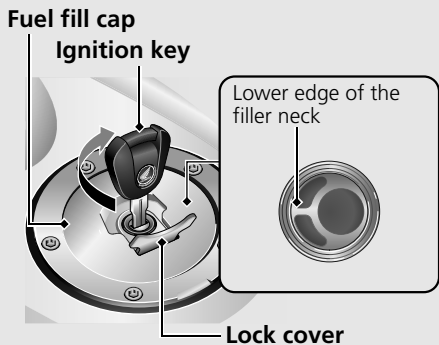

Do not fill with fuel above lower edge of the filler neck.

Fuel type: Unleaded gasoline only

Recommended fuel octane number:
Pump Octane Number (PON) 91 or higher.

Tank capacity: 4.49 US gal (17.0 liters)

Refueling and Fuel Guidelines ➔ P. 14

Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the cap.

Closing the Fuel Fill Cap

- 1 After refueling, push the fuel fill cap closed until it locks.
- 2 Remove the key and close the cover.
 - ▶ The key cannot be removed if the cap is not locked.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Storage Equipment


Tool Kit/U-shaped Lock/Document Bag

CBR1000RR/RA

A tool kit, and document bag are located under the rear seat. There is also space to store a U-shaped lock.

CBR1000S

A tool kit, and document bag are located under the single seat cowl. There is also space to store a U-shaped lock.

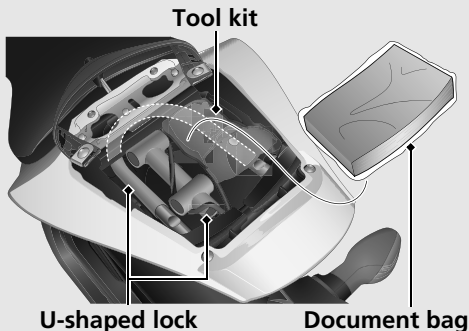

- ▶ The U-shaped lock is held in place above the rear fender.
- ▶ Some U-shaped locks may not fit in the compartment due to their size or design.

CBR1000RR/RA

Removing the Rear Seat ➔ P.71


CBR1000S

Removing the Single Seat Cowl ➔ P.72

Storage Equipment *(Continued)*

CBR1000RR/RA only

The helmet holders are located underside of the rear seat.

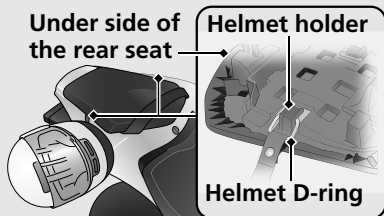

▶ Use the helmet holder only when parked.

▮ **Removing the Rear Seat** ➔ P.71

⚠ WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional tool kit may be available. Check with your Honda dealer’s parts department.

| | | | |
|--|-------|--------------------------------|--------|
| Importance of Maintenance | P. 52 | Side Stand | P. 85 |
| Maintenance Schedule | P. 54 | Drive Chain | P. 86 |
| Maintenance Fundamentals | P. 57 | Clutch | P. 90 |
| Removing & Installing Body Components ... | P. 70 | Throttle | P. 93 |
| Front Seat | P. 70 | Other Adjustments | P. 94 |
| Rear Seat | P. 71 | Brake Lever | P. 94 |
| Single Seat Cowl..... | P. 72 | Front Suspension | P. 95 |
| Lower Fairing | P. 73 | Rear Suspension | P. 100 |
| Battery..... | P. 74 | Headlight Aim | P. 104 |
| Engine Oil | P. 76 | | |
| Coolant | P. 80 | | |
| Brakes | P. 82 | | |

Importance of Maintenance

Importance of Maintenance

Keeping your motorcycle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your motorcycle before each ride, and perform the periodic checks specified in the Maintenance Schedule. ➤ P. 54

WARNING

Improperly maintaining your motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Environment Canada (EC). ➤ P. 138

USA

Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are "certified" to EPA standards.

Maintenance Safety

Always read the maintenance instructions before you begin each task, and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.











- Stop the engine and remove the key.
- Park your motorcycle on a firm, level surface using the side stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

Maintenance Schedule


The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.


Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your motorcycle is properly maintained. Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged for by your dealer. Retain all receipts. If you sell the motorcycle, these receipts should be transferred with the motorcycle to the new owner.

| Items | | | Frequency*1 | | | | | | | Refer to page | |
|------------------------|---------------------------------------|---|-------------|---|-----|------|------|------|------|---------------|------|
| | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | | 24 |
| | | | × 1,000 km | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | | 38.4 |
| Emission-related Items | Fuel Line |  | | | | I | | I | | I | - |
| | Throttle Operation |  | | | | I | | I | | I | 93 |
| | Air Cleaner*2 |  | | | | | I | | | I | - |
| | Spark Plug |  | | Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R | | | | | | | - |
| | Valve Clearance |  | | | | | | I | | | - |
| | Engine Oil | | | Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R | | | | | | | 76 |
| | Engine Oil Filter | | | R | | R | | R | | R | 78 |
| | Engine Idle Speed |  | | I | I | I | I | I | I | I | - |
| | Radiator Coolant*4 | | | | | I | | I | | R | 80 |
| | Cooling System |  | | | | I | | I | | I | - |
| | Secondary Air Supply System |  | | | | I | | I | | I | - |
| | Evaporative Emission Control System*3 |  | | | | | I | | | I | - |
| | Exhaust Gas Control Actuator Cable |  | | Every 16,000 mi (25,600 km): I | | | | | | | - |

Maintenance Level






 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 145).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
R : Replace **L** : Lubricate

Maintenance Schedule

| Items | | Frequency*1 | | | | | | | | Refer to page | |
|----------------------------|------------------------|---|--|--|----------|----------|----------|----------|----------|---------------|---|
| | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | |
| | | × 1,000 km | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 | | |
| Non-Emission-Related Items | Drive Chain | | Every 500 mi (800 km): I L | | | | | | | 86 | |
| | Brake Fluid*4 | | | I | I | R | I | I | R | 82 | |
| | Brake Pads Wear | | | I | I | I | I | I | I | 83 | |
| | Brake System | | I | | I | | I | | I | 82 | |
| | Brake Light Switch | | | | I | | I | | I | 84 | |
| | Headlight Aim | | | | I | | I | | I | 104 | |
| | Clutch System | | I | I | I | I | I | I | I | 90 | |
| | Side Stand | | | | I | | I | | I | 85 | |
| | Suspension |  | | | I | | I | | I | 95 | |
| | Front Fork Oil |  | CBR1000S | Every 18,000 mi (30,000 km) or 36 months: R | | | | | | | - |
| | Nuts, Bolts, Fasteners |  | | I | | I | | I | I | - | |
| | Wheels/Tires |  | | | | I | | I | I | 66 | |
| | Steering Head Bearings |  | | I | | I | | I | I | - | |

Notes:

- *1 : At higher odometer readings, repeat at the frequency interval established here.
- *2 : Service more frequently when riding in unusually wet or dusty areas.
- *3 : 50 STATE (meets California).
- *4 : Replace every 2 years, or at indicated odometer intervals, whichever comes first. Replacement requires mechanical skill.

Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

Check the following items before you get on your motorcycle:

- Fuel level-Fill fuel tank when necessary. [➤ P. 48](#)
- Throttle-Check for smooth opening and full closing in all steering positions. [➤ P. 93](#)
- Engine oil level-Add engine oil if necessary. Check for leaks. [➤ P. 76](#)
- Coolant level-Add coolant if required. Check for leaks. [➤ P. 80](#)
- Drive chain-Check condition and slack, adjust and lubricate if necessary. [➤ P. 86](#)

- Brakes-Check operation;
Front and Rear: check brake fluid level and pad wear. [➤ P. 82, 83](#)
- Lights and horn-Check that lights, indicators and horn function properly.
- Engine stop switch-Check for proper function. [➤ P. 44](#)
- Clutch-Check operation;
Adjust freeplay if necessary. [➤ P. 90](#)
- Side stand ignition cut-off system-Check for proper function. [➤ P. 85](#)
- Wheels and tires-Check condition, air pressure and adjust if necessary. [➤ P. 66](#)

Periodic Checks

You should also perform other periodic maintenance checks at least once a month regardless of how often you ride, or more often if you ride frequently.

Also, check the odometer reading against the Maintenance Schedule and perform all maintenance that is due. [➤ P. 54](#)

| | |
|------------------|--|
| Tires and wheels | Check the air pressure (➤ P. 66), examine tread for wear and damage (➤ P. 66), and check the wheels for damage. |
| Fluid levels | Check the engine oil level (➤ P. 76), engine coolant level (➤ P. 80), and brake fluid level (➤ P. 82). |
| Lights | Check that the headlight, position light, brake light, taillight, turn signals and license plate light are working properly. |
| Controls | Check the freeplay of the clutch lever (➤ P. 90) and throttle grip (➤ P. 93). |
| Drive chain | Check the slack (➤ P. 86), adjust the slack (➤ P. 87), and lubricate (➤ P. 65) as needed. |
| Fuses | Check that you have a full supply of spare fuses. |
| Nuts & bolts | Check the major nuts and bolts, and tighten as needed. |

Replacing Parts


Always use Honda Genuine Parts or their equivalents to ensure reliability and safety. When ordering colored components, specify the model name, color, and code mentioned on the color label.

CBR1000RR/RA

The color label is attached to the rear fender under the rear seat. ➤ P. 71

CBR1000S

The color label is attached to the rear fender under the single seat cowl. ➤ P. 72

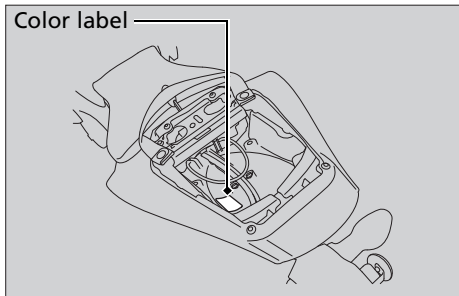

⚠ WARNING

Installing non-Honda parts may make your motorcycle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your motorcycle.

Battery

Your motorcycle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.

- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.


Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds.

Wash your hands after handling.

Cleaning the Battery Terminals

1. Remove the battery. ➤ P. 74
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.
3. If the terminals are heavily corroded, clean the terminals with a wire brush or sandpaper. Wear safety glasses.

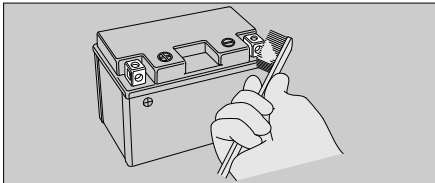

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

Charging

If you use electrical accessories that drain the battery or you do not ride frequently, we recommend that you charge the battery every 30 days using a charger designed specifically for your Honda, which can be purchased from your dealer. Read the information that came with your battery charger and follow the instructions on the battery. Avoid using an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

Make sure the ignition switch is in the OFF position before charging the battery.

NOTICE

Improper charging can damage the battery. If you can't charge the battery or it appears unable to hold a charge, contact your dealer.

Maintenance Fundamentals

NOTICE

Jump starting using an automobile battery can damage your motorcycle's electrical system and is not recommended. Bump starting is also not recommended.

NOTICE

Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

 
Fuses

Fuses protect the electrical circuits on your motorcycle. If something electrical on your motorcycle stops working, check for and replace any blown fuses. ➤ [P. 123](#)

Inspecting and Replacing Fuses

Turn off the ignition switch to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➤ [P. 153](#)

Blown fuse



NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your motorcycle inspected by your dealer.

Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


Selecting the Engine Oil

For recommended engine oil, see "Specifications." [P. 152](#)

If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:


- JASO T 903 standard*1: MA
- SAE standard*2: 10W-30
- API classification*3: SG or higher

*1. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

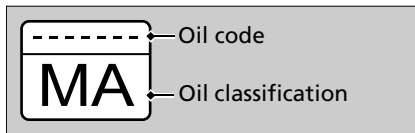

*2. The SAE standard grades oils by their viscosity.

*3. The API classification specifies the quality and performance rating of engine oils. Use SG or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

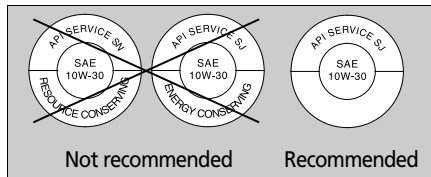

Maintenance Fundamentals

Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces. Wipe up spills immediately and wash thoroughly.

Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent

WARNING

Clean filler cap before removing. Use only DOT 4 fluid from a sealed container.


Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if

you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration.

If the chain does not move smoothly, makes strange noises, has damaged rollers or loose pins or missing O-rings, or kinks, have the chain inspected by your dealer.

Also inspect the front sprocket and rear wheel sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.

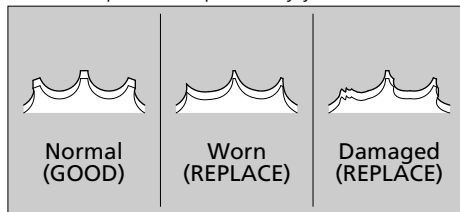

NOTICE

User of a new chain with worn sprockets will cause rapid chain wear.


I Cleaning and Lubricating

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant:

Pro Honda HP Chain lube or equivalent

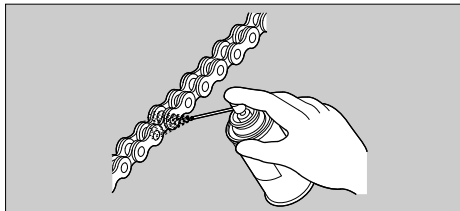

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as gasoline and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tires. Avoid applying excess chain lubricant to prevent spray onto your clothes and the motorcycle.

Recommended Coolant

Pro Honda HP coolant is a pre-mixed solution of antifreeze and distilled water.

Concentration:

50% antifreeze and 50% distilled water

Maintenance Fundamentals

A concentration of antifreeze below 40% will not provide proper corrosion and cold temperature protection.

A concentration of up to 60% will provide better protection in colder climates.

NOTICE

Using coolant not specified for aluminum engines or using ordinary tap water can cause corrosion.


Tires (Inspecting/Replacing)

Checking the Air Pressure

Visually inspect your tires and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tires look low. Always check air pressure when your tires are cold.


Inspecting for Damage

Inspect the tires for cuts, slits, or cracks that exposes fabric or cords, or nails or other foreign objects embedded in the side of the tire or the tread. Also inspect for the bumps or bulges in the side walls of the tires.

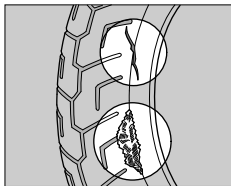


Inspecting for Abnormal Wear

Inspect the tires for signs of abnormal wear on the contact surface.

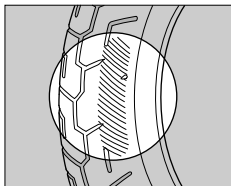

Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tires immediately. For safe riding, you should replace the tires when the minimum tread depth is reached.

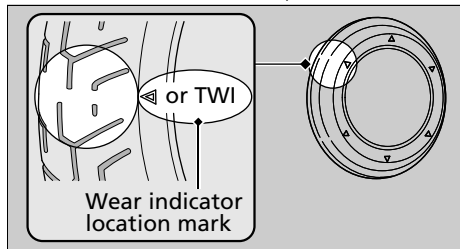

⚠️ WARNING

Riding on tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Maintenance Fundamentals

Have your tires replaced by your dealer. For recommended tires, air pressure and minimum tread depth, see "Specifications."

➤ P. 152

Follow these guidelines whenever you replace tires.

- Use the recommended tires or equivalents of the same size, construction, speed rating, and load range.
- Have the wheel balanced with Honda Genuine balance weights or equivalent after the tire is installed.
- Do not install a tube inside a tubeless tire on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tires on this motorcycle. The rims are designed for tubeless tires, and during hard acceleration or braking, a tube-type tire could slip on the rim and cause the tire to rapidly deflate.

WARNING

Installing improper tires on your motorcycle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

Tire Service Life

The service life of your tires is dependent on many factors, including, but not limited to, riding habits, road conditions, vehicle loading, tire air pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to your regular inspections and maintenance, it is recommended that you have annual inspections performed once the tires reach 5 years old. It is also recommended that all tires be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

The last four digits of the TIN (tire identification number) indicate the date of manufacture.

Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters located on the sidewall of the tire.


① ② ③

DOT XXXX XXXX 22 09

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.


- ① XXXX: Factory code
- ② XXXX: Tire type code
- ③ 22 09: Date of manufacture (week & year).
Example: week 22 in year 09.

Tire Labeling Example

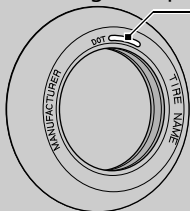

Tire identification number (TIN)

Front Seat

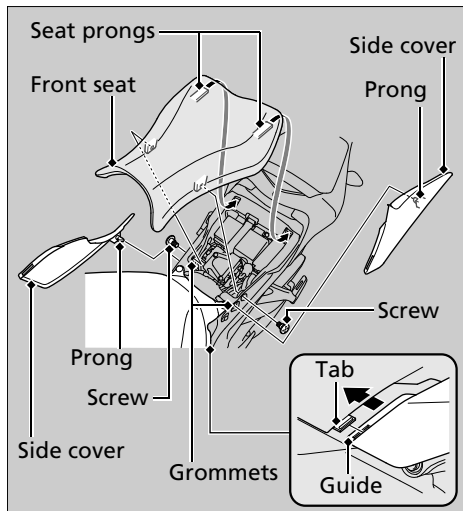

Removal


1. Remove the right and left side covers by releasing the tabs from the guides, and carefully pull the side cover out from the grommets.
2. Remove the screws, and then pull the front seat forward and up.

Installation

1. Insert the seat prongs into the recess.
2. Install and tighten the screws securely.
3. Install the side covers by inserting the tabs into the guides, and align the side covers prong with the grommets.
Make sure that the seat is locked securely in position to pull it up lightly.

Rear Seat

CBR1000RR/RA only

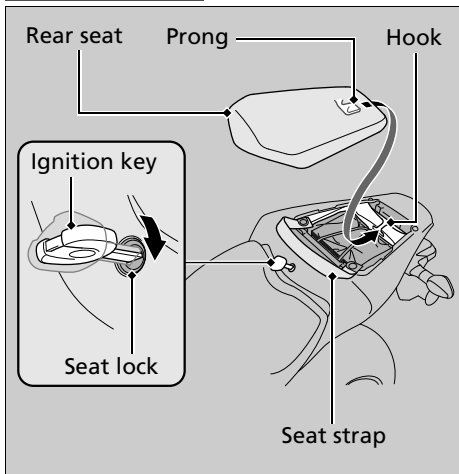

Removal


1. Move the seat strap forward.
2. Insert the ignition key into the seat lock.
3. Turn it clockwise, then pull the rear seat forward and up.

Installation

1. Insert the prong into the hook.
 2. Push down on the front of the rear seat.
Make sure that the seat is locked securely in position to pull it up lightly.
- The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.

Single Seat Cowl

CBR1000S

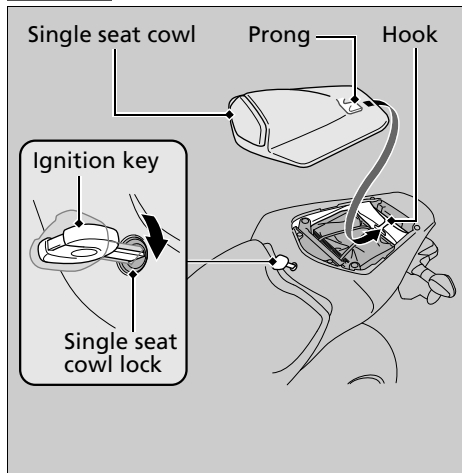

Removal

1. Insert the ignition key into the single seat cowl lock.
2. Turn it clockwise, then pull the single seat cowl forward and up.

Installation


1. Insert the prong into the hook.
2. Push down on the front of the single seat cowl.

Make sure that the single seat cowl is locked securely in position to pull it up lightly.

The single seat cowl locks automatically when closed.

Take care not to lock your key in the compartment under the single seat cowl.

Lower Fairing

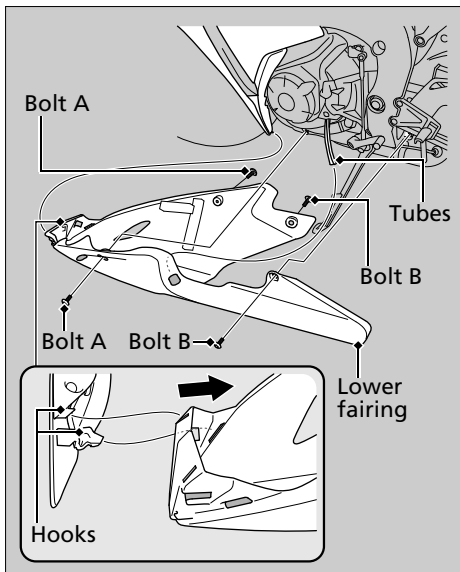

The lower fairing must be removed to change the oil filter.

Removal

1. Remove the bolts A and bolts B.
2. Remove the lower fairing carefully release the guides from hooks of the middle fairing side as shown in the illustration.


Installation

Install the parts in the reverse order of removal.


Route the tubes through the opening of the lower fairing.

Battery

CBR1000RR/S

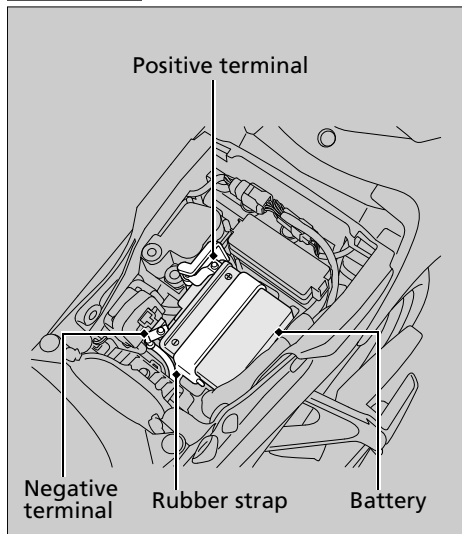

CBR1000RA

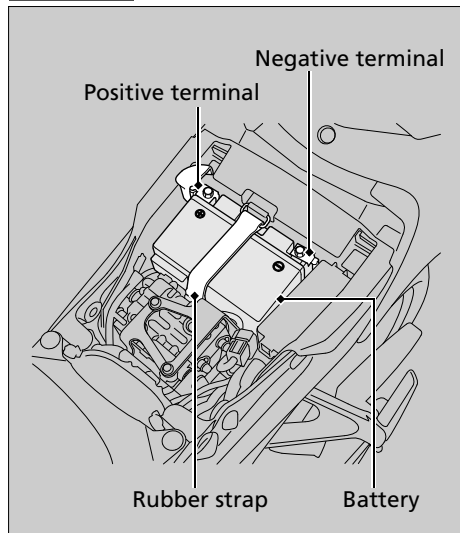

Removal

Make sure the ignition switch is off.

1. Remove the front seat. ➤ P. 70
2. Unhook the rubber strap.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation


Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

Readjust the clock after the battery is reconnected since the clock goes wrong once the battery disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 60
Battery Goes Dead ➤ P. 118

Checking the Engine Oil

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
3. Remove the dipstick and wipe it clean.
4. Place your motorcycle in an upright position on a firm, level surface.
5. Insert the dipstick until it seats, but don't screw it in.
Check that the oil level is between the upper and lower level marks in the dipstick.
6. Securely install the dipstick.

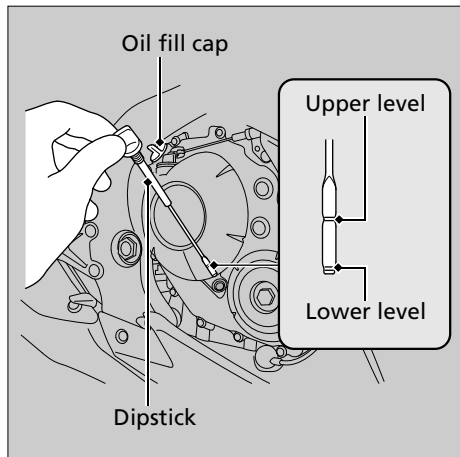

Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 63

1. Remove the oil fill cap. Add the recommended oil until it reaches the upper level mark.
 - Place your motorcycle in an upright position on a firm, level surface when checking the oil level.
 - Do not overfill above the upper level mark.
 - Make sure no foreign objects enter the oil filler opening.
 - Wipe up any spills immediately.

2. Securely reinstall the oil fill cap.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see “Maintenance Fundamentals.” ► P. 63

Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your motorcycle serviced by your dealer.


Use a new Honda Genuine oil filter or equivalent specified for your model.

NOTICE


Using the wrong oil filter can result in serious damage to the engine.

1. Remove the lower fairing. ➤ P. 73
2. If the engine is cold, idle the engine for 3 to 5 minutes.
3. Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
4. Park on a firm, level surface and lower the side stand.
5. Place a drain pan under the drain bolt.

6. Remove the oil fill cap, drain bolt, and sealing washer to drain the oil.

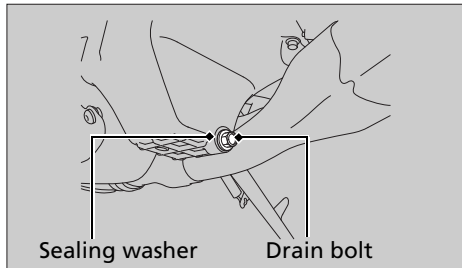

7. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
 - Discard the oil and oil filter at an approved recycling center.

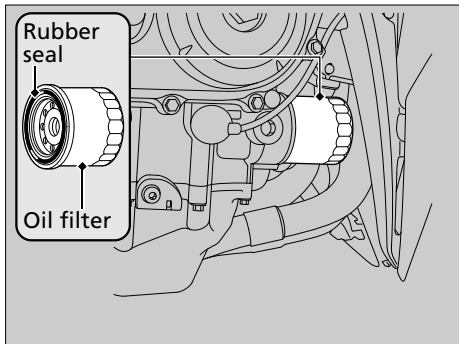

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install a new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m).

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m).

11. Fill the crankcase with the recommended oil (► P. 63) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

3.2 US qt (3.0 liters)


When changing oil only:

3.0 US qt (2.8 liters)

12. Check the oil level. ► P. 76
13. Check that there are no oil leaks.
14. Install the lower fairing.

Checking the Coolant

1. Place your motorcycle on a firm, level surface.
2. Hold your motorcycle in an upright position.
3. Check that the coolant level is between the upper and lower level marks in the reserve tank from the inspection window.

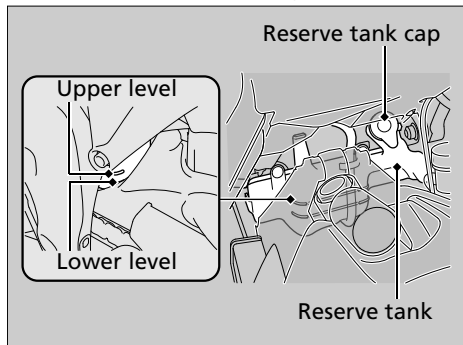

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your motorcycle inspected by your dealer.

Adding Coolant

If the coolant level is below the lower level, add the recommended coolant (▶ P. 65) until the level reaches the upper level mark.

Add fluid only from the reserve tank cap and do not remove the radiator cap.

1. Remove the reserve tank cap and add fluid while monitoring the coolant level.
 - ▶ Do not overfill above the upper level mark.
 - ▶ Make sure no foreign objects enter the reserve tank opening.
2. Securely reinstall the cap.

WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


Changing Coolant

Have your dealer change the coolant unless you have the proper tools and are mechanically qualified.

Checking Brake Fluid

1. Place your motorcycle in an upright position on a firm, level surface.
2. Check that the brake fluid reservoir is horizontal and that the level is between the LOWER level and UPPER level marks.

If the brake fluid level in either reservoir is below the LOWER level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear. If the brake pads are not worn, you most likely have a leak. Have your motorcycle inspected by your dealer.

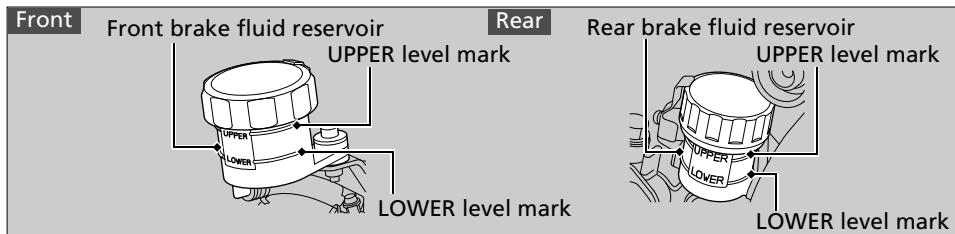


Inspecting the Brake Pads

Check the condition of the brake pad groove wear indicators.

Front The pads need to be replaced if a brake pad is worn to the bottom of the indicator.

Rear The pads need to be replaced if a brake pad is worn to the indicator.

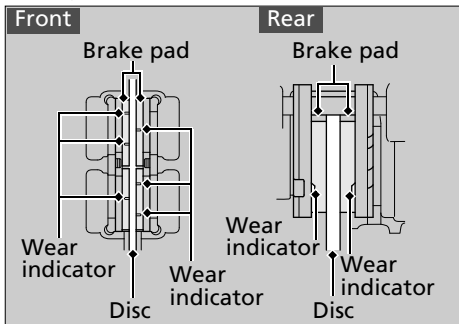


1. **Front** Inspect the brake pads from in front of the brake caliper.
 - Always inspect both left and right calipers.
2. **Rear** Inspect the brake pads from the rear right of the motorcycle.

If necessary have the pads replaced by your dealer.


Always replace both left and right brake pads at the same time.

Adjusting the Brake Light Switch

Check the operation of the brake light switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

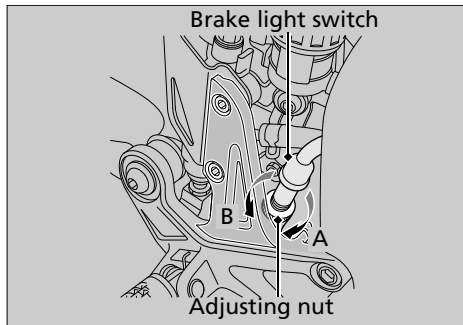

Side Stand

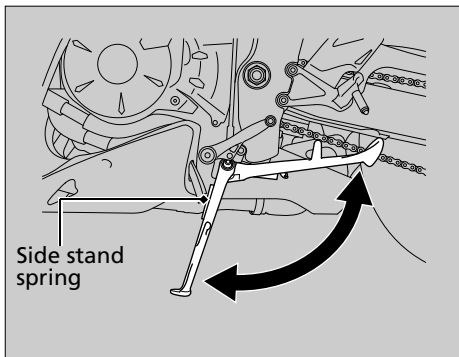

1. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
2. Check the spring for damage or loss of tension.
3. Sit on the motorcycle, put the transmission in Neutral, and raise the side stand.

4. Start the engine, pull the clutch lever in, and shift the transmission into gear.
5. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your motorcycle inspected by your dealer.

Inspecting the Drive Chain Slack

Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding.


Have the chain inspected by your dealer.

1. Stop the engine. Place the transmission in Neutral.
2. Place your motorcycle on the side stand on a level surface.
3. Check the slack in the lower half of the drive chain midway between the sprockets.

Drive chain slack:

1 to 1 3/8 in (25 to 35 mm)

- ▶ Do not ride your motorcycle if the slack exceeds 1 15/16 in (50 mm).

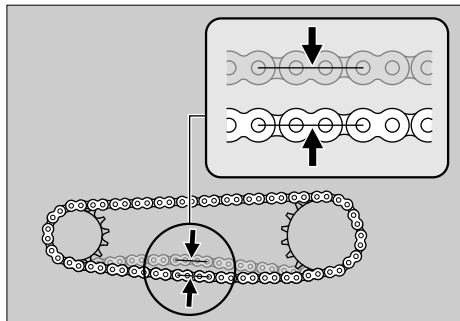

4. Roll the motorcycle forward and check that the chain moves smoothly.
5. Inspect the sprockets. ▶ P. 64
6. Clean and lubricate the drive chain. ▶ P. 65



Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

CBR1000RA only

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Stop the engine. Place the transmission in Neutral.
2. Place your motorcycle on the side stand on a level surface.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both adjusting bolts.

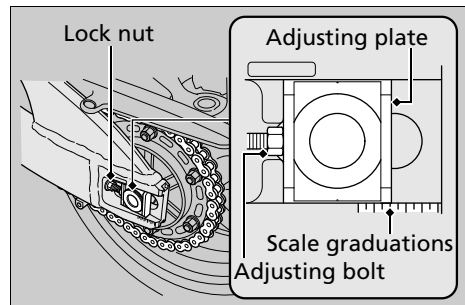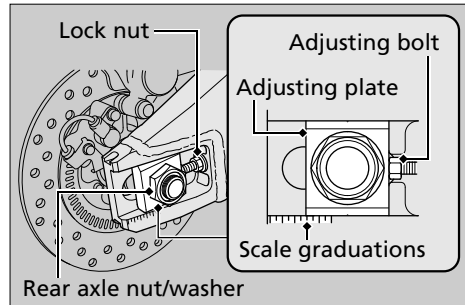

5. Turn both adjusting bolts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counterclockwise to tighten the chain. Turn the adjusting bolts clockwise and push the rear wheel toward the front to provide more slack.

Adjust the slack at a point midway between the front sprocket and the rear wheel sprocket.

Check the drive chain slack. ➤ [P. 86](#)

6. Check rear axle alignment by making sure the end of the chain adjusting plate aligns with the scale graduations on both sides of the swingarm.

Both marks should correspond. If the axle is misaligned, turn the right or left adjusting bolt until the marks are aligned and recheck chain slack.

7. Tighten the rear axle nut.

CBR1000RR/RA

Torque: 83 lbf·ft (113 N·m, 11.5 kgf·m).

CBR1000S

Torque: 91 lbf·ft (124 N·m, 12.6 kgf·m).

8. Hold the adjusting bolts and tighten the lock nuts.
9. Recheck drive chain slack.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.


Checking the Drive Chain Wear

Check the chain wear label when adjusting the drive chain. If the front edge of the adjusting plate enters the red zone on the label after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

Chain:

DID 50VA11 or RK 50HFOZ6

If necessary have the drive chain replaced by your dealer.

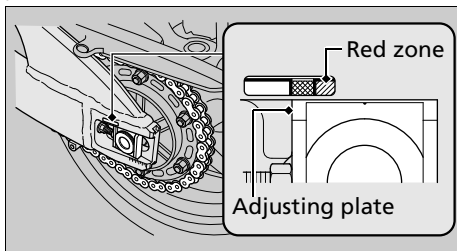


Checking the Clutch

Checking the Clutch Lever Freeplay

Check the clutch lever freeplay.

Freeplay at the clutch lever:

3/8 to 13/16 in (10 to 20 mm)

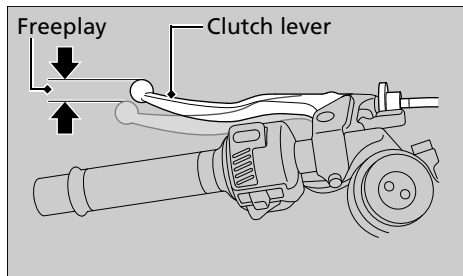

Check the clutch cable for kinks or signs of wear. If necessary have it replaced by your dealer.


Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Adjusting the Clutch Lever Freeplay

Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

Turn the clutch cable adjuster until the freeplay is $\frac{3}{8}$ to $\frac{13}{16}$ in (10 to 20 mm).

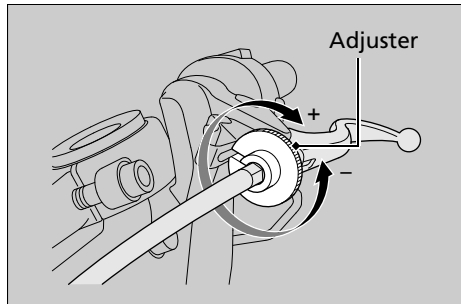


Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower adjusting nut.

1. Turn the upper clutch cable adjuster all the way in (to provide maximum freeplay).

Clutch ► Adjusting the Clutch Lever Freeplay

2. Loosen the lower lock nut.
3. Turn the adjusting nut until the clutch lever freeplay is $\frac{3}{8}$ to $\frac{13}{16}$ in (10 to 20 mm).
4. Tighten the lower lock nut and check the clutch lever freeplay.
5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

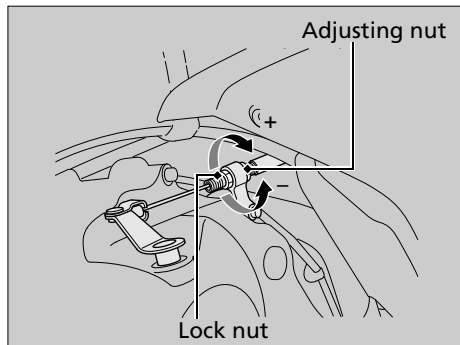


If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.

Checking the Throttle


With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly, close automatically, or if the cable is damaged, have the motorcycle inspected by your dealer.

Freeplay at the throttle grip flange:
1/16 to 3/16 in (2 to 4 mm).

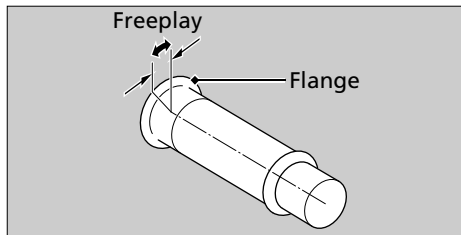

Adjusting the Throttle Freeplay

1. Slide the cable boot.
2. Loosen the lock nut.
3. Turn the adjuster until the freeplay is 1/16 to 3/16 in (2 to 4 mm).
4. Tighten the lock nut, return the cable boot, and inspect the throttle action again.

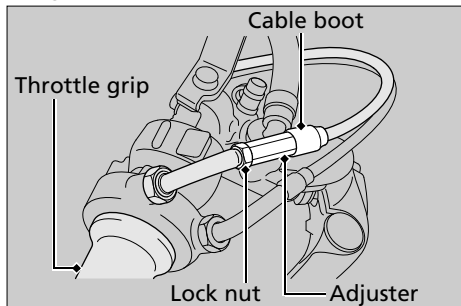

Adjusting the Brake Lever

You can adjust the distance between the tip of the brake lever and handle grip.


Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.

After adjustment, check that the levers operate correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

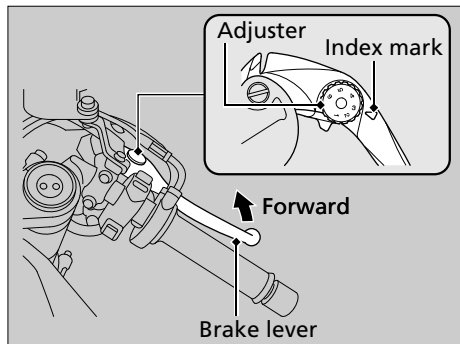


Adjusting the Front Suspension

CBR1000RR/RA

Spring Preload


You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is the 7 1/2 turns from the full soft position.

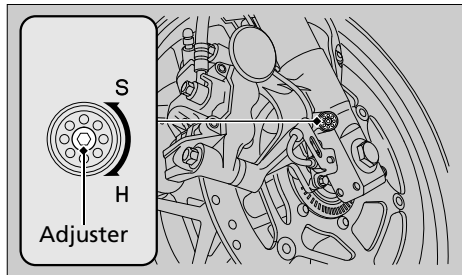

Rebound Damping

You can adjust the rebound damping by the TEN adjuster to suit the load or the road surface.


Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft). The standard position is 4 1/2 turns from the full hard position.

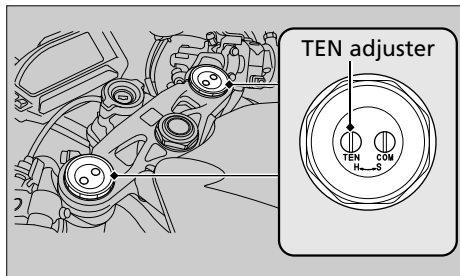

Compression Damping

You can adjust the compression damping by the COM adjuster to suit the load or the road surface.

Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is 5 1/2 turns from the full hard position.

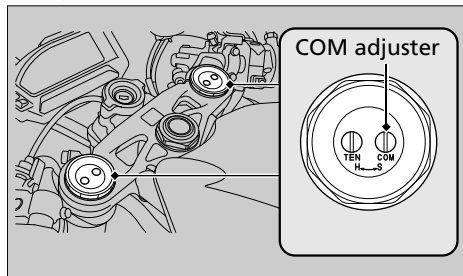

NOTICE

Do not turn the adjuster beyond its limits. Adjust both left and right forks to the same spring preload, rebound damping and compression damping.

CBR1000S


Spring Preload

You can adjust the spring preload by the PRELOAD adjuster to suit the load or the road surface.

Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft).

The standard position is the 6 turns from the full soft position. Also the position for race tracks is the 6 turns from the full soft position.

- When adjusting, be careful not to damage the adjuster.

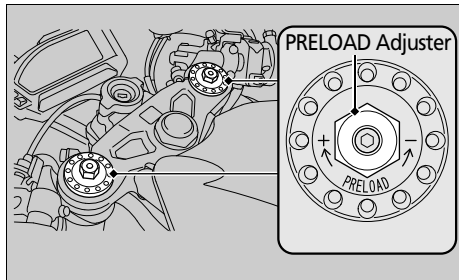


Rebound Damping

You can adjust the rebound damping by the REB adjuster on the right side of the front fork to suit the load or the road surface.

Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft).

The standard position is 12 clicks from the full hard position. The position for race tracks is the 14 clicks from the full hard position.

► When adjusting, be careful not to damage the adjuster.

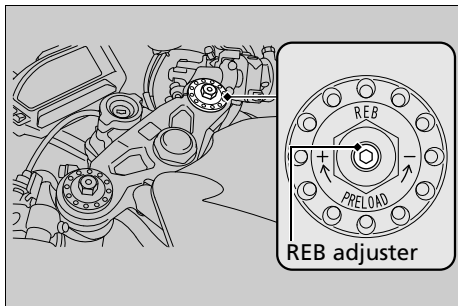


Compression Damping

You can adjust the compression damping by the COMP adjuster on the left side of the front fork to suit the load or the road surface. Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft).

The standard position is 12 clicks from the full hard position. The position for race tracks is the 10 clicks from the full hard position.

► When adjusting, be careful not to damage the adjuster.

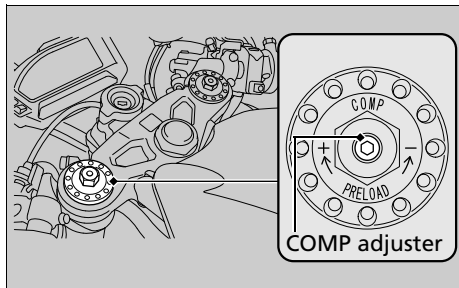

NOTICE


Do not turn the adjuster beyond its limits. Adjust both left and right forks to the same spring preload.

Adjusting the Rear Suspension

CBR1000RR/RA

Spring Preload


You can adjust the spring preload by the adjuster to suit the load or the road surface. Use a suitable pin spanner to turn the adjuster. Positions 1 to 3 are for a decrease spring preload (soft), or turn the position 5 to 10 increase spring preload (hard). The standard position is 4.

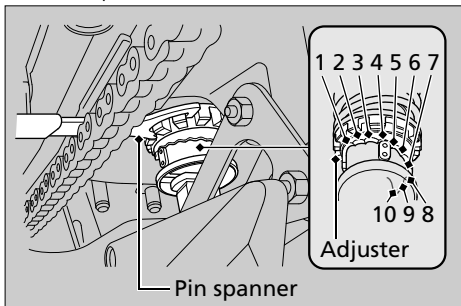

Rebound Damping

You can adjust the rebound damping by the TEN adjuster to suit the load or the road surface.


Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft). The standard position is 2 1/2 turns from the full hard position.

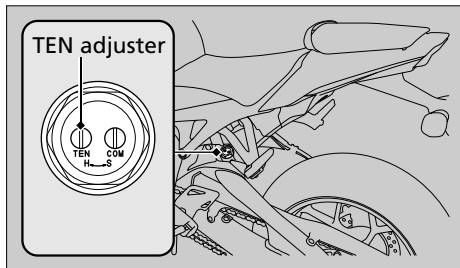

Compression Damping

You can adjust the compression damping by the COM adjuster to suit the load or the road surface.

Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is 2 turns from the full hard position.

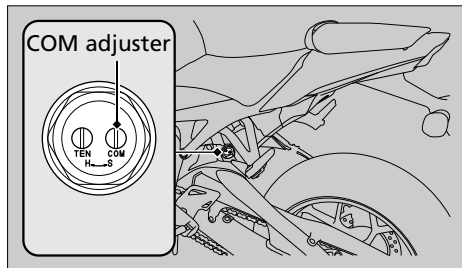

NOTICE

Do not turn the adjuster beyond its limits.


NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.

CBR1000S

Spring Preload


You can adjust the spring preload by the adjuster knob to suit the load or the road surface. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is 6 turns from the full hard position. The position for race tracks is 2 turns from the full hard position.

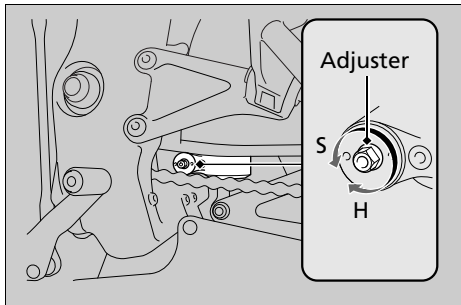

Rebound Damping

You can adjust the rebound damping by the REB adjuster to suit the load or the road surface.


Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft). The standard position is 16 clicks from the full hard position. The position for race tracks is 10 clicks from the full hard position.

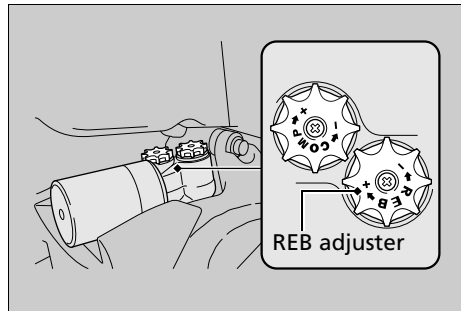

Compression Damping

You can adjust the compression damping by the COMP adjuster to suit the load or the road surface.

Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is 15 clicks from the full hard position. The position for race tracks is 12 clicks from the full hard position.

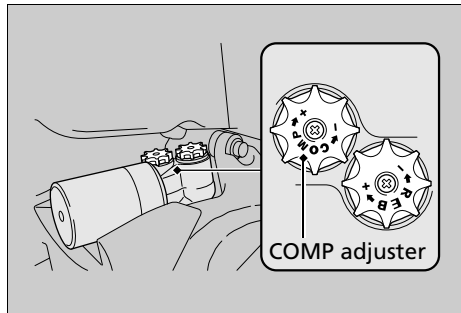

NOTICE


Do not turn the adjuster beyond its limits.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the screw using a Phillips screwdriver provided in the tool kit (► P. 49) in or out as necessary. Obey local laws and regulations.

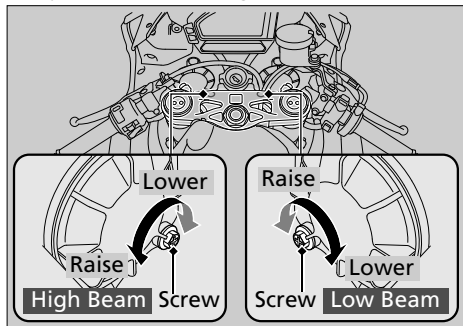


Troubleshooting

| | | | |
|---|--------|---------------------------------|--------|
| Engine Will Not Start | P. 106 | Tire Puncture | P. 110 |
| Overheating (High coolant temperature indicator is on) | P. 107 | Electrical Trouble | P. 118 |
| Warning Indicators On or Flashing | P. 108 | Battery Goes Dead | P. 118 |
| Low Oil Pressure Indicator | P. 108 | Burned-out Light Bulb | P. 118 |
| PGM-FI (Programmed Fuel Injection) | | Blown Fuse..... | P. 123 |
| Malfunction Indicator Lamp (MIL)..... | P. 108 | | |
| Combined ABS Indicator | P. 109 | | |
| HESD (Honda Electronic Steering Damper) Indicator | P. 109 | | |

Engine Will Not Start


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position [P. 44](#)
- Check the correct engine starting sequence [P. 46](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is RUN  position [P. 44](#)
- Check for a blown fuse [P. 123](#)
- Check for a loose battery connection or battery terminal corrosion [P. 74](#)
- Check the condition of the battery [P. 118](#)

If the problem continues, have your motorcycle inspected by your dealer.

Overheating (High coolant temperature indicator is on)

The engine is overheating when the following occurs:

- High coolant temperature indicator comes on.
- Acceleration becomes sluggish.

If this occurs, pull safely to the side of the road and perform the following procedure. Extended fast idling may cause the high coolant temperature indicator comes on.

NOTICE

Continuing to ride with an overheated engine can cause serious damage to the engine.

1. Stop the engine using the ignition switch, and then turn the ignition switch to the ON position.

2. Check that the radiator fan is operating, and then turn the ignition switch to the OFF position.

If the fan is not operating:

Suspect a fault. Do not start the engine. Transport your motorcycle to your dealer.

If the fan is operating:

Allow the engine to cool with the ignition switch in the OFF position.

3. After the engine has cooled, inspect the radiator hose and check if there is a leak.

➔ P. 80

If there is a leak:

Do not start the engine. Transport your motorcycle to your dealer.

4. Check the coolant level in the reserve tank, and add coolant as necessary.

➔ P. 80

5. If 1-4 check normal, you may continue riding, but closely monitor the temperature gauge.

Low Oil Pressure Indicator

If the low oil pressure indicator comes on, pull safely to the side of the road and stop the engine.

NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary. ➤ [P. 76](#)
2. Start the engine.
 - ▶ Only continue riding if the low oil pressure indicator goes off.

Rapid acceleration may momentarily cause the low oil pressure indicator to come on, especially if the oil is at or near the low level. If the low oil pressure indicator stays on when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your motorcycle may have a leak or another serious problem. Have your motorcycle inspected by your dealer.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your motorcycle inspected by your dealer as soon as possible.

Combined ABS Indicator

CBR1000RA only

If the Combined ABS indicator operates in one of the following ways, your brakes will continue to work as a conventional system, but without the Combined ABS function. Reduce your speed and have your motorcycle inspected by your dealer as soon as possible.

- Indicator does not come on when the ignition switch is in the ON position
- Indicator does not go off at speeds above 6 mph (10 km/h)
- Indicator comes on or starts flashing while riding

The Combined ABS indicator may flash if:

- The front wheel leaves the ground for 1 second or more
- Either brake is applied continuously from 0 mph (0 km/h) to 31 mph (50 km/h)
- You turn the rear wheel while your motorcycle is lifted off the ground

This is normal but the Combined ABS is not in operation. To activate the system again, turn the ignition off, then on again.

HESD (Honda Electronic Steering Damper) Indicator

If the indicator comes on while riding, you may have a serious problem with the HESD. Reduce speed and have your motorcycle inspected by your dealer as soon as possible.

Tire Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tire inspected/replaced by your dealer.

Emergency Repair Using a Tire Repair Kit

If your tire has a minor puncture, you can make an emergency repair using a tubeless tire repair kit.

Follow the instructions provided with the emergency tire repair kit.

Riding your motorcycle with a temporary tire repair is very risky. Do not exceed 30 mph (50 km/h). Have the tire replaced by your dealer as soon as possible.

WARNING

Riding your motorcycle with a temporary tire repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire is replaced.

Removing Wheels


Follow these procedures if you need to remove a wheel in order to repair a puncture.

CBR1000RA only

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel**Removal**

1. Park on a firm, level surface.
2. Cover both sides of the front wheel and brake caliper with protective tape or cloth.

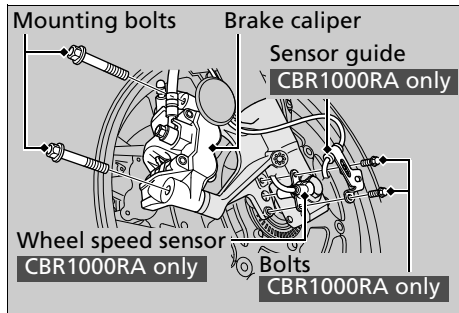
**3. CBR1000RA only**

Remove the wheel speed sensor by removing the bolts.


4. On the right side, remove the mounting bolts and remove the brake caliper.
 - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not pull the brake lever or push the brake pedal while the brake caliper is removed.
 - Take care to prevent the brake caliper from scratching the wheel during removal.
5. On the left side, remove the mounting bolts and remove the brake caliper.
 - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not pull the brake lever or push the brake pedal while the brake caliper is removed.
 - Take care to prevent the brake caliper from scratching the wheel during removal.

Tire Puncture ► Removing Wheels

6. Remove the front axle bolt.
7. Loosen the right axle pinch bolts.
8. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.

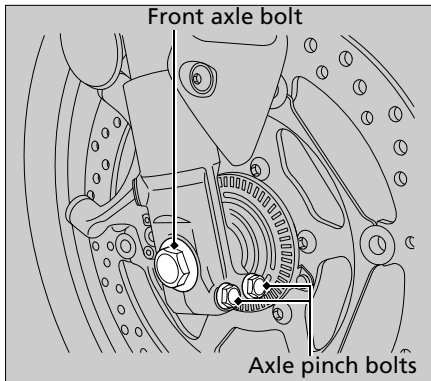


9. Loosen the left axle pinch bolts.
10. On the left side, withdraw the front axle shaft, and remove the side collars and wheel.

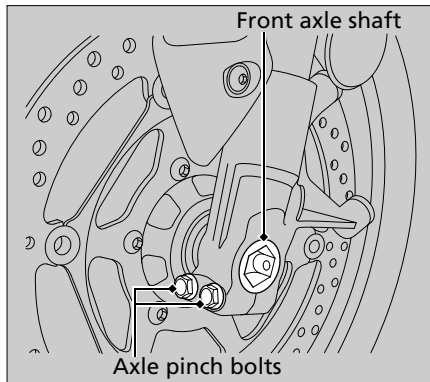

Installation

1. Attach the side collars to the wheel.
2. On the left side, place the wheel between the fork legs and insert the lightly greased front axle shaft to the end, through the left fork leg and wheel hub.
3. Align the end of the front axle shaft with the surface of the fork leg.

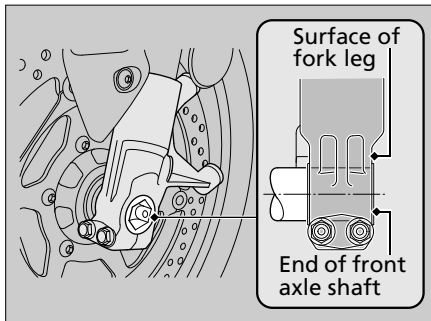

4. Tighten the left axle pinch bolts to hold the axle.
5. Tighten the axle bolt.

Torque: 58 lbf·ft (79 N·m, 8.1 kgf·m).

6. Loosen the left axle pinch bolts.
7. Tighten the right axle pinch bolts.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

8. Install the right brake caliper and tighten the mounting bolts.

CBR1000RR/RA

Torque: 33 lbf·ft (45 N·m, 4.6 kgf·m).

CBR1000S

Torque: 30 lbf·ft (40 N·m, 4.1 kgf·m).

9. Install the left brake caliper and tighten the mounting bolts.

CBR1000RR/RA

Torque: 33 lbf·ft (45 N·m, 4.6 kgf·m).

CBR1000S

Torque: 30 lbf·ft (40 N·m, 4.1 kgf·m).

- Take care to prevent the brake caliper from scratching the wheel during installation.
- Use new mounting bolts when installing the brake caliper.

NOTICE

When installing the brake calipers into position on the fork legs, carefully fit the brake disc between the pads to avoid scratching them.

10. Lower the front wheel on the ground.
11. Apply the brake lever several times. Then, pump the fork several times.

12. Retighten the left axle pinch bolts.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

13. Raise the front wheel off the ground again, and check that the wheel rotates freely after you release the brake.

14. **CBR1000RA only**

Install the wheel speed sensor, sensor guide and tighten the bolts, then check the clearance between the wheel speed sensor and the pulser ring.


15. Remove the protective tape or cloth.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.


I Rear Wheel

Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Loosen the rear axle nut, lock nuts and turn the adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Release the rear axle nut/washer.

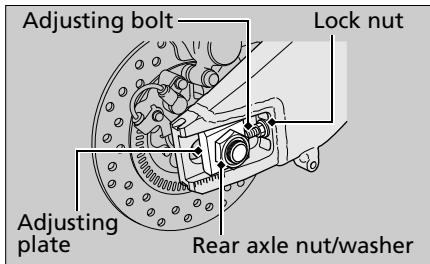

4. Remove the drive chain from the rear wheel sprocket by pushing the rear wheel forward.
5. Remove the rear axle shaft, adjusting plates.

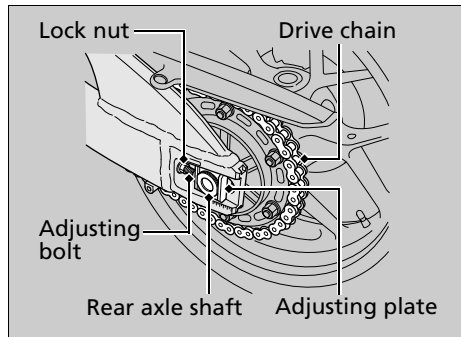

6. Remove the brake caliper bracket, rear wheel and side collars.
 - Support the brake caliper so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc to pad surfaces.
 - Do not push the brake pedal while the brake caliper is removed.


Installation

1. To install the rear wheel, reverse the removal procedure.
 - Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

2. Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

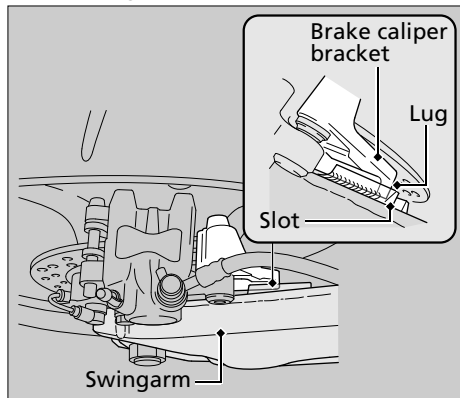

- Adjust the drive chain. [P. 87](#)
- Install and tighten the rear axle nut.

CBR1000RR/RA

Torque: 83 lbf·ft (113 N·m, 11.5 kgf·m).

CBR1000S

Torque: 91 lbf·ft (124 N·m, 12.6 kgf·m).

- After installing the wheel, apply the brake pedal several times, then recheck the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the motorcycle before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

If the battery does not recover after recharging, contact your dealer.

NOTICE

Jump starting using an automobile battery is not recommended, as this can damage your motorcycle's electrical system.

Burned-out Light Bulb

Follow the procedure below to replace a burned-out light bulb.


Turn the ignition switch to the OFF or LOCK position.

Allow the bulb to cool before replacing it. Do not use bulbs other than those specified.

Check the replacement bulb for correct operation before riding.

For the light bulb wattage, see "Specifications." ➔ [P. 153](#)

I Headlight Bulb

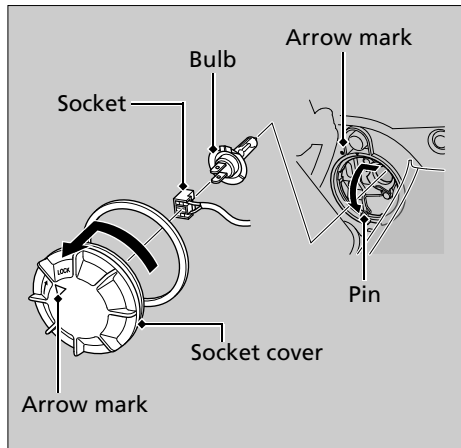


1. Remove the socket cover by turning it counterclockwise.
2. Pull the socket off the bulb without turning it.

3. Press the pin down and pull out the bulb without turning it.
4. Install a new bulb and parts in the reverse order of removal.
 - Make sure the arrow marks on the socket cover and headlight housing are aligned.


Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.

Position Light

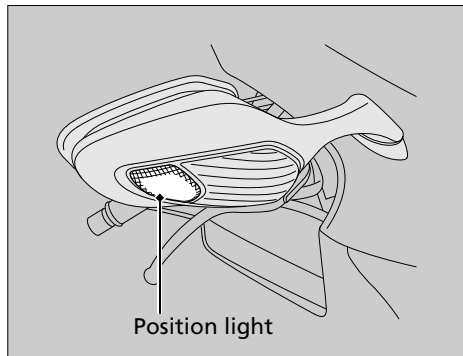

The position light uses several LEDs. If there is a LED which is not turned on, see your dealer for this service.


Brake/Taillight

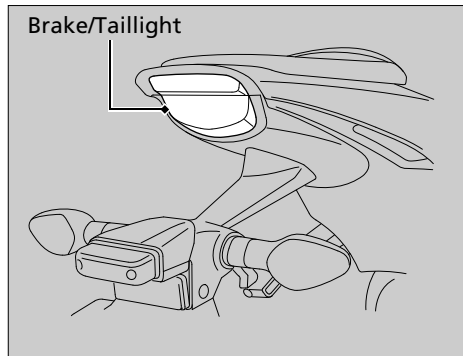


The brake and taillight uses several LEDs. If there is a LED which is not turned on, see your dealer for this service.

Front Turn Signal Bulb


1. Remove the screw.
2. Fold the rearview mirror.

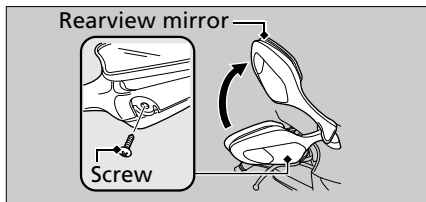

3. Remove the cover from the rearview mirror carefully in the procedure shown in the illustration.

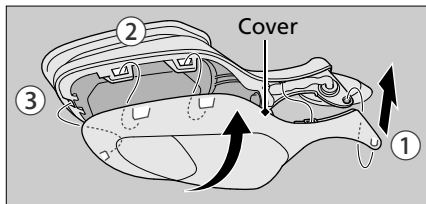

4. Turn the socket counterclockwise and pull it out.
5. Slightly press the bulb in and turn it counterclockwise.

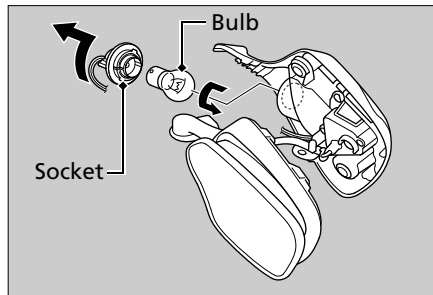


6. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.
7. Reinstall the cover and install the screw and tighten.

Torque: 0.7 lbf·ft (1.0 N·m, 0.1 kgf·m).

■ Rear Turn Signal Bulb


1. Remove the screw.
2. Remove the turn signal lens and lens packing.
3. Slightly press the bulb and turn it counterclockwise.

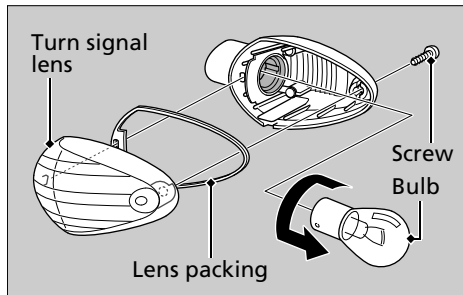

4. Install a new bulb in the reverse order of removal.
► Use only the amber bulb.

■ License Plate Light Bulb

1. Remove the screws.
2. Remove the license light cover and license light cover packing.
3. Pull the bulb out of the socket without turning it.

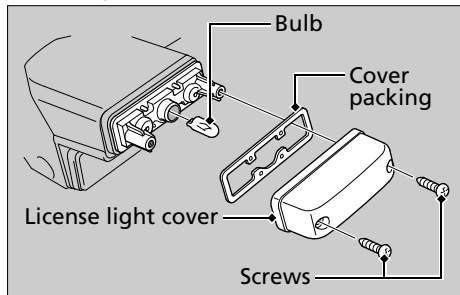


4. Install a new bulb in the reverse order of removal.
5. Reinstall the cover

Blown Fuse


Before handling fuses, see “Inspecting and Replacing Fuses.” [► P. 62](#)

Fuse Box Fuses

CBR1000RR/S

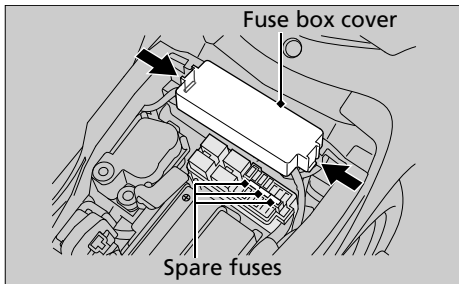

CBR1000RA

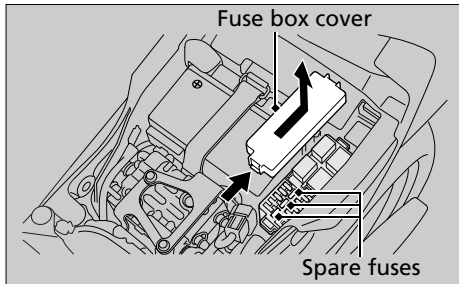


1. Remove the front seat. [► P. 70](#)
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.


Main Fuse & FI Fuse

1. Remove the front seat. ▶ P. 70
2. **CBR1000RR/S**
Remove the starter magnetic switch cover.
CBR1000RA
Open the main and FI fuse box cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
▶ Spare fuses are provided in the fuse box. ▶ P. 123
4. Reinstall parts in the reverse order of removal.

CBR1000RR/S

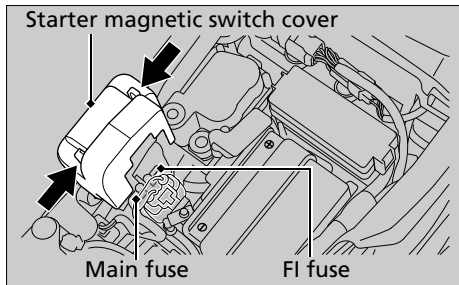


CBR1000RA

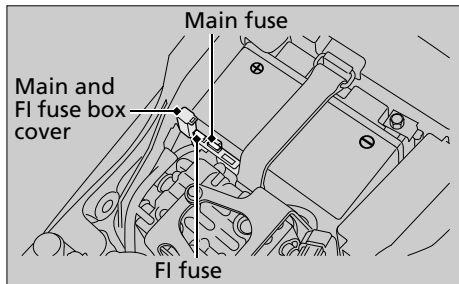

ABS Motor Fuses

CBR1000RA

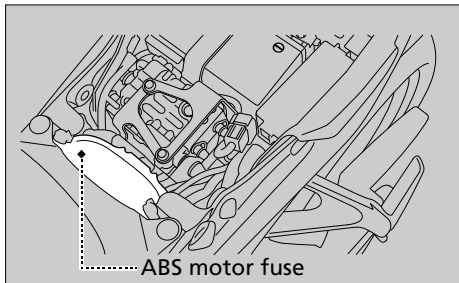

The ABS motor fuses are located on the starter magnetic switch.

To replace these fuses, the fuel tank must be removed.

The ABS motor fuses should be inspected by your dealer, unless the owner has proper tools and service data and is mechanically

qualified. Refer to an official Honda Service Manual.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

Information

| | |
|--|--------|
| Keys..... | P. 127 |
| Instruments, Controls, & Other Features... | P. 128 |
| Caring for Your Motorcycle..... | P. 130 |
| Storing Your Motorcycle | P. 134 |
| Transporting Your Motorcycle | P. 135 |
| You & the Environment..... | P. 136 |
| Vehicle Identification Number | P. 137 |
| Emission Control Systems..... | P. 138 |
| Catalytic Converter | P. 143 |
| Oxygenated Fuels | P. 144 |
| Authorized Manuals | P. 145 |
| Warranty Coverage and Service | P. 146 |

| | |
|---|---------------|
| Honda Contacts | P. 148 |
| USA Reporting Safety Defects | P. 150 |


Keys

Ignition key

This motorcycle has two ignition keys and a key tag with a key number and a bar code. Store the spare key and the key tag in a safe location.

To make a duplicate key, take the spare key and the key tag to your dealer or a locksmith. If you lose all keys and the key tag, the ignition switch assembly will probably have to be removed by your dealer to determine the key number.

A metal key holder may cause damage to the area surrounding the ignition switch.

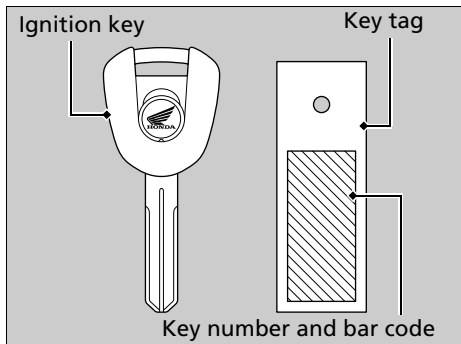

Instruments, Controls, & Other Features

Ignition Switch

The headlight is always on when the ignition switch is on. Leaving the ignition switch on with the engine stopped will drain the battery.

Do not turn the key while riding.

Engine Stop Switch

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch off. Failing to do so will drain the battery.

Odometer

The display locks at 999,999 when the read-out exceeds 999,999.

Tripmeter

Tripmeter A returns to 0 when the read-out exceeds 999.9.

Tripmeter B returns to 0 when the read-out exceeds 9,999.9.

Document Bag

CBR1000RR/RA

The owner's manual, registration, and insurance information can be stored in the plastic document bag located under the rear seat.

CBR1000S

The owner's manual, registration, and insurance information can be stored in the plastic document bag located under the single seat cowl.

Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the motorcycle falls over. To reset the sensor, you must turn the ignition switch to OFF and back to the ON position before the engine can be restarted.

HESD

The Honda Electronic Steering Damper (HESD) automatically controls the steering damper characteristics in accordance with vehicle speed and acceleration.

➤ **HESD Indicator Comes on** [P. 109](#)

Assist-slipper Clutch System

The assist-slipper clutch system helps to prevent the rear tire from locking up when the deceleration of your motorcycle produces a strong engine braking effect. It also makes the clutch lever operation feel lighter.

Use only MA classification engine oil for your motorcycle. Using engine oil other than MA classification oil could result in damage to the assist-slipper clutch system.

Caring for Your Motorcycle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean motorcycle makes it easier to spot potential problems.

In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Always wash your motorcycle thoroughly after riding on coastal or treated roads.

Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your motorcycle thoroughly using a garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the windscreen, headlight lens, panels, and other plastic components with extra care to avoid scratching them.

Avoid directing water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your motorcycle with plenty of clean water and dry with a soft, cloth.
4. After the motorcycle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tires. Brake discs, pads, drum or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the motorcycle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your motorcycle.
 - ▶ Keep the wax clear of the tires and brakes.
 - ▶ If your motorcycle has any matte painted parts, do not apply a coat of wax to the matte painted surface.

Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
- Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the rear seat:
 - ▶ Water in the under seat compartment can damage your documents and other belongings.
- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the

engine from starting.

- Do not direct water near the headlight:
 - ▶ Any condensation inside the headlight should dissipate after a few minutes of running the engine.
- Do not use waxes containing compounds at the matte painted surface:
 - ▶ Using plenty of water, clean the matte painted surface with a soft cloth or sponge. Dry with a soft, clean cloth.
 - ▶ Use neutral detergent to clean matte painted surface.

Aluminum Components

Aluminum will corrode from contact with dirt, mud, or road salt. Clean aluminum parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting gasoline, brake fluid, or detergents on the instruments, panels, or headlight.

Exhaust Pipe and Muffler

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel.

If necessary, remove heat stains by using a commercially available fine texture compound. Then rinse by the same manner as removing mud or dust.

When the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

NOTICE

Even though the exhaust is made of stainless steel, it can become stained. Remove all marks and blemishes as soon as they are noticed.

Windscreen

Using plenty of water, clean the windscreen with a soft cloth or sponge. (Avoid using detergents or any kind of chemical cleaner on the windscreen.) Dry with a soft, clean cloth.

NOTICE

To avoid possible scratching or other damage, use only water and a soft cloth or sponge to clean the windscreen.

For a dirtier windscreen, use a diluted neutral detergent with a sponge and plenty of water. Make sure to wash off all the detergent. (Detergent residue may cause windscreen cracks.)

Replace the windscreen if scratches cannot be removed and they obstruct clear vision.

Take care to keep battery electrolyte, brake fluid, or other chemical solvents off the windscreen and screen garnish. They will damage the plastic.

Storing Your Motorcycle

If you store your motorcycle outdoors, you should consider using a full-body motorcycle cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your motorcycle and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. ➔ P. 65
- Place your motorcycle on a maintenance stand and position a block so that both tires are off the ground.
- After rain, remove the body cover and allow the motorcycle to dry.
- Remove the battery (➔ P. 75) to prevent discharge. Charge the battery in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your motorcycle from storage, inspect all maintenance items required by the Maintenance Schedule.

USA For more information about storage, refer to the Honda Winter Storage Guide, available from your dealer.

Transporting Your Motorcycle


If your motorcycle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your motorcycle with a wheel or wheels on the ground.

NOTICE

Towing your motorcycle can cause serious damage to the transmission.

CBR1000S only

- Attach the lower ends of two straps to the tie-down hooks on truck bed or trailer rail. Attach the upper ends of the straps to the seat rails.
 - ▶ Must be attached to the position indicated on the illustration.

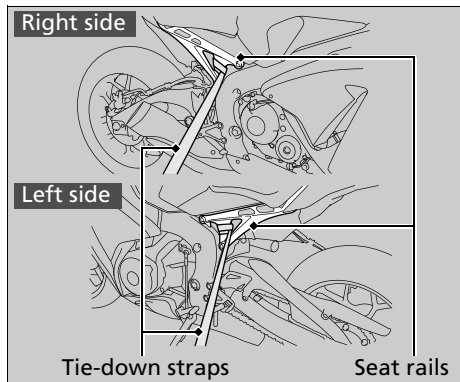

- Check that the tie-down straps do not contact any control cables or electrical wiring.
- We recommend that you do not transport your motorcycle on its side. This can damage the motorcycle, and leaking gasoline could be a hazard.

You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners

Use a biodegradable detergent when you wash your motorcycle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.

Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area, and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash, or pour it down a



drain or on the ground. Used oil, gasoline, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.


Vehicle Identification Number

The VIN and engine serial numbers uniquely identify your motorcycle and are required in order to register your motorcycle. They may also be required when ordering replacement parts. The VIN is stamped on the right side of the steering head and also appears on the Safety Certification Label attached to the left side of the frame.

The engine number is stamped on the front of the crankcase.

You should record these numbers and keep them in a safe place.

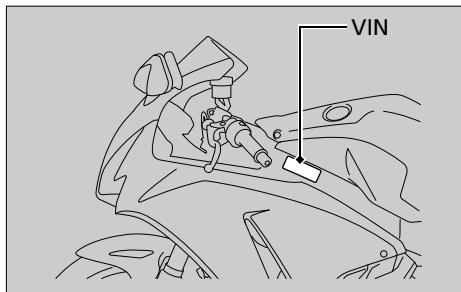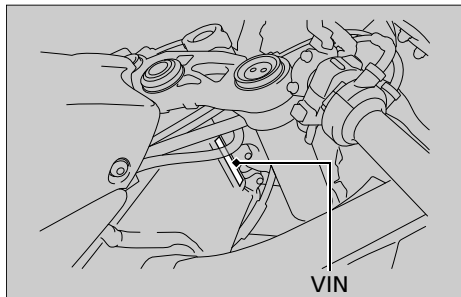

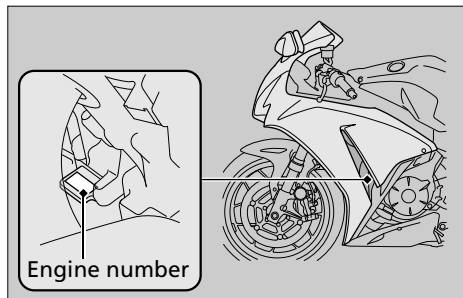

Emission Control Systems

Your motorcycle engine emits combustion by products, including carbon monoxide (CO), oxides of nitrogen (NOx), and hydrocarbons (HC). Gasoline evaporation also emits hydrocarbons. Controlling the production of NOx, CO, and HC is important for the environment.

Exhaust Emission Requirements

The U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Environment Canada (EC) require that your motorcycle comply with applicable exhaust, crankcase, and fuel permeation emission standards during its useful life, when operated and maintained according to the instructions provided.


CARB also requires that your motorcycle comply with applicable evaporative emission requirements during its useful life, when operated and maintained according to the instructions provided.

Compliance with the terms of the Distributor's Warranties for Honda Motorcycle Emission Control Systems is necessary in order to maintain a valid emissions system warranty (USA only). The Vehicle Emission Control Information label is located under the rear seat.

➔ P. 71

Canada only

Vehicle emission control information label

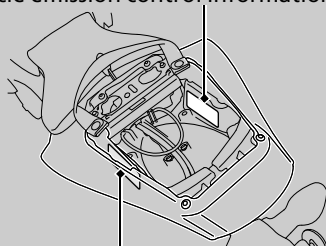

Vehicle emission control information label

Noise Emission Requirements

The EPA requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of purchase when operated and maintained according to the instructions provided.

Exhaust Emission Control System

The exhaust emission control system includes the following components that should not need adjustment, although periodic inspection by your Honda dealer is recommended.

PGM-FI System

The PGM-FI (programmed fuel injection) system uses sequential multiport fuel injection, and is comprised of air intake, engine control, fuel control, and exhaust control subsystems.

The engine control module (ECM) uses sensors to determine how much air enters the engine, and then controls how much fuel to inject.

Ignition Timing Control System

The ignition timing control system adjusts the ignition timing to reduce the amount of HC, CO, and NO_x produced.

Secondary Air Injection System

The secondary air injection system adds filtered air into the exhaust gas to help improve emission control performance.

Catalytic Converters

The exhaust system contains one or more catalytic converters. Catalytic converters use a catalyst to convert most of the harmful exhaust gas compounds into harmless compounds.

Evaporative Emission Control System

50 STATE (meets California)

An evaporative emissions control system uses a canister filled with charcoal to adsorb fuel vapor from the fuel tank while the engine is off. The vapor is drawn into the engine and burned while riding.

Crankcase Emissions Control System

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere.

Blow-by gas is returned to the combustion chamber through the air cleaner and the intake manifold.

Fuel Permeation Emission Control

The fuel tank, fuel hoses, and fuel vapor charge hoses use fuel permeation control technologies to prevent fuel vapor emissions.

Tampering with these components to reduce or defeat the effectiveness of the fuel permeation technologies is prohibited.

Noise Emission Control System

■ TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:

U. S. federal law prohibits, and Canadian provincial laws may prohibit, the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE FOLLOWING ACTS:

- Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
- Removal of, or puncturing of any part of the intake system.
- Lack of proper maintenance.
- Removing or disabling any emissions compliance component, or replacing any compliance component with a non-compliant component.

Problems Affecting Motorcycle Exhaust Emissions

Have your motorcycle inspected and repaired by your dealer if you experience any of the following symptoms:

- Hard starting or stalling after starting
- Rough idling
- Misfiring or backfiring during acceleration
- Poor engine performance and poor fuel economy

Catalytic Converter

This motorcycle is equipped with a three-way catalytic converter. The catalytic converter contain precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gasses into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your motorcycle's catalytic converter.

- Always use unleaded gasoline. Leaded gasoline will damage the catalytic converter.
- Keep the engine in good running condition. A poorly running engine can cause the catalytic converter to overheat causing damage to the converter or the motorcycle.
- If your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine. Have your motorcycle serviced as soon as possible.

Oxygenated Fuels

Some conventional fuels blended with alcohol or an ether compound are available in some locales to help reduce emissions to meet clean air standards. These gasolines are collectively referred to as oxygenated fuels. If you plan to use oxygenated fuel, check that it is unleaded and meets the minimum octane rating and blend requirement.

The following fuel blends are EPA-approved and have been approved use in your motorcycle:

- Ethanol (ethyl alcohol) up to 10% by volume.
 - ▶ Gasoline containing ethanol may be marketed under the name Gasohol.
- Methanol (methyl alcohol) up to 5% by volume that contain cosolvents and corrosion inhibitors to protect the fuel system. Never use a blend containing more than 5%.

If you accidentally fill your fuel tank with an oxygenated fuel containing higher percentages, you may experience performance problems. To resolve the problem, have your dealer drain the fuel tank and replace with the correct fuel. Fuel system or performance problems resulting from the use of an oxygenated fuel containing higher percentages are not covered by your warranty.

NOTICE

Improper use of oxygenated fuels can damage metal, rubber, and plastic parts of your fuel system.

Oxygenated fuel can also damage paint. Damage caused by spilled fuel is not covered by warranty.

If you notice any undesirable operating symptoms or performance problems, try a different brand of gasoline.

Authorized Manuals

The Service Manual used by your authorized dealer is available from your Honda dealer or Helm, Inc.

(USA only, Canada: See your dealer to order authorized manuals.)

Also available, but not necessary to service your model, is the Honda Common Service Manual, which explains basic service information for

various systems on Honda motorcycles, scooters, and all-terrain vehicles.

These Honda manuals are written for the professional technician. However, if you possess the proper tools, observe the safety standards, and are mechanically capable, you should find them easy to use.

Special Honda tools are necessary for some procedures.

| Publication Item No. | Description |
|----------------------|------------------------------------|
| 61MGP02 | 2014 CBR1000RR/RA/S Service Manual |
| 61CSM00 | Common Service Manual |
| 31MGP620 | 2014 CBR1000RR/RA/S Owner's Manual |

Order On-Line: www.helminc.com

Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)

(NOTE: For Credit Card Orders Only)

Monday – Friday 8:00 AM – 6:00 PM EST

Warranty Coverage and Service

Coverage

Your new Honda is covered by the following warranties:

- Motorcycle Limited Warranty
- Emission Control System Warranty
- Noise Control Warranty (USA only)

The responsibilities, restrictions, and exclusions that apply to these warranties are explained in the Warranties Booklet given to you by your Honda dealer at the time of purchase. Always keep your Honda owner's card with your Warranties Booklet.

Canada Please refer to the Warranty Booklet posted on our website at www.honda.ca.

It is important to realize that your warranty applies only to defects in material or workmanship of your Honda. Your warranty coverage does not apply to the normal wear and deterioration associated with use of the motorcycle.

Your warranty coverage is not voided if you perform your own maintenance. However, failures that occur due directly to improper maintenance are not covered by these warranties.

You can extend almost all of your warranty coverage through the Honda Protection Plan (USA only). For more information, see your Honda dealer.

Service

Please remember that maintenance recommended in the Maintenance Schedule is not included in your warranty coverage.

If you believe you have a problem with your motorcycle, call the service department of your Honda dealer. Make an appointment for an inspection and diagnosis. You will be asked to authorize that inspection, and your dealer will return the results of the inspection. If a problem exists and is covered under warranty, your dealer will perform the warranty repairs. If you have any questions about your warranty coverage or the nature of the repair, talk to the Service Manager of your Honda dealer.

If a misunderstanding occurs and you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If you are still not satisfied, contact the owner of the dealership or their designated representative.

Honda Contacts

American Honda Motor Co., Inc.

If you wish to contact Honda directly to comment on your experiences with your motorcycle or with your dealer, please send your comments to the following address:

Motorcycle Division,
American Honda Motor Co., Inc.,
P.O. Box 2200, Torrance,
CA 90509-2200
Mailstop: 100-4C-7B,
Telephone: (866) 784-1870.

Canada

Honda Canada Inc.
Customer Relations Department,
180 Honda Boulevard
Markham, Ontario
L6C 0H9
Telephone: (888) 946-6329
Fax: (877) 939-0909

E-mail: honda_cr@ch.honda.com

Please include the following information in your letter:

- Name, address, and telephone number
- Product model, year, and VIN
- Date of purchase
- Dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

Your Honda Dealer

The service department of your Honda dealer offers trained personnel to perform regular maintenance and most repairs. It has the latest available service information from Honda and also handles warranty inspections and repairs.

The parts department offers Honda Genuine Parts, Pro Honda products, Honda Genuine Accessories (USA only), and Honda accessories and products (Canada only) that provide the same quality that went into your motorcycle.

The sales department offers the Honda Protection Plan to extend almost all of your warranty coverage (USA only).

Your Honda dealer can also supply information about, riding events, and information about safety training available in your local area, and the Honda Rider's Club of America (USA only).

Honda Rider's Club of America (HRCA)

The Honda Rider's Club of America (HRCA) sponsors local riding chapters at Authorized Honda Dealerships across the country. You can log on to the HRCA Clubhouse website for more information at www.hrca.honda.com.

USA Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at: 1-888-327-4236

(TTY: 1-800-424-9153); go to <http://www.safercar.gov>;

or write to:

Administrator, NHTSA,
1200 New Jersey Avenue, SE.,
Washington, DC 20590.

You can also obtain other information about motor vehicle safety from:

<http://www.safercar.gov>.

Specifications

■ Main Components

| | | |
|--------------------------|--------------------|---|
| Type | SC59 | |
| Overall length | 81.7 in (2,075 mm) | |
| Overall width | 28.3 in (720 mm) | |
| Overall height | 44.7 in (1,135 mm) | |
| Wheelbase | 55.5 in (1,410 mm) | |
| Minimum ground clearance | 5.1 in (130 mm) | |
| Caster angle | 23°18' | |
| Trail | 3.8 in (96 mm) | |
| Curb weight | | 49 STATE 441 lb (200 kg) |
| | CBR1000RR | 50 STATE (meets California) 443 lb (201 kg) |
| | | Canada model 463 lb (210 kg) |
| | CBR1000RA | 50 STATE (meets California) 467 lb (212 kg) |
| | | Canada model 439 lb (199 kg) |
| | CBR1000S | 50 STATE (meets California) 441 lb (200 kg) |

| | | |
|--------------------------|-----------------------------------|---------------------------|
| Maximum weight capacity | CBR1000RR/RA *1 | 366 lb (166 kg) |
| | CBR1000S *2 | 243 lb (110 kg) |
| Maximum luggage weight*3 | CBR1000RR/RA | Luggage 66 lb (30 kg) |
| | | Accessories 31 lb (14 kg) |
| | CBR1000S | Accessories 35 lb (16 kg) |
| | | Luggage 22 lb (10 kg) |
| | | Luggage 7 lb (3 kg) |
| | | Accessories 15 lb (7 kg) |
| Passenger capacity | CBR1000RR/RA | Rider and 1 passenger |
| | CBR1000S | Rider only (no passenger) |
| Minimum turning radius | 10.6 ft (3.2 m) | |
| Displacement | 60.9 cu-in (999 cm ³) | |
| Bore x stroke | 2.99 x 2.17 in (76.0 x 55.1 mm) | |
| Compression ratio | 12.3:1 | |
| Fuel | Unleaded gasoline | |
| | Recommended: 91 PON or higher | |
| Tank capacity | 4.49 US gal (17.0 liters) | |

*1 Including rider, passenger, all luggage, and accessories.

*2 Including rider, all luggage, and accessories.

*3 Includes the weight of the luggage and added accessories.

Specifications

| | | |
|---------------------------------------|--------------------------|-------|
| Battery | CBR1000RR/S | |
| | YTZ75 12V-6Ah (10 HR) | |
| Gear ratios | CBR1000RA | |
| | YTZ10S 12V-8.6Ah (10 HR) | |
| | 1st | 2.285 |
| | 2nd | 1.777 |
| | 3rd | 1.500 |
| | 4th | 1.333 |
| | 5th | 1.214 |
| Reduction ratios (primary / final) | 6th 1.137 | |
| | 1.717 / 2.625 | |

■ Service Data

| | | |
|------------------------|----------------------|--|
| Tire size | Front | 120/70ZR17M/C (58W) |
| | Rear | 190/50ZR17M/C (73W) |
| Tire type | Radial, tubeless | |
| Recommended Tires | Front | CBR1000RR/RA BRIDGESTONE S20F G DUNLOP Qualifier II K |
| | Rear | CBR1000S PIRELLI DIABLO SUPERCORSA SP |
| Tires | Front | CBR1000S PIRELLI DIABLO SUPERCORSA SP |
| | Rear | CBR1000RR/RA BRIDGESTONE S20R G DUNLOP Qualifier II K |
| Tire air pressure | Front | 36 psi (250 kPa, 2.50 kgf/cm ²) |
| | Rear | 42 psi (290 kPa, 2.90 kgf/cm ²) |
| Minimum tread depth | Front | 0.06 in (1.5 mm) |
| | Rear | 0.08 in (2.0 mm) |
| Spark plugs | (standard) | IMR9E-9HES (NGK) or VUH27ES (DENSO) |
| Spark plug gap | (non- adjustable) | 0.031 to 0.035 in (0.80 to 0.90 mm) |
| Idle speed | 1,200 ± 100 rpm | |

| | | |
|-----------------------------------|---|------------------------|
| Recommended engine oil | API Service Classification SG or higher except oils labeled as energy conserving or resource conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil (USA & Canada) or Honda 4-stroke oil, or an equivalent motorcycle oil | |
| Engine oil capacity | After draining | 3.0 US qt (2.8 liters) |
| | After draining & filter change | 3.2 US qt (3.0 liters) |
| | After disassembly | 3.9 US qt (3.7 liters) |
| Recommended brake fluid | Honda DOT 4 Brake Fluid | |
| Cooling system capacity | 3.2 US qt (3.0 liters) | |
| Recommended coolant | Pro Honda HP Coolant | |
| Recommended drive chain lubricant | Pro Honda HP Chain lube or equivalent | |
| Drive chain slack | 1 to 1 3/8 in (25 to 35 mm) | |
| Standard drive chain | DID 50VA11 or RK 50HFOZ6 | |
| | No. of links | 116 |
| Standard sprocket sizes | Front sprocket | 16T |
| | Rear wheel sprocket | 42T |

■ Bulbs

| | |
|--------------------------|-------------|
| Headlight | 12V-55W × 2 |
| Brake light | LED |
| Taillight | LED |
| Front turn signal lights | 12V-21W × 2 |
| Rear turn signal lights | 12V-21W × 2 |
| Position light | LED |
| License plate light | 12V-5W |

■ Fuses

| | | |
|-------------|--------------------|---------------|
| Main fuse | 30A | |
| Other fuses | CBR1000RR/S | 20A, 10A |
| | CBR1000RA | 30A, 20A, 10A |

Specifications

■ Torque Specifications

| | |
|--|---------------------------------|
| Engine oil drain bolt | 22 lbf-ft (30 N·m, 3.1 kgf·m) |
| Oil filter | 19 lbf-ft (26 N·m, 2.7 kgf·m) |
| Front wheel axle bolt | 58 lbf-ft (79 N·m, 8.1 kgf·m) |
| | CBR1000RR/RA |
| Front wheel brake caliper mounting bolts | 33 lbf-ft (45 N·m, 4.6 kgf·m) |
| | CBR1000S |
| | 30 lbf-ft (40 N·m, 4.1 kgf·m) |
| Front wheel axle pinch bolts | 16 lbf-ft (22 N·m, 2.2 kgf·m) |
| | CBR1000RR/RA |
| Rear wheel axle nut | 83 lbf-ft (113 N·m, 11.5 kgf·m) |
| | CBR1000S |
| | 91 lbf-ft (124 N·m, 12.6 kgf·m) |
| Front turn signal cover screws | 0.7 lbf-ft (1.0 N·m, 0.1 kgf·m) |

Information Record

| | |
|--------------------|--|
| VIN | |
| Engine No. | |
| Color Label & Code | |
| Owner's Name | |
| Address | |
| City/State | |
| Phone | |
| Dealer's Name | |
| Address | |
| City/State | |
| Phone | |
| Service Manager | |

- A**
 - Accessories 15
 - Authorized Manuals 145
- B**
 - Battery 60, 74
 - Brake Lever 94
 - Brake Light Switch 84
 - Brakes
 - Fluid 64, 82
 - Pad Wear 83
 - Braking 11
 - Bulb
 - Brake/Taillight 120
 - Front Turn Signal 121
 - Headlight 119
 - License Plate Light 122
 - Position Light 120
 - Rear Turn Signal 122
- C**
 - Caring for Your Motorcycle 130
 - Clutch System 90
 - Color Label 59
 - Combined ABS 12
 - Combined ABS Indicator 40
 - Compartment
 - Owner's Manual 49
 - Coolant 65, 80
 - Coolant Temperature Gauge 23
- D**
 - Digital Clock Adjustment 27, 28
 - Display Setting 27
 - Drive Chain 64, 86
- E**
 - Electrical Trouble 118
 - Emission Control Systems 138
 - Engine
 - Number 137
 - Oil 63, 76
 - Oil Filter 78
 - Overheats 107
 - Starting 46
 - Stop Switch 44, 46, 128

| | |
|------------------|-----|
| Stopping..... | 128 |
| Environment..... | 136 |

F

| | |
|-----------------------------------|----|
| Flooded Engine..... | 46 |
| Front Brake Lever Adjustment..... | 94 |
| Front Seat..... | 70 |
| Front Suspension..... | 95 |

Fuel

| | |
|-------------------------|--------|
| Consumption Meter..... | 24 |
| Low Fuel Indicator..... | 41, 43 |
| Mileage Meter..... | 24 |
| Oxygenated..... | 144 |
| Recommended..... | 48 |
| Remaining..... | 41, 43 |
| Tank Capacity..... | 48 |

| | |
|------------|---------|
| Fuses..... | 62, 123 |
|------------|---------|

G

| | |
|---------------|-----|
| Gasohol..... | 144 |
| Gasoline..... | 48 |

H

| | |
|---|---------|
| Headlight Aim..... | 104 |
| Headlight Dimmer Switch..... | 44 |
| Helmet Holder..... | 50 |
| HESD (Honda Electronic Steering Damper)..... | 129 |
| HESD (Honda Electronic Steering Damper) Indicator..... | 41 |
| High Beam Indicator..... | 40 |
| High Coolant Temperature Indicator..... | 40, 107 |
| Honda Contacts..... | 148 |
| Horn Button..... | 44 |

I

Ignition Cut-off System

| | |
|-------------------------|-------------|
| Banking Sensor..... | 129 |
| Side Stand..... | 85 |
| Ignition Key..... | 127 |
| Ignition Switch..... | 44, 45, 128 |
| Indicators..... | 40 |
| Information Record..... | 155 |
| Instruments..... | 22 |

| | | |
|---|----------------|-----------------------------------|
| L | | |
| Labels | 7 | |
| Lap Timer | 36 | |
| Load Limits..... | 16 | |
| Loading Guidelines | 16 | |
| Low Oil Pressure Indicator | 40 | |
| M | | |
| Maintenance | | |
| Fundamentals..... | 57 | |
| Importance..... | 52 | |
| Safety..... | 53 | |
| Schedule | 54 | |
| Maximum Weight Limit..... | 16 | |
| Modifications..... | 15 | |
| N | | |
| Neutral Indicator..... | 41 | |
| O | | |
| Odometer | 23, 128 | |
| Oil | | |
| Engine..... | 63, 76 | |
| | | Overheating.....107 |
| | | Oxygenated Fuels 144 |
| P | | |
| Parking | 14 | |
| Parts Location | 18 | |
| PGM-FI (Programmed Fuel Injection) | | |
| malfunction indicator lamp (MIL)... | 40, 108 | |
| Protective Apparel..... | 9 | |
| R | | |
| Rear Seat | 71 | |
| Rear Suspension..... | 100 | |
| Recommended | | |
| Coolant | 65, 80 | |
| Fuel | 48 | |
| Oil | 63 | |
| Refueling..... | 48 | |
| Removal | | |
| Battery..... | 74 | |
| Front Seat..... | 70 | |
| Lower Fairing | 73 | |
| Rear Seat | 71 | |

| | |
|--------------------------------------|--------|
| Repair Kit..... | 110 |
| Reporting Safety Defects (U.S.)..... | 150 |
| REV Indicator..... | 40, 42 |
| Riding Precautions..... | 11 |

S

| | |
|---|------------|
| Safety Labels..... | 7 |
| Safety Precautions..... | 9 |
| Shifting Gears..... | 47 |
| Side Stand..... | 85 |
| Side Stand Ignition Cut-off System..... | 85 |
| Single Seat Cowl..... | 72 |
| Specifications..... | 151 |
| Speedometer..... | 22 |
| Start/lap Button..... | 38, 44, 46 |
| Starting the Engine..... | 46 |
| Steering Lock..... | 45 |
| Stopping Engine..... | 128 |
| Storage | |
| Equipment..... | 49 |
| Owner's Manual..... | 49, 128 |
| Storing Your Motorcycle..... | 134 |
| Switches..... | 44 |

T

| | |
|-----------------|----|
| Tachometer..... | 22 |
| Throttle..... | 93 |

Tires

| | |
|-----------------------------------|---------|
| Air Pressure..... | 66 |
| Puncture..... | 110 |
| Replacing..... | 66, 110 |
| Transporting Your Motorcycle..... | 135 |
| Tripmeter..... | 24, 128 |
| Turn Signal Indicators..... | 41 |

V

| | |
|------------------------------------|-----|
| Vehicle Identification Number..... | 137 |
|------------------------------------|-----|

W

| | |
|------------------------------------|---------|
| Warning Indicators on..... | 108 |
| Warranty Coverage and Service..... | 146 |
| Washing Your Motorcycle..... | 130 |
| Weight Limit..... | 16, 151 |

Wheels

| | |
|--------------------|-----|
| Front removal..... | 111 |
| Rear removal..... | 115 |