# Contents

Preface5Introduction6A Few Words About Safety8System Limitations9Favorable Reception Areas for GPS Signals9Unfavorable Reception Areas for GPS Signals10User Agreement11Getting Started13Getting Started14System Overview14Operating Controls15Startup16Display Screens18Map Screen19Point Review Screens23Route Calculate & Edit Route Screens24	Operating Controls37Right Fairing Panel Controls38Left Handlebar Controls39Center Display Controls40Audio System Controls41Center Display Screens43Center Display Screens44Types of Navigation System46Map Screens46Map Screens46Map Screens47Next Turn Pop-up51Alert Icon52Automatic Re-routing53Map Scale Zoom54Cursor Radius Point Locator57Summary of Main Menu	Point Review Screens69Route Calculate & Edit RouteScreens72Route Calculate Screen72Edit Route Screens73Weather/Traffic InformationScreen77Weather Information Screen77Traffic Information Screen79Traffic/Weather ReviewScreen80Find Destination81Find Destination82By Favorite83Finding Nearest83Finding by Name86By Previous Find88By Point of Interest90Category/Subcategory90
Point Review Screens23 Route Calculate & Edit Route	Cursor Radius Point Locator 55	By Previous Find

# Contents

By Address96By Intersection99By City102Favorite Places103Favorite Places104Storing Favorite Places105Renaming Favorite Places106Deleting Favorite Places107Sharing Favorite Places108Routes111Routes112	Save125Share126Route to Home127Route to Home128Calculating a Route Home129Checking Your Home129Location129Deleting Your Home130Traffic131Traffic132	Setup / Info         141           Setup / Info         142           Setup Screen         143           Setup Screen         143           Setup System         154           Setup System         154           Setup Language         163           Info Screens         164           GPS Info         164           XM Info         164           Turn Off Honda Navigation         54
New Route114Setting and Saving a New114Route114Selecting a Route from the117List117Setting a Route on Website117Recalculate118Edit Route119Adding a Location as a Via120Adding a Road as a Via122Detour124	Viewing Traffic by Road133Viewing Traffic on CurrentRoute	Technical & ConsumerInformation167Glossary168System Messages170Troubleshooting171System Limitations176Database Limitations178Customer Support179Index183

# Preface

Introduction	6
A Few Words About Safety	8
System Limitations	9
Favorable Reception Areas for GPS Signals	9
Unfavorable Reception Areas for GPS Signals	10
User Agreement	11

# Introduction

Your Navigation System is a highlysophisticated yet easy-to-use system with visual and voice guidance that uses satellites and a map database to show you where you are and help guide you to a desired destination.

The Navigation System receives signals from the Global Positioning System (GPS), a network of 24 satellites in orbit around the earth. By receiving signals from several of these satellites, the Navigation System can determine the latitude, longitude, and other positioning information for your motorcycle. In addition, a speed sensor on your motorcycle keeps track of the speed of travel at all times.

GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System. For example, you may be riding down a highway and your Navi system, relying on GPS data, will tell you you are on the frontage road adjacent to the highway you are actually on. However, you should find your experience with GPS navigation highly satisfactory.

The Navigation System is easy to use. The locations of many places of business and entertainment are already entered in the system. You can select any of them as a destination by using the control panel on the right fairing. If a desired destination is not in the system's database, you can still enter it and the system should be able to direct you to it in most cases. You can also save (store) locations in the system as *Favorite Places.* The system also retains your last 30 finds as Previous Finds so you can easily return to them, and allows you to store a home address to simplify returning home from your destination.

The system provides map coverage for the 50 U.S. states and Canada. The coverage consists of accurately mapped metropolitan and rural areas.

Roads within metropolitan areas, interstate highways, and major roads connecting cities are typically verified.

Verified roads have been driven by the database supplier and information like

the road's average speed, turn restrictions, or whether it is a one-way street are contained in the Navigation System.

The route calculated by the system may not be the shortest possible because only major roads are mapped in non-detailed areas. You may be aware of secondary roads that shorten the travel distance and time.

While you are riding, the Navigation System provides voice guidance so you do not have to take your eyes off the road. These instructions are provided in advance of the actual riding maneuver so you have time to slow down and prepare for the maneuver.

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

### NOTICE

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste.

# How to Use this Manual

You have two options:

- Read the entire manual.
- Read the *Getting Started* section to gain an overview of what the system can do. Then begin learning the controls and screen displays. You can reference the more detailed sections of the manual whenever you need to.


Regardless of your choice, be sure to store this manual on your motorcycle along with your Owner's Manual for reference.

### System Controls Operation While Riding

Most of the system controls are automatically disabled while your motorcycle is in motion. Only the Navigation System's left handlebar controls and audio system controls continue to operate while riding.

### **Accessory Precautions**

Installing metallic or metalized accessories near the windscreen can seriously degrade or prevent GPS reception because the GPS antenna is located under the windscreen.

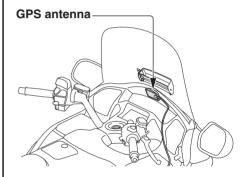

If you plan to install electronic components such as motorcycle location devices, additional amplifiers, or other audio components, ensure that they are not located near the navigation control unit in the travel trunk or near the center display screen. Electronic signals from these devices can cause intermittent disruption of the navigation system.

# A Few Words About Safety

The Navigation System is one of many items on the motorcycle that can distract you. Remember that your primary focus should always be on the road.

To operate the Navigation System, enter information into the system before you begin riding or when your motorcycle is stopped. Then, as you ride, listen to the voice guidance and glance at the screen information when it is safe to do so.

When your motorcycle is moving, only the left handlebar controls and audio system controls for the Navigation System will operate.


Pull off the road if you need more time to study the screen or operate the controls.

# 

Using the Navigation System while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Glance at the navigation screen only when it is safe to do so.


The Navigation System is designed to provide route information to help you reach your destination. However, this route guidance may sometimes conflict with road conditions such as street closures, road construction, and detours. Additionally, the system itself has certain limitations (see page 9). Therefore, you must verify the voice guidance and visual route information provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgment, and obey traffic laws while riding. Although your Navigation System is a highly sophisticated piece of equipment, it has certain limitations. The system uses signals from the Global Positioning System (GPS) to determine its current location. The GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System. For more information, see page 176.

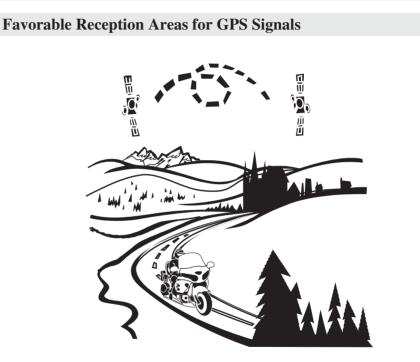

GPS reception is best in open areas, with no trees, tall buildings, or other tall objects that can interfere with the signal.

# **Unfavorable Reception Areas for GPS Signals**

The following areas restrict GPS signal reception. However, these obstacles do not interfere with the operation of the speed sensor in your motorcycle that tracks your movement along the route.

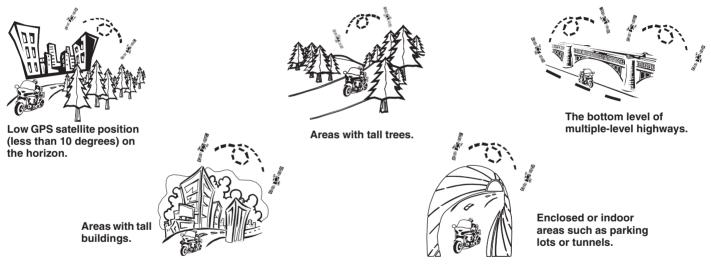

Be aware that high rise buildings may diffuse your GPS signal and cause an inaccurate display of your current location on the map screen. If this occurs, the message banner at the top of the screen turns yellow and displays *Poor GPS Satellite Reception*. Additionally, if you are not using the *Map Orientation* setting, *2D North Up*, the diffused signal reflection may cause the orientation to switch inaccurately.

#### 10 Preface

In using this "Satellite Linked Navigation System" SD (Secure Digital) memory card for Map, which includes HONDA MOTOR CO., LTD. Software, GARMIN LTD. Software, HERE North America LLC database contents and INFO USA CORPORATION database contents (hereinafter referred to as "Licensors"), you are bound by the terms and conditions set forth below. By using your copy of the SD memory card for Map, you have expressed your agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this agreement, please return the SD memory card for Map to your Honda dealer.

• The SD memory card for Map may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.

- The SD memory card for Map may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.
- The SD memory card for Map may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The SD memory card for Map may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The SD memory card for Map is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The SD memory card for Map is not to be used for commercial purposes.
- The Licensors do not guarantee to the customer that the functions included in the SD memory card for Map meet the specific objectives of the user.
- Licensors shall not be responsible for any damages caused by the use of the SD memory card for Map to the actual user or to any third party.

- The warranty on the SD memory card for Map shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the layout of the SD memory card for Map.
- The right to use the SD memory card for Map shall expire either when the user destroys the SD memory card for Map or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the SD memory card for Map or software.
- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The software and database contents, including the digital map data, contained on the SD memory card is provided to you "as is," and you agree to use it at your own risk. The Licensors make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, pertaining to the software and database contents, including, but not limited to, its

# **User Agreement**

content, quality, accuracy, completeness, effectiveness, reliability, merchantability, fitness for a particular purpose, or usefulness.

 THE LICENSORS DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF OUALITY. PERFORMANCE. MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY LICENSORS SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION, THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT. Some States. Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the SD memory card for Map, data, or the HERE North America LLC database. Use, duplication, or disclosure of this SD memory card for Map by or on behalf of the United States government is subject to "Restricted Rights" as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Garmin Ltd., 1200 East 151st Street, Olathe, KS, 66062, Navigation Technologies, 10400 W. Higgins Rd., Rosemont, IL 60018 and INFO USA CORPORATION, 5711 South 86th Circle, Omaha, NE 68127.

Getting Started	14
System Overview	14
Operating Controls	
Startup	16
Display Screens	
Map Screen	
Point Review Screens	
Route Calculate & Edit Route Screens	24
XM NavWeather & XM NavTraffic Map Screens	
Main Menu	
Let's Take a Trip	
Tips	

This section is designed to give you a quick overview of your Navigation System before you begin using it on your own. Again, we recommend reading the entire manual, but reading this section will definitely accelerate your learning curve. (Also see *Glossary, System Messages*, and *Troubleshooting* on pages 168-175.)

# System Overview

# *While Not Riding Your Motorcycle* With your motorcycle not in motion, you

can use the right fairing panel controls to create and edit a route, obtain information, and setup screen displays.

# While Riding Your Motorcycle

While your motorcycle is in motion after entering your destination in the system, you can use the left handlebar controls, check the map screens, and listen to the voice guidance. The right fairing panel controls become disabled. Even if no route is entered in the system, you will still receive some useful screen and voice guidance information while riding.

# **System Functions**

There are three ways to find/designate a location you want to travel to or save as a favorite for future use.

- *Find Destination* menu (see page 81)
- Routes Menu (see page 111)
- *Cursor Radius Point Locator* feature (see page 55)

After finding your destination, direct the system to:

- Create a route to your destination. (You may only enter one route at a time in the system unless you save it. You may overwrite an existing route.)
- Edit your route to add vias (stops along the way).
- Reroute your journey to express a preference (speed vs distance) and up to four elements to avoid.
- Include a detour in your current route.

# **Operating Controls**

Here is a quick look at the controls you will be using most often. For more information, see page 37.

#### **Right Fairing Control Panel (disabled while riding)**

		MAP button	Press to display a map screen.
		MENU button	Press to display the Main Menu.
(1)		BACK button	Press to return to the previous screen display (unless a map is displayed).
(1) —		ZOOM IN/OUT button	Press in on the top (zoom in) or bottom (zoom out) of the button to zoom in or out on a map screen.
	OUT MAP BACK NAVIGATION	Directional Arrow buttons (1)	Press to move the highlight in a menu or list, or to move the <i>Cursor Radius Point Locator</i> feature.
		ENT button	Press to execute (enter) a command.

#### Left Handlebar Controls (operable while riding)

	VOLUME lever (2)	Pull up or down to increase or decrease volume of the audio system, including the voice guidance.
	ZOOM toggle - VOICE/GUIDE button (3)	<ul> <li>Toggle to the left (zoom in) or right (zoom out) to change the map scale.</li> <li>Push and release to activate the voice guidance feature.</li> <li>Push and hold for two beeps to bring up the <i>Traffic/Weather Review</i> screen.</li> </ul>
(3)	oution (5)	and and tota for two beeps to oring up the Prajiter reducer Review sereen.

## Startup

Turn the ignition switch to ACC to avoid battery drain. The ON position will also activate the system.



After a few seconds, you will see the following screen. (The screen may be different or there may be no screen if you change the default *Greeting*, or if the Navi system was not selected the last time you turned off the ignition. Press the DISP button under the center display screen or the MAP button on the right fairing panel to enter the Navi system.)



After a few seconds, you will see:

This system provides route information to help you reach your destination. Due to road conditions, some recommendations may not be appropriate. Always obey all traffic laws and exercise your own good judgement. See your Navigation System Manual for complete instructions.




Press the ENT button. (If you do not, the screen will return to the multiinformation mode after about 30 seconds. To return to the Navigation System, press the DISP button on the center display or the MAP button on the right fairing panel.)

If there is no route in the system, you will see a full map.



If you have a route in the system, the current map will appear in your selected map mode (half, wide, or full). The map scale will be the last scale you selected during previous operation. The *Half Map* display is the default setting.

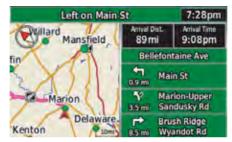

If the system is slow in acquiring a GPS connection, you will see "*Locating Satellites*" in the message banner across the top of the screen and a red question mark (?) will flash on top of the vehicle position indicator (red arrowhead). The red arrowhead will identify your last location until the system connects with the satellites.

To display the *Main Menu*, press the MENU button on the right fairing panel.

# **Display Screens**

A summary of the screens you will see often while operating the system:

Maps	The default is Half Map. Also available: Wide Map and Full Map.	
Menus	The seven-choice Main Menu and its sub-menus.	
Keyboards	Used to enter names and numbers to search for locations.	
Lists	Compiled from the system database based on the information you enter, lists act as a gateway to <i>Point Review Screens</i> .	
Point Review Screens	For a given location, provides a map, a menu for selecting the location as a route destination or stop along the way (via), or as a favorite, as well as route information.	
Route Calculate Screen	Used to input preferences and trigger a route calculation.	
Edit Route Screens	Displays the destination and vias along the way with edit options.	
Weather & Traffic Map Screen	Displays weather information (forecast, weather map, etc.) or traffic information (traffic flow, traffic incidents, etc.).	

# **Map Screen**

Here is a typical map screen (in the Half Map default setting):



#### NOTE:

- The explanations above are for daytime display. For information about the map background and street colors at night, see page 21.
- The POI icons will appear when the map scale is 0.5 mile or smaller.

### **Map Features**

Border Line	White around a black line indicates a border line.	
Green Circle-Town	The green circle with white outline indicates a town. To see the name of town, use the <i>Cursor Radius Point Locator</i> feature (see page 55).	
Map Orientation	Indicates either 2D Heading Up, 2D North Up, or 3D Heading Up (see page 144).	
Map Scale	The length of the scale line represents the distance indicated above the scale. There are 14 selections: from 80 feet to 800 miles.	
Pink Outline-Route	Indicates your route.	
Road Number	Indicates a road number. The shape of the sign varies such as oval, shield, etc.	
Track Log	White dot indicates a track log.	
Traffic Severity	Indicates traffic severity in red or yellow.	
Vehicle Position	The red arrowhead indicates your vehicle location and, when moving, which direction your motorcycle is facing.	

#### Map Icon

Checkered Flag- Destination	Indicates destination of your route.	
Home Icon	Indicates your designated <i>Home</i> location, visible for 100 miles or smaller map scale.	
Orange Flag-Via Stop	Indicates a stop along the route (via).	
POI Icon	Indicates a point of interest loaded in the database. See page 147 for a table of all POI icons in the system.	

#### Information

Alert Icon	There are three types of the alert icon which indicates the next turn guidance, weather warning, or traffic incident.	
Clock	Indicates the current time according to system setup (see page 154).	
Current Road	If you are riding a route in the Half Map (default) mode, displays the road you are on.	
Detail Display	Two details related to time and/or distance. In the Wide Map mode, three details are available.	
Message Banner	If riding a route, gives route instructions. If not riding a route, identifies upcoming streets/roads. Also delivers a message such as "Lost Satellite" or "Poor Satellite."	
Next Three Maneuvers	If you are riding a route in the <i>Half Map</i> (default) mode, lists the next three maneuvers.	

### **Map Background Color**

Types	DAYTIME	NIGHTTIME
Airport		
Basic Background		
Body of Water		
College, Mall, or Large Business		
Parks or Golf Courses		

#### **Street Color**

Types	DAYTIME	NIGHTTIME
Arterial Roads Collector Roads Major Highway Minor Highway		
Interstate Highway		
Ramps		
Residential Roads		

### **Point Review Screens**

You will often see a *Point Review Screen* as you use the system. It is a screen you will use to route to a destination, to view a map (you can zoom in or out) showing the point's location, or to store a location as a favorite place for easy future routing. Pressing ENT after making a selection on the various list screens in the system brings you to this screen. The sooner you are familiar with the *Point Review Screen* and its uses, the sooner you will feel comfortable with your Navigation System.



If you want to adjust the designated location, highlight *Map* and press ENT. The map screen appears and the *Cursor Radius Point Locator* becomes available on the map. Use the four directional arrow buttons to move the cursor radius to any point on any map in the system. The map will automatically shift in response to your movement of the cursor. You may also zoom in or out by using the zoom control on the right fairing panel or the left handlebar. Press ENT when the cursor radius is positioned at your desired location. To return to the previous screen, press the BACK button.

### **Route Calculate & Edit Route Screens**

There are two other screens you will see often. The *Route Calculate Screen* lets you select a speed vs distance preference and up to six negative (avoid) preferences. Select *Calculate* to have the system create a route to your destination. Select *Edit Route* to bring up the *Edit Route Screen*.



The *Edit Route Screen* lets you add or delete a stop along the way (via) or to sort (rearrange the sequence of) the vias and the current destination. On the *Select stop to sort Screen*, you can see your destination (checkered flag), preceded by any via location (orange flag) you have selected.



### XM NavWeather & XM NavTraffic Map Screens

If you activate your XM subscription, the navigation system can receive the weather information, which includes weather forecast, road conditions, weather warnings, winds, etc. For information about XM subscription, see page 164.



The navigation system will show the traffic event on the map, which includes traffic flow data, congestion, incident, etc. You can check the traffic information and also recalculate your route to avoid the traffic incident.



### Main Menu

Here is a summary of the seven *Main Menu* functions:

Find Destination	page 81	used to find a location.	
By Favorite	page 83	to select from up to 2,000 favorite locations saved in the system.	
By Previous Find	page 88	to select from your 30 previous finds.	
By Point of Interest	page 90	to select from points of interest loaded in the database.	
By Phone Number	page 95	to find a location by a known phone number.	
By Address	page 96	to locate a known address.	
By Intersection	page 99	to find an intersection of two known roads.	
By City	page 102	to locate a city or town.	

These seven *Find Destination* functions are also used by the *New Route* menu, *Edit Route-Add Stop* menu, and *Set Home using Find Menu* (see page 157).

Favorite Places	page 103	used for easier routing to locations you have previously saved as a favorite. (Use the <i>Find Destination</i> menu to save a favorite.)	
Mark Position	page 105	to add your current location to your Favorite Places storage list.	
Delete All	page 107	to remove all items from your saved favorites.	

Routes	page 111	used to create a new route or edit an existing route.	
New Route	page 114	to create a route to save.	
Share	page 126	to save the selected route to the user's SD memory card when an SD memory card for Route d is inserted.	
Current Route	page 112	to display the current route. You may <i>Stop, Recalculate, Detour, Edit, Share</i> and <i>Save</i> the route This function appears only when you have set a route to go.	
Stop Route	page 113	to suspend your current route guidance for an intentional "detour."	
Resume	page 113	To resume your current route after stopping it. This function does not appear on the <i>Routes Met</i> until after you use the <i>Stop Route</i> function.	
Recalculate	page 118	to modify an existing route for preferences, including six "avoids."	
Edit Route	page 119	to review your route and add (or delete) one or more locations (vias) en route to your destination	
Detour	page 124	to recalculate your route because of a detour.	
Save	page 125	to save the current route.	
Route to Home	page 127	used to route to a home location.	
Calculate	page 129	to calculate a route home if you have saved a <i>Home</i> location. (Otherwise, this selection directs you to the <i>Setup System</i> screen.)	

Weather	page 137	used to check the weather information, such as weather forecasts, road conditions, wind, or weather warnings.	
Мар	page 139	to review the weather map on the current location.	
Other City	page 139	to select the city for which you want to get the weather information.	
Forecast	page 140	to review the weather forecast on the current location.	
Traffic	page 131	used to check traffic information, such as traffic flow or traffic incidents, and to recalculate a detour route to avoid the traffic incidents.	
Full Map	page 133	to review the all traffic information on the map.	
View By Road	page 133	to review the traffic information by selecting a road.	
On Current Route	page 134	to review the traffic information on your current route.	
Setup / Info	page 141	used to change or restore the factory-set defaults of the system and display system information. (See page 161 for a list of the defaults.)	
Setup Screen	page 143	to select how your screens will appear and certain screen functions.	
Setup System	page 154	to select time elements and store a Home location for routing.	
Setup Language	page 163	to select the language to be displayed, the pre-recorded voice or text-to-speech (TTS) voice for the system's voice guidance as well as keyboard language.	
GPS Info	page 164	to check your GPS status, current location, elevation, accuracy, date, and time.	
System Info	page 164	to identify the software operating your system and the unit ID number, and check the maps used in the system and the copyrights.	
XM Info	page 164	to identify the software used in the system, available channels and data services, and your Radio ID.	
Turn Off Honda Navigation System	page 166	to turn off the navigation system.	

# Let's Take a Trip

Let's imagine your first trip – from your current location to the site of Wyatt Earp's showdown, the O.K. Corral in Tombstone, Arizona. Let's avoid all toll roads, but allow U-turns. On the way you want to stop at your favorite Honda dealer. Then, for your return trip, you want to head straight home.

A step-by-step sequence follows. That example, as well as all instructional sequences in the manual, follows an action/reaction structure:

- You act entering instructions and commands.
- The system reacts displaying a map, menu, keyboard, list, point review, route calculate, or edit route screen. (And, at times the system's voice guidance also operates.)

In this manual, you will see an image of what you will view on the display screen.

For your hypothetical trip to Tombstone, you utilize the basic functions of the system.

- You find a destination.
- You refine the route to your preference.
- You route to it.
- You add a stop along the way (via).
- You set up quick return routing by designating your residence as *Home*.

Step-by-step instructions follow. First, press the MENU button on the right fairing panel.



With *Find Destination* highlighted, press the ENT button.



### NOTE:

If there are Favorite Places or Previous Finds in the system, the menu will display these options.

Use the down directional arrow button on the right fairing panel to scroll down to highlight *By City*. Press ENT.

(cont'd)



Highlight Spell and, press ENT.



Using the directional arrow buttons and ENT button, begin typing in Tombstone.



Type "TOMBSTONE" in full spelling and highlight *Done*, and then press ENT. Or Type "TOMB" and highlight *Done*, and then press ENT. The system will display a list of possible cities beginning with "TOMB."

•	Tombador Do Araujo,	4477mi	SE
	Tomball, TX	979 mi	
	Tombe, SDN	7256mi	E
ø	Tombo Beri, NER	5532mi	E
4	Tomboco, AGO	6883mi	E
0	Tombstone, AZ	1593mi	W

Scroll down and highlight *Tombstone*, *AZ*. Press ENT.



With Go To highlighted, press ENT.



You can enter your *Avoid* preferences now.

#### NOTE:

You may also change or enter preferences at any time by selecting "Re calculate" on the "Current Route" menu.

Scroll up to *Avoid: Toll Roads* and press ENT.



The highlighted field indicates *Toll Roads* is now selected as an *Avoid*. To deselect *U-Turns*, scroll over to select it and press ENT.



The highlighted field disappears. *U*-*Turns* is no longer selected as an *Avoid*. Scroll down to select *Calculate* and press ENT.

When the calculation is completed, you will see a map and hear voice guidance announce your next maneuver.



To edit your route to add a stop along the way at your favorite Honda dealer, press the MENU button.





Scroll down to *Routes* and press ENT. Highlight *Current Route* and press ENT.



Scroll down to *Edit Route* and press ENT. Highlight *Edit* and press ENT.

Sort	Edit	Next
urrent Lo	cation	-
+ Add S	itop	
— 🎮 Ton	ibstone	
+ Add S	itop	

With the upper *Add Stop* highlighted, press ENT.

d	d Route Stop
1	By Favorite
	By Previous Find
	By Point of Interest
	By Phone Number
	By Address
	By Intersection

Scroll down to *By Point of Interest*. Press ENT.

Se	lect Category	
ī	Search All	10
	Food & Drink	
	Lodging	
	Fuel	
	Shopping	
	Honda Motorcycle Dealers	

Highlight *Honda Motorcycle Dealers* and press ENT.

Near-Here	Spell
🕑 Honda South	8.9 mi S
🛃 Honda North	25.1mi NB
ABC Honda	25.3mi 55
🛃 Honda World	32.2mi N
Honda Motors	33.8mi E

### NOTE:

All Honda dealers are listed in the "Auto Services: Dealer or Auto Parts" category of the Point of Interest selection.

Scroll down to your dealer and press ENT.



With Select highlighted, press ENT.



Highlight *Next* and press ENT. The *Route Calculate Screen* appears.

#### NOTE:


When you enter two or more via stops, add them in the reverse order of your travel plan from the top of the list.



With *Next* highlighted, press ENT. The system calculates the route.



When calculation has completed, highlight *Start* and press ENT.

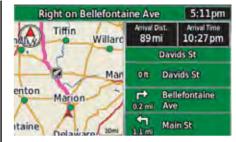


Your route is ready to ride. If you want to designate your current location as *Home* for the return ride, press the MENU button.



With *Route to Home* highlighted, press ENT.

(cont'd)

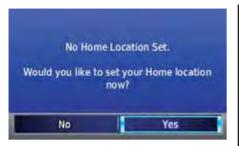

Highlight Yes and press ENT.

Set Home location using:			
Vehicle Position	Find Menu		

With *Vehicle Position* highlighted, press ENT.



With *Save Home* highlighted, press ENT.

Route Calculate	_	
U-Turns Toll Roads	Highways Ferries	
Carpool Lanes	Traffic	
Route Preference	Faster Time	
Edit Route	Calculate	

The display returns to the *Route Calculate* screen. Press the MAP button to return to your main map.



To give yourself the best opportunity to fully grasp the Navigation System, we suggest you continue to read the entire manual. However, if you do not intend to, we suggest you at least check out the following two sections, *Operating Controls* and *Center Display Screens*. The next seven sections cover the seven *Main Menu* selections. Finally, there is the *Technical & Consumer Information* section.

# Tips

The following tips will help you avoid some confusion as you learn the system:

A <b>highlighted Field</b> Indicates a Selected Item	Some fields can be switched between highlighted (selected) or not highlighted (not selected). Other fields are permanently highlighted, and you highlight and select them to bring up an option screen or to enter information with the keyboard. When choosing between adjacent fields on an option screen, such as <i>Map Layout (Setup Screen)</i> , use a directional arrow button to move to the field you want to highlight, then press ENT to select.
Quick Scroll	You can quick scroll through many lists. See Scroll Bar on page 44.
Quick Keyboard Maneuvering	You can speed up keyboard entry by jumping from the far left to the far right of a row or vice versa – and by jumping from the top keyboard row to the bottom row or vice versa. See page 65.
Understanding the <b>Find</b> <b>Destination</b> Function	Each <i>Find Destination</i> function searches within its designation. <i>By City</i> will find cities. It will not find locations in a specified city. By <i>Point of Interest</i> searches the points pre-loaded in the database.
Cursor Radius Point Locator	This feature can be used to find a location on any map and include it in a route. For more information, see page 55.
Use <b>Category &amp; Subcategory</b> to Simplify Find Destination by Point of Interest	You can narrow your search by selecting the category and sub-category. There are 14 categories. Highlight your desired category and press ENT. The system will display the various sub-categories of your selected category.
<i>Edit Route vs Recalculate</i> on the Current Route menu	<ul> <li>Use <i>Edit Route</i> to bring up an <i>Edit Route Screen</i> to add a stop (via) to your current route.</li> <li>Use <i>Recalculate</i> to bring up a <i>Route Calculate Screen</i> that lets you select your speed vs distance preference and up to six "avoids."</li> </ul>
<i>Edit Route vs Calculate on the</i> <i>Route Calculate Screen</i>	<ul> <li>Use <i>Calculate</i> to have the system calculate a route to your selected destination.</li> <li>Use <i>Edit Route</i> to bring up the <i>Edit Route Screen</i> to add a stop (via) to your current route.</li> </ul>


(cont'd)

<b>Creating a New Route</b> with an Existing Route in the System	You do not have to delete your current route before entering a new route. Simply, overwrite it. <i>Find</i> a destination and <i>Go To</i> it. The system does not save old routes.
Favorite Places	<ul> <li>Use <i>Find Destination</i> on the <i>Main Menu</i> to designate a favorite place (<i>Save</i> on the <i>Point Review Screen</i>).</li> <li>Use <i>Favorite Places</i> on the <i>Main Menu</i> to retrieve a saved (stored) favorite.</li> </ul>
<i>To Check If You Have</i> <i>Designated a</i> <b>Home</b> <i>Location</i>	Select <i>Route to Home</i> . If a <i>Route Calculate Screen</i> appears, you have a <i>Home</i> designation in the system.
To Check What Your <b>Home</b> Location Is	Use <i>Main Menu – Favorite Places</i> to reach the <i>Favorite Places</i> screen. <i>Home</i> will be listed with your favorites. See page 129.
Creating a New <b>Home</b> Designation with an Existing Home in the System	Do not select <i>Route to Home</i> on the <i>Main Menu</i> . That will bring up a <i>Route Calculate Screen</i> . Instead, go to <i>Setup / Info – Setup System</i> screen and use <i>Set Home using Find Menu</i> or <i>Set Home using Vehicle Position</i> to designate your new <i>Home</i> choice. This will overwrite the current designation. The system does not save old home locations. See page 157.
Previous Finds	The system stores your last 30 finds.
Remember to Press ENT	To enter your highlighted selection in the system, you must press ENT.

# **Operating Controls**

Right Fairing Panel Controls	38
Left Handlebar Controls	39
Center Display Controls	40
Audio System Controls	41

#### **Directional Arrow buttons –**

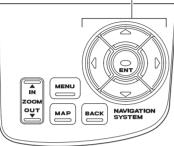

The right fairing panel controls are disabled while your motorcycle is moving. They will operate if you are stopped.

#### MAP button

Press this button to change the current display to the main map screen, or to start the Navigation System if the startup screen does not appear when you turn on the ignition.

### **MENU** button

Press this button to change the current display to the *Main Menu*.

### **BACK** button

Press this button to return to the previous display – unless a map is displayed. In that case, the BACK button will not change the screen.

## ZOOM IN ( $\blacktriangle$ )/OUT ( $\bigtriangledown$ ) button

Push in on the top of the button to zoom in or push in on the bottom of the button to zoom out (map scales of 80 feet to 800 miles) on the map display. (The length of the scale line in the lower right of the map screen represents the distance indicated above the scale line.)

#### **Directional Arrow buttons**


- With a menu or list displayed press the four directional arrow buttons to move the highlight up, down, left, or right.
- With a map displayed press any of the four directional arrow buttons to make a *Cursor Radius Point Locator* appear on the screen at the current vehicle position. You can use this locator to find any point on any map and route to it. See page 55.
- With a scroll bar displayed on the list press the left or right arrow button to scroll through the list up or down page by page.

### ENT button

Push this button to enter (execute) a command.

## NOTE:

If you attempt to use the navigation system controls on the right faring panel that are disabled while riding, you will hear a multi-beep warning and a message will pop up on the screen saying: "Invalid Operation."

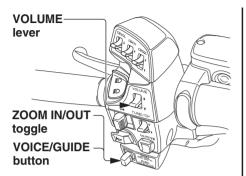

The left handlebar controls remain operational while your motorcycle is moving. The VOLUME lever duplicates the function of the VOLUME button on the audio system controls. The multipurpose ZOOM toggle – VOICE/ GUIDE button duplicates some of the functions performed with the right panel controls.

## **VOLUME lever**

Pull the lever up to increase or down to decrease to adjust the volume of the audio system, including the voice guidance. Any volume adjustment you make to the voice guidance will affect the radio and other audio components.


### ZOOM IN (◀)/OUT (►) toggle

Toggle to the left to zoom in or to the right to zoom out anywhere from map scales of 80 feet to 800 miles on the map display. (There are 14 map scale options.)

### **VOICE/GUIDE** button

- Push in and release to activate the voice guidance feature. If you are on a route, you will hear the next maneuver. If you are not on a route, you will hear what direction you are riding in.
- Push in and hold for two beeps to bring up the *Traffic/Weather Review* screen, which allows you to check the traffic/weather information. Move the ZOOM IN/OUT toggle to the right or left and hold it to switch the review screens. To return to the navigation map screen, push in and hold the button (or press the MAP or DISP button).

## **Center Display Controls**

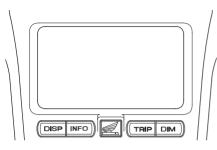

The center screen may display Navigation System information, normal motorcycle functions, or a combination of both. See *Center Display Screens* on page 43.

While in the Navi mode, the center display buttons may be operated while your motorcycle is moving.

#### **DISP** button

Press this button to toggle between the multi-information display (time, ODO, audio, and trip), a Navi full screen map with the time, and a split screen with the multi-information condensed in a bar below the map. Pressing the DISP button will also terminate the *Cursor Radius Point Locator* feature and return the main map display. You can switch among *Display 1*, *Display 2*, or *Off* by pressing and holding the DISP button when a map screen is displayed.

#### **INFO** button


Press this button to display the air temperature, suspension preload and headlight aiming.

#### **TRIP** button

While in the Navi mode, press this button to bring up a split screen (lower portion) display of the odometer and last selected tripmeter (A or B). This display lasts about five seconds. While the screen is still visible, press the button again to toggle between the A and B tripmeters. To reset the tripmeter, push and hold the button with the display in the "TRIP A" or "TRIP B" mode.

### **DIM button**

- Push and release to bring up the dimmer function to change display brightness. The screen lasts for about five seconds. This change applies only to the mode (*Day* or *Night*) you are in at the time of adjustment and remains effective until you make another adjustment.
- Push and hold for two beeps to change (toggle) the map screen background color from the current display (daylight: your color selection or night: black) to the alternative. For example, in extremely bright sunshine, you might find the black night background preferable.

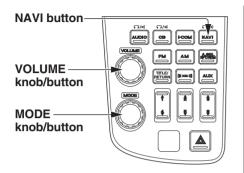

Three of the controls on your audio system are used with the Navigation System.

### **NAVI** button

- Press to toggle between speaker and headphones. An icon will display on the screen to indicate your selection.
- Press and hold to shut off the Navi voice guidance, and press to turn it ON.

### **VOLUME knob/button**

- Turn the knob to control the volume.
- Push the knob/button to control different components of the audio system. Depending on which components are turned on at the time, consecutive pushes cycle through your control choices. When the Navigation System is on, you may press the VOLUME button to adjust the Navigation voice volume relative to the audio volume, either quieter or louder. Rotate the knob to adjust. See your Owner's Manual for more information on the audio system.

#### **MODE knob/button**

- Turn the knob to highlight your selection.
- Press the knob/button to control various audio modes. Consecutive pushes cycle through your control choices. *Beep* allows you to turn on or off the audible beep the Navigation System controls make when you press them. See your Owner's Manual for more information on the audio system.

While in the Navi mode, you may press the audio buttons for a quick look of the non-Navi screen displays (tripmeter, etc.).

### 42 Operating Controls

# **Center Display Screens**

Center Display Screens	44
Types of Navigation System Screens	44
Map Screens	
Map Layouts	
Map Screen	
Next Turn Pop-up	
Alert Icon	
Automatic Re-routing	53
Map Scale Zoom	54
Cursor Radius Point Locator	55
Menu Screens	57
Summary of Main Menu Functions	62
Keyboard Screens	
Operating Keyboards	66
List Screens	68
Point Review Screens	69
Route Calculate & Edit Route Screens	72
Route Calculate Screen	
Edit Route Screens	
Weather/Traffic Information Screen	77
Weather Information Screen	
Traffic Information Screen	
Traffic/Weather Review Screen	

## **Center Display Screens**

There are three screen formats possible on the center display screen:

- Multi-information screen
- Navigation System screen
- Split screen (Navigation screen with some multi-information across the bottom, see illustration.)



## Types of Navigation System Screens

Screen categories include:

- Map Screens (see page 46)
- Menu Screens (see page 57)
- Keyboard Screens (see page 65)
- List Screens (see page 68)
- Point Review Screens (see page 69)
- Route Calculate & Edit Route Screens (see page 72)
- Weather/Traffic Information Screen (see page 77)

## Scroll Bar

Fi	nd Destination
1	By Favorite
	By Previous Find
	By Point of Interest
	By Phone Number
	By Address
	By Intersection
×-	

A scroll bar is visible on the left side of some menus and lists when the all items cannot be shown within one screen. To advance through the list, use the down directional arrow button to move to the item you want.

### NOTE:

Throughout this manual you will see some menu screens with more than six items (example: the "Find Destination" menu with seven items). These illustrations are graphic creations to display the complete menu choices available. There are two ways to speed up scrolling with some (but not all) lists.

- To jump from the first selection to the last, press the up arrow instead of scrolling down item by item.
- To jump from the last selection to the first, press the down arrow instead of scrolling up item by item.

This feature may not work if there is a large number of items in the database (such as *Point of Interest*).


To fast scroll from one screen page to another:

- To scroll forward one page at a time in a long list, press the right arrow. The first press moves the highlight to the bottom item on the screen page. Each successive press advances the screen list one page, with the bottom selection of the previous page now at the top of the next page.
- To scroll back one page at a time in a long list, press the left arrow. The first press moves the highlight to the top item on the screen page. Each successive press returns the screen list one page, with the top selection of the forward page now at the bottom of the previous page display.

## **Map Layouts**

There are three choices for map display while riding a route: *Full Map*, *Wide Map*, and *Half Map*. The system default is the *Half Map*. To change the map layout, see *Map Layout* on page 143.

### Full Map

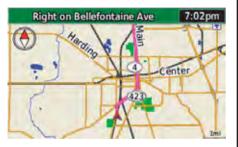

#### NOTE:

- When no route is entered, the initial display is "Full Map."
- See "Map Screen" on page 47 for a complete explanation of features and symbols on the map screens.

#### Wide Map



### Half Map (default)



Here is a typical map screen (in the Half Map default setting):



### NOTE:

- The explanations above are for daytime display. For information about the map background and street colors at night, see page 49.
- The POI icons will appear when the map scale is 0.5 mile or smaller.

### **Map Features**

Border Line	White around a black line indicates a border line.
Green Circle-Town	The green circle with white outline indicates a town. To see the name of town, use the <i>Cursor Radius Point Locator</i> feature (see page 55).
Map Orientation	Indicates either 2D Heading Up, 2D North Up, or 3D Heading Up (see page 144).
Map Scale	The length of the scale line represents the distance indicated above the scale. There are 14 selections: from 80 feet to 800 miles.
Pink Outline-Route	Indicates your route.
Road Number	Indicates a road number. The shape of the sign varies such as oval, shield, etc.
Track Log	White dot indicates a track log.
Traffic Severity	Indicates traffic severity in red or yellow.
Vehicle Position	The red arrowhead indicates your vehicle location and, when moving, which direction your motorcycle is facing.

#### Map Icon

Checkered Flag- Destination	Indicates destination of your route.
Home Icon	Indicates your designated <i>Home</i> location, visible for 100 miles or smaller map scale.
Orange Flag-Via Stop	Indicates a stop along the route (via).
POI Icon	Indicates a point of interest loaded in the database. See page 147 for a table of all POI icons in the system.

### Information

Alert Icon	There are three types of the alert icon which indicates the next turn guidance, weather warning, or traffic incident.
Clock	Indicates the current time according to system setup (see page 154).
Current Road	If you are riding a route in the Half Map (default) mode, displays the road you are on.
Detail Display	Two details related to time and/or distance. In the Wide Map mode, three details are available.
Message Banner	If riding a route, gives route instructions. If not riding a route, identifies upcoming streets/roads. Also delivers a message such as "Lost Satellite" or "Poor Satellite."
Next Three Maneuvers	If you are riding a route in the <i>Half Map</i> (default) mode, lists the next three maneuvers.

#### Map Background Color

Types	DAYTIME	NIGHTTIME
Airport		
Basic Background		
Body of Water		
College, Mall, or Large Business		
Parks or Golf Courses		

(cont'd)

### **Street Color**

Types	DAYTIME	NIGHTTIME
Arterial Roads Collector Roads Major Highway Minor Highway		
Interstate Highway		
Ramps		
Residential Roads		

## Next Turn Pop-up



If you are riding a route with the default *Next Turn Pop-up* option, a window will appear when you get close to the next turn. You will see an arrow icon along with two travel details: *distance to next* and *time till next*. The number of prompts, up to three, will depend on your speed and the distance from the last turn. The distance to an intersection is shown automatically between 100 feet and 2.0 miles.

## **Countdown Bar**

A countdown bar (a pyramid of eight bars) appears in the popup window when you are approaching a turn. The initial display shows a single blue bar on the bottom with seven green bars above it. As you approach the turn, the lowest green bar turns blue in increments until all eight bars are blue as you reach the turn.



### NOTE:

If the Auto zoom is Off when Map Orientation is set to 2D Heading Up or 2D North Up, Next Turn Pop-up will be displayed.


## **Junction View Pop-up**

A *Junction View* appears in the popup window when the data is available. A 3D view indicates which lane you should take at a junction or a ramp.




## Lane Guidance

A *Lane Guidance* appears on the bottom of the popup window when the auto zoom is off and the data is available. When the auto zoom is on, it appears inside of the map. It shows which lane goes which direction. The lane(s) you should take will be shown in white.

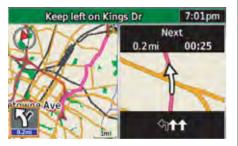

## **Alert Icon**

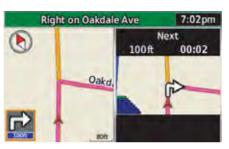

The system notifies you of urgent conditions with the alert icon and voice guidance (default setting). The alert icon will appear in the lower left corner of the screen.

### NOTE:

You can select the notification method, such as with voice only, with icon only, etc. For information about Alert Setup, see page 151. There are three types of the alert icon.

Types	Description
Turn Prompt	The alert active from the time the vehicle approaches a turn on the current route until the vehicle has completed the turn. It will display the angle of the turn and the distance to completion.
Traffic Alert	The traffic alert notifies you of traffic incident along the current route. It will report the approximate delay to be expected as a result of the traffic.
Weather Alert	There are two modes of weather alert: a precipitation in the area alert and a National Weather Service Bulletin alert. A precipitation in the area alert will take precedence in case both conditions exist and will show the weather map in the alert field.

### NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.


## **Automatic Re-routing**

If you go off route, or use the *Stop Route* and *Resume* functions, the system automatically calculates how to get you back on the route. You will receive a voice and screen alert. The alert is activated at about 33 yards (30 meters) if you are riding the route.

## Map Scale Zoom

Pressing the *Zoom In/Out* button lets you change the scale of the map display.



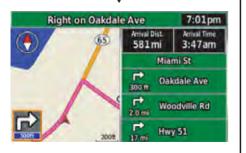

Your choices are 80 ft, 200 ft, 500 ft, 0.2 mi, 0.5 mi, 1 mi, 2 mi, 5 mi, 10 mi, 20 mi, 50 mi, 100 mi, 500 mi, 800 mi.

The length of the zoom scale in the lower right of the map screen represents the distance listed above the scale line. Once you change the map scale, that zoom setting will remain the default for subsequent map screens.

However, there are zoom limitations for the *Next Turn Pop-up* option. For both, the scale will adjust automatically depending on the distance to the junction. The *Next Turn Pop-up* cannot be zoomed.

## **Automatic Zooming**

If the *Auto zoom* option is turned on when 2D Heading Up or 2D North Up is selected for Map Orientation, automatic zooming on the map for optimal viewing will be activated. When the vehicle approaches the next turn, the system will zoom in on the map automatically; conversely, when the vehicle drives away from the turn, the system will zoom out on the map automatically. The map scale zooming in or out depends on the distance to the next turn and the vehicle speed.


## **Cursor Radius Point Locator**

In addition to using the *Find Destination* to create a route, you may use a second option – a *Cursor Radius Point Locator* that you can move around any main map screen in the system to a new location.

You may use this feature to select a destination, a via, or a *Favorite Place*.

If you have a map on the screen:


1. Press any of the four directional arrow buttons on the right fairing panel to make the cursor radius appear at your current vehicle position.

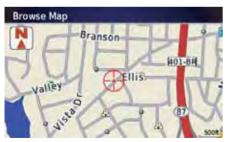

### NOTE:

To remove the cursor radius and return to the main map display showing your current location, press the MAP button. If you are riding, you may press the DISP button below the center display.

2. Use the four directional arrow buttons to move the cursor radius to any point on any map in the system. The map will automatically shift in response to your movement of the cursor.

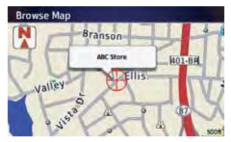

3. Zoom in or out to find the desired location, using the zoom control on the right fairing panel or the left handlebar.

4. Press ENT to bring up a *Point Review Screen* for the new location.



If the following screen appears instead of the screen shown above, with your choice highlighted, press ENT.



(cont'd)

### NOTE:

You can adjust the location or store it as a favorite place. For more information about Point Review Screens, see page 69.

5. With *Go To* highlighted, press ENT. When you have no route entered, a *Route Calculate Screen* will appear. Go to step 7.

#### NOTE:

For more information about the Route Calculate Screen, see page 72.

If you have a route entered in the system, the following screen will appear.



6. Highlight *As Only Destination* and press ENT to bring up a *Route Calculate Screen*.

#### NOTE:

You can add up to 250 selected location as your stop (via) by choosing As Via Point.

7. With *Calculate* highlighted on the *Route Calculate Screen*, press ENT. The screen will display a routing map to your new destination. (Your old route will automatically be deleted from the system.)

The *Main Menu* provides access to the seven major selections of your Navigation System. The system defaults to highlight *Find Destination* when you enter the *Main Menu* because it is the selection you will use the most.



To choose one of the seven *Main Menu* selections, use the right fairing panel controls (directional arrow buttons) to highlight the desired function and then push ENT.

*Find Destination* offers seven different ways to find or select a desired location. If there are no *Favorite Places* or *Previous Finds* in the system, the menu will not display those options.

ſ	By Favorite	_
	By Previous Find	
	By Point of Interest	
	By Phone Number	
	By Address	
	By Intersection	

*Favorite Places* allows you to enter your current location (indicated by the red cursor on the map screen) as a favorite place for future routing use. *Home* (if designated) and any *Favorite Places* already entered in the system will be displayed.

avorite Places		
Mark Position	Delete All	
🗃 Home	7.9 mi W	
ABC Fashion	24.0mi SE	
ä 002	25.3mi SE	
ABC Buffet	33.1mi SE	
a ABC Honda	41.0mi SW	

(cont'd)

*Routes* allows you to choose a route to your destination as well as adding other locations along the way. You may also refine your trip with route preferences and avoids.



If you select *Current Route* on the *Routes Menu*, you will see the following screen. You can edit the current route from this screen.



If you select *Share* on the *Routes Menu* when an SD memory card for Route data is inserted, you will see the following screen. You can save routes to your SD memory card.

Select routes to	copy to SD card
Select all	Copy to Card
Current Rou	te 📝
001	
002	
1	

*Route to Home* is a shortcut to a *Route Calculate Screen* with your *Home* entry as the destination. "Home" is not limited to your residence, but may be any location, such as where you are staying while out of town. If you have not entered a *Home* selection in the system, the following screen will be displayed.



If you have a *Home* selection in the system, the display will be a *Route Calculate Screen* which lets you route to your home position.



For storing a *Home* location, see *Set Home using Find Menu* on page 157 or *Set Home using Vehicle Position* on page 157.

### NOTE:

- Once you save a "Home" location, the map screen will display a "Home" icon for 100 miles or smaller map scale.
- Your "Home" location will be deleted by "Delete All" in Favorite Places menu.

*Weather* allows you to review the weather information, which includes weather forecasts, road conditions, winds, etc. You can check the weather for the current location and the city you select.



### NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.
- XM NavWeather may not show the weather at your exact location, but rather the nearest city's weather station data.

(cont'd)

*Traffic* allows you to review the traffic information, which includes traffic flow data, congestion, accidents, etc. You can check the traffic incidents on the map screen, or check them along a road you select or along the current route.



### NOTE:


- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.

The *Setup / Info* function lets you set the system and screen displays and guidance voice, and provides system information (three menus).

	_
Setup Screen	
Setup System	
Setup Language	
GPS Info	
System Info	
XM Info	

## Main Menu Diagram

The circular diagram on the right shows the menu selections that can be accessed from the *Main Menu*. The page number for each menu function appears in the diagram.

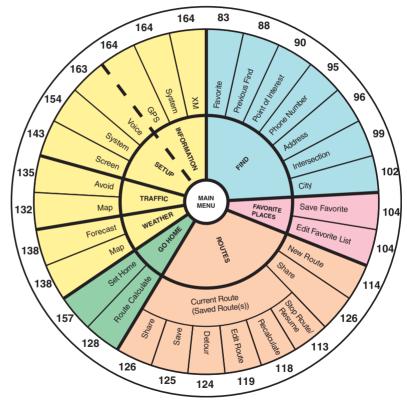

## **Summary of Main Menu Functions**

Find Destination	page 81	used to find a location.	
By Favorite	page 83	o select from up to 2,000 favorite locations saved in the system.	
By Previous Find	page 88	o select from your 30 previous finds.	
By Point of Interest	page 90	o select from points of interest loaded in the database.	
By Phone Number	page 95	to find a location by a known phone number.	
By Address	page 96	to locate a known address.	
By Intersection	page 99	to find an intersection of two known roads.	
By City	page 102	to locate a city or town.	

Here is a summary of the seven *Main Menu* functions:

These seven Find Destination functions are also used by the New Route menu, Edit Route-Add Stop menu, and Set Home using Find Menu (see page 157).

Favorite Places	page 103	used for easier routing to locations you have previously saved as a favorite. (Use the <i>Find Destination</i> menu to save a favorite.)
Mark Positionpage 105to add your current location to your Favorite Places storage list.		to add your current location to your Favorite Places storage list.
Delete All         page 107         to remove all items from your saved favorites.		to remove all items from your saved favorites.

Routes	page 111	used to create a new route or edit an existing route.	
New Route	page 114	to create a route to a save.	
Share	page 126	to save the selected route to the user's SD memory card when an SD memory card is inserted.	
Current Route	page 112	to display the current route. You may <i>Stop, Recalculate, Detour, Edit, Share</i> and <i>Save</i> the rout. This function appears only when you have set a route to go.	
Stop Route	page 113	to suspend your current route guidance for an intentional "detour."	
Resume	page 113	To resume your current route after stopping it. This function does not appear on the <i>Routes Menu</i> until after you use the <i>Stop Route</i> function.	
Recalculate	page 118	to modify an existing route for preferences, including six "avoids."	
Edit Route	page 119	to review your route and add (or delete) one or more locations (vias) en route to your destination	
Detour	page 124	to recalculate your route because of a detour.	
Save	page 125	to save the current route.	
Route to Home	page 127	used to route to a home location.	
Calculate	page 129	to calculate a route home if you have saved a <i>Home</i> location. (Otherwise, this selection directs you to the <i>Setup System</i> screen.)	
Weather	page 137	used to check the weather information, such as weather forecasts, road conditions, wind, or weather warnings.	
Мар	page 139	to review the weather map on the current location.	
Other City	page 139	to select the city for which you want to get the weather information.	
Forecast	page 140	to review the weather forecast on the current location.	

(cont'd)

Traffic	page 131	used to check traffic information, such as traffic flow or traffic incidents, and to recalculate a detour route to avoid the traffic incidents.	
Full Map	page 133	to review the all traffic information on the map.	
View By Road	page 133	to review the traffic information by selecting a road.	
On Current Route	page 134	to review the traffic information on your current route.	
Setup / Info	page 141	used to change or restore the factory-set defaults of the system and display system information. (See page 161 for a list of the defaults.)	
Setup Screen	page 143	to select how your screens will appear and certain screen functions.	
Setup System	page 154	to select time elements and store a Home location for routing.	
Setup Language	page 163	to select the language to be displayed, the pre-recorded voice or text-to-speech (TTS) voice fo the system's voice guidance as well as keyboard language.	
GPS Info	page 164	to check your GPS status, current location, elevation, accuracy, date, and time.	
System Info	page 164	to identify the software operating your system and the unit ID number, and check the maps u in the system and the copyrights.	
XM Info	page 164	to identify the software used in the system, available channels and data services, and your Radio ID.	
Turn Off Honda Navigation System	page 166	to turn off the navigation system.	

Use the right fairing panel directional arrow buttons and ENT button to "type" information in the several different system keyboards:

- Enter Any Part of Name
- Enter State/Province
- Enter City
- Enter Address Number
- Enter Street
- Enter Name of Route
- Enter Name of Favorite
- Please Enter Your Name



#### Typing in the Keyboard

Enter an address, the name of a favorite place or point of interest, and other information in the entry field at the top of the screen. Highlight the letter or numeral you want and press ENT.

#### Initials

The database includes some entries that leave a space between initials and some entries that do not. If your entry fails, try the alternative.

#### Punctuation

If a name was entered in the system database with a punctuation mark, the punctuation mark "key" will appear on the keyboard.

## Correcting a "Typo" Use the $\triangleleft$ or $\triangleright$ key.

## **Operating Keyboards**

Left Arrow Button	To move the cursor in the entry field one space to the left. (The directional arrow buttons do not create a space between words.) If the cursor is full left, pressing the left arrow moves the cursor to the far right of the keyboard.	
Right Arrow Button	To move the cursor in the entry field one space to the right. If the cursor is full right, pressing the right arrow moves the cursor to the far left of the keyboard.	
Up Arrow Button	To move up one row at a time on the keyboard. Also, to jump to the bottom row when a top row item is highlighted.	
Down Arrow Button	To move down one row at a time on the keyboard. Also, to jump to the top row when a bottom row item is highlighted.	

Press the following buttons on the right fairing panel controls.

Highlight the following items on the screen and press ENT.

	To enter a space between words or numbers and names. Also, serves as a substitute for punctuation such as periods.
Done	To execute what appears in the entry field.
	To move the highlight in the entry field to the right. Use this feature to enter the "guess" gray word.
	To move the highlight in the entry field to the left. Use this feature to "overwrite" an incorrect entry. All characters typed to the right of the correction will be lost.
Û	To make upper-case or lower-case conversion.
Language	To switch the keyboard language.
? & %	To switch to the keyboard for symbols.
<b>S</b>	To delete the character the cursor is positioned on.

## **List Screens**

The list screen is compiled from the system database based on the information you enter. When one of the following lists appears, highlight a location on a list and press ENT.

- Find By Favorite
- Find By Previous Find
- Find By Point of Interest
- Find By City
- Select Address
- Select Intersection
- Select City

The *Point Review Screen* then appears and allows you to create or edit a route.

The screen below is the *Find By Point of Interest* list.



## **Point Review Screens**

After entering your destination, a *Point Review Screen* appears. The *Point Review Screen* presents information about the point (location) you have selected as well as a menu.

The screen shown below is just an example. The menu items may differ.



#### NOTE:

The address may not appear if the system cannot locate the position. In that case, a blank space is shown on the display.

There are two kinds of *Point Review Screens*, and the menu items shown may differ depending on the screen:

When a location is designated from *Find Destination* menu or the *Cursor Radius Point Locator*, but is not already saved as a *Favorite Place* 

Aut	o Services:	2.5 mi	W	
A	IC Store			
An	34 Main St y Place, Ol 7-555-123	112345		
	Мар	Save	Selec	t




## **Point Review Screens**

When a location is designated from the *Find Destination* menu or *Cursor Radius Point Locator* (If the location is already saved as a *Favorite Place*)



When you have a route entered in the system and select *Go To*, the following screen will appear.

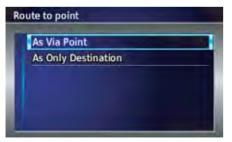


The following menu items appear on the Point Review Screens.

Go To	To create a route to your selected destination.
Save	To save the location in the <i>Favorite Places</i> storage file.
Мар	To display the selected location on the map.
Options	To <i>Delete, Rename</i> , and <i>Share</i> the current Favorite. (This option appears only if the location is already saved as favorite.)
Rename	To change the name of a favorite for easy recognition.
Delete	To delete the location as a favorite.
Share	To save the selected route to your SD memory card when an SD memory card for Route data is inserted.
As Via Point	To add up tp 250 location as a stop (via) on the current route.
As Only Destination	To create a new route to your selected destination.

On the *Point Review Screen*, highlight *Map* and press ENT. The system will show you the *Browse Map* screen. Note the Cursor Radius pointing to the location. You can zoom in or out by using the zoom control on the right fairing control panel or the left handlebar controls, and adjust the location by using the four directional arrow buttons. To return to the *Point Review Screen*, press the BACK button.

The screen shown below is just an example.

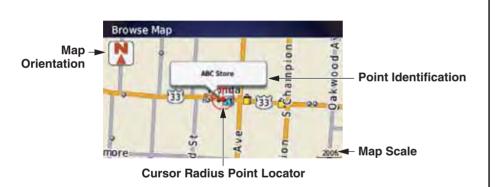



## Adjusting the Location

If the designated location shown on the *Point Review Screen* is not what you desired, you may adjust the location.



Use the four directional arrow buttons to move the cursor radius to any point on any map in the system. Press ENT when the cursor radius is positioned at your desired location.

## **Route Calculate & Edit Route Screens**

## **Route Calculate Screen**



From this screen, you activate the system's calculation function. Before calculation, you may choose some categories you want the system to avoid and a *Route Preference* (either *Faster Time* or *Shorter Distance*). (In some situations, the calculation may prioritize your selections and not apply all elements you choose.) The *Edit Route* option takes you to the *Add Stop (Find)* menu and lets you add one or more stops (vias) before reaching your destination.

### Avoid

To select each *Avoid* element you want, select the field, and press ENT.



The field turns highlighted, indicating its selection. To deselect an *Avoid*, select the highlighted field, and press ENT.



The highlighted field disappears. The *Avoid* is deselected. (You may select or deselect any combination of the all options.)

After choosing any *Avoids* and a *Route Preference*, you may edit the route to add another location en route to your destination (select *Edit Route*) or route directly to your destination (select *Calculate*).

### **Route Preference**

To change a current selection (highlighted field) shown on the screen, highlight *Route Preference* and press ENT.



### NOTE:

The system may calculate a route that includes a ferry passage. The Route Preference does not allow you to choose whether or not to include a ferry passage.

## Calculate

With *Calculate* highlighted, press ENT. A map screen will appear and the message banner will show "*Calculating*" plus a percentage indicating the progress of the calculation.



Upon completion of the calculation, you will see your route map.



## **Edit Route Screens**

With *Edit Route* highlighted on the *Route Calculate Screen*, press ENT. The *Select stop to sort Screen* shows the destination of your route (indicated by the checkered flag). With *Edit* highlighted, press ENT.

Sort	Edit	Next
Surrent Lo	cation	
+ Add	Stop	
- 🎮 AB	C Store	
+ Add	Stop	

(cont'd)

## **Route Calculate & Edit Route Screens**

To edit the route, highlight *Add Stop*, and press ENT.

1	By Favorite	
	By Previous Find	
	By Point of Interest	
	By Phone Number	
	By Address	
	By Intersection	

The Add Route Stop menu offers the seven Find Destination menu selections. Use any of these selections to add a location to your route. Example – using the By Point of Interest option brings up the following screen:



With *Search All* highlighted and press ENT.



Use the keyboard to type your desired name.

### NOTE:

For information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.

All Points of Interest	
Near Here	Spell
Hinnda South	25.9mi S
🐵 Honda North	30.2mi NW
Honda Motors	30.2mi NW
🖛 ABC Honda	30.4mi SW
🕾 Honda World	30.9mi S

With your choice highlighted, press ENT.

A	uto Services:	Dealer or Au	2.5 mi	W
4	ABC Store			
1	1234 Main St Any Place, O 937-555-123	H 12345		
Ľ	Мар	Save	Selec	t

With Select highlighted, press ENT.

# **Route Calculate & Edit Route Screens**



The *Edit Route Screen* now shows your destination (checkered flag) preceded by any via stops (orange flag) en route and offers two editing options.

The following options are available from the *Edit Route*.


Sort	To rearrange the order of the locations on the <i>Select stop to sort</i> list. This includes switching a current via with the current destination. To sort, highlight the item to be repositioned, and press ENT. Use the up and down directional arrows to move the item up or down the list, then press ENT.
Edit	To add or delete a location on a route. To add, highlight <i>Add Stop</i> and press ENT to bring up the <i>Add Route Stop (Find)</i> menu. To delete, highlight a location to be deleted, and press ENT.
Next	To calculate and display preview of modified route. By pressing <i>Next</i> , the <i>Route Preview Screen</i> appears and the system calculates the route.

# **Route Calculate & Edit Route Screens**

Highlight *Next* and press ENT. The *Route Calculate Screen* appears.



With *Next* highlighted, press ENT. The system calculates the route.

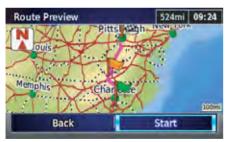

When calculation has completed, highlight *Start* and press ENT.

Upon completion of the calculation, you will see your route map.



# Weather/Traffic Information Screen

# Weather Information Screen

When you select *Weather* on the *Main* Menu, the following screen will be displayed.



Highlight Map and press ENT to review the weather information on the map.

## NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 164. XM service only available in the 48
- ٠ contiguous United States.
- For information about other options (Other City and Forecast), see page 137.
- XM NavWeather may not show the weather at your exact location. but rather the nearest city's weather station data.

The system shows you four weather maps, such as Current Conditions, Road Conditions, Winds, and Weather Bulletins. To switch weather maps, highlight *Previous* or *Next* and press ENT. The screen shown below is just an example.



# Weather/Traffic Information Screen

 Previous
 to show the previous weather map.

 Previous
 to show the full map. You can scroll the map using four directional arrow buttons and zoom in or out on the map screen.

 Next
 to show the next weather map.

#### NOTE:

- You cannot select a destination on the Browse Map screen for weather information.
- You can also see the weather information map on the Traffic/Weather Review screen. For information about the Traffic/Weather Review screen, see page 80.

If your XM subscription is Basic Weather, the system will display the weather icons instead of graphical "radar" depictions on the *Current Conditions* map.

# **Traffic Information Screen**

The navigation system can display up-to-the minute traffic information when available. The screen shown below is just an example.

## NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.



# **Traffic/Weather Review Screen**

When you push in and hold the VOICE/ GUIDE button on the left handlebar controls, the *Traffic/Weather Review* screen will be displayed. *The Traffic/ Weather Review* screen can display one of five different screens. Move the ZOOM IN/OUT toggle to the right or left and hold it to switch the review screens. To return to the navigation map screen, push in and hold the VOICE/ GUIDE button or press the MAP or DISP button.

## NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.
- XM NavWeather may not show the weather at your exact location, but rather the nearest city's weather station data.





# **Find Destination**

Find Destination	82
By Favorite	83
Finding Nearest	
Finding by Name	
By Previous Find	
By Point of Interest	
Category/Subcategory	90
Point of Interest - Categories & Subcategories	
Finding Nearest	92
Finding by Name	
By Phone Number	
By Address	
By Intersection	
By City	

# **Find Destination**

This section explains the seven methods you may use to find a destination.

On the *Main Menu*, highlight *Find Destination*.



Press ENT. The *Find Destination* menu appears.



The following options are available from the Find Destination menu.

By Favorite	To select from up to 2,000 favorite locations you have saved in the system.
By Previous Find	To select from your previous 30 finds.
By Point of Interest (POI)	To select from points of interest loaded in the database. (You may not add to the database.)
By Phone Number	To find a location by a known phone number.
By Address	To route to a known address.
By Intersection	To find a location when you do not know the street address, but do know the intersection.
By City	To find a known city or town.

## NOTE:

If you have no favorites or previous finds in the system, the "By Favorite" or "By Previous Find" choices will be grayed out.

The *By Favorite* option gives you two ways to find a favorite place you have already entered in the system.

On the *Find Destination* menu, highlight *By Favorite* and press ENT. The following screen appears.

Near Here	Spell
🗃 Home	0.8mi N
ABC Fashion	1.8 mi NE
002	9.1mi S
ABC Buffet	16.3mi N
ABC Honda	42.7mi E

NOTE:

For procedures on storing favorite places, see page 105.

# **Finding Nearest**

You will see the *Near Here* option at the top of the screen. The default *Near Here* includes the favorite places near your current location. You may change the list by selecting one of the other five options. To do that, highlight *Near Here* and press ENT.

Near Here	
Near Other City	
Near Current Route	
Near Current Road	
Near Previous Find	
Near Destination	

## NOTE:

If you do not have a route in the system, the "Near Current Route" and "Near Destination" options will be grayed out.

# **Finding Near Here**

The favorite places near your current location will appear in the list. With *Near Here* highlighted, press ENT.

Fir	nd By Favorite		
F	Near Here	Spell	
	🗃 Home	0.8mi	N
	ABC Fashion	1.8mi	NE
	002	9.1 mi	S
	ABC Buffet	16.3mi	N
	ABC Honda	42.7mi	Ε

The screen will display the name of the nearest favorites you have entered in the system. Highlight your choice and press ENT. A *Point Review Screen* appears.

# **By Favorite**

# **Finding Near Other City**

The favorite places near the city you select will appear in the list. Highlight *Near Other City* and press ENT.

							4		0
1	2	3	4	5	6	1		9	0
<b>A</b>	Н.	¢	D	÷8	F	6	H	1	-
1	ĸ	L	H	N	0	#	9		
5	T	U	V	W	×	Ÿ	z		
1	angu	Bae		2.6	%	_	n	one	-

Type in the name of the desired city.

## NOTE:

For information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.

0	Chicago, IL	237 mi NW
0	Chicago Bay, MN	618mi NW
	Chicago Heights, IL	226mi NW
0	Chicago Ridge, IL	238mi NW

Highlight your choice and press ENT.

nd By	Favorite	
Nea	nr Chicago	Spell
	ABC Airport	187 mi 5E
۲	001	201mi SE
	ABC Buffet	229mi SE
1	Home	237 mi SE
围	ABC Theater	238mi E

Next, highlight your specific destination and press ENT. A *Point Review Screen* appears.

# **Finding Near Current Route**

The favorite places near the current route will appear in the list. Highlight *Near Current Route* and press ENT.

ar Current Route	Spell
🛃 Home	0.3mi
S ABC Federal Credit	0.4 mi
ABC Fashion	7.6mi
ABC Company	21.6mi
a ABC Honda	81.2mi

Highlight your choice and press ENT. A *Point Review Screen* appears.

# **Finding Near Current Road**

The favorite places near the current road will appear in the list. Highlight *Near Current Road* and press ENT.



Highlight your choice and press ENT. A *Point Review Screen* appears.

# **Finding Near Previous Find**

The favorite places near the previous find you select will appear in the list. Highlight *Near Previous Find* and press ENT.

in	d By Previous Find	
C	Category: All	
	@ 001	43.4mi 5
	ABC Honda	42.7mi 9
	ABC Theater	56.4mi 5
	ABC Buffet	16.2mi \
	🙁 Chicago, Illinois, Unit	237mi \

Highlight your choice and press ENT.



Next, highlight your specific destination and press ENT. A *Point Review Screen* appears.

# **Finding Near Destination**

The favorite places near the destination will appear in the list. Highlight *Near Destination* and press ENT.

Near Home	Spell
🔮 Home	0.0mi NE
ABC Honda	49.6mi SE
ABC Company	60.8mi SE
ABC Fashion	73.6mi SE
002	81.5mi SW

Highlight your choice and press ENT. A *Point Review Screen* appears.

# **By Favorite**



#### NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

roid		
U-Turns	Highways	
Toll Roads	Ferries	
Carpool Lanes	Traffic	
ute Preference	Faster Time	
Edit Route	Calculate	

## NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# Finding by Name

This search option allows you to select your favorite place by name. Highlight *Spell* and press ENT.



Type in the name of the desired favorite.

# NOTE:

For more information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.



Highlight your choice and press ENT. A *Point Review Screen* appears.



#### NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.



#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **By Previous Find**

The *By Previous Find* option displays your 30 previous finds (including those that may have been designated as *Favorite Places*).

On the *Find Destination* menu, highlight *By Previous Find* and press ENT. The following screen appears.

Category: All	
* 001	43.4mi 5W
ABC Honda	42.7mi NE
M ABC Theater	56.4mi E
ABC Buffet	16.2mi SW
Chicago, Illinois, Unit	237 mi N

You will see the *Category: All* at the top of the screen. The default *All* includes all previous finds. You may reduce the list by selecting one of the other five categories. To do that, highlight *Category: All* and press ENT.

AJI	
Addresses and Intersec	tions
Point of Interest	
Cities	
Phone Numbers	
Others	

Highlight your desired category and press ENT.

Fi	nd By Previous Find		
I	Category: All		
Г	001	43.4mi	5W
	ABC Honda     ABC HOND	42.7mi	NE
	🕲 ABC Theater	56.4mi	E
	ABC Buffet	16.2mi	SW
	💿 Chicago, Illinois, Unit	237 mi	N

The screen will show the list for the category you selected. Highlight your choice and press ENT. A *Point Review Screen* appears.

Favorites		42.7mi	NE
ABC Honda			
1234 Main S Any Place, C 937-555-123	H 12345		
Мар	Options	Go To	

# NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.



#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **By Point of Interest**

The *By Point of Interest* option displays *Points of Interest* loaded in the data system. (You may not add locations to the database.)

On the *Find Destination* menu, highlight *By Point of Interest* and press ENT. The screen will show the category list.

Search All	
Food & Drink	
Lodging	
Fuel	
Shopping	
Honda Motorcycle Dealers	

# **Category/Subcategory**

There are 14 categories for *Point of Interest*. You may refine your search to a specific category and then to a subcategory of that selection.

Search All	
Food & Drink	
Lodging	
Fuel	
Shopping	
Honda Motorcycle Dealers	
ATM/Bank	
Attractions	
Recreation	
Entertainment	
Transportation	
Hospital	
Auto Services	
Community.	
Others	

Highlight your choice (example: *Auto Services*) and press ENT.

#### Select Auto Services Category



There are eleven sub-categories for *Auto Services*. Scroll down the menu. Highlight your sub-category choice and press ENT.

D	Dealer or Auto Parts	
	Near Here	Spell
Т	ABC Honda	0.6mi S
	ABC Motors	0.6mi NE
	🐡 Honda South	0.6mi 5
	🖛 Honda North	0.8mi N
	ABC Auto Parts	1.1mi E

The screen will offer the *Near Here* and *Spell* options for searching the selected sub-category.

## Point of Interest - Categories & Subcategories

#### Food & Drink

All Categories American Asian Barbecue Chinese Deli or Bakery International Fast Food Italian Mexican Pizza Seafood Steak or Grill Bagel or Donut Cafe or Diner French German **British Isles** Specialty Food Products Other

#### Lodging

All Čategories Hotel or Motel Bed and Breakfast Inn Campground or RV Park Resort Sporting and Instructional Camp

#### Fuel

All Categories Convenience Auto Fuel Truck Stop

#### Shopping

All Categories Department Grocery General Merchandise Shopping Center Pharmacy or Chemist Convenience Apparel House and Garden Home Furnishings Specialty Retail Computer/Software Other

#### Honda Motorcycle Dealers

#### ATM/Bank

Attractions All Categories Amusement or Theme Park Museum or Historical Landmark Park or Garden Zoo or Aquarium Arena or Track Hall or Auditorium Winery Other

#### Recreation

All Categories Golf Course Skiing Center or Resort Bowling Center Ice Skating Sports or Fitness Center Amusement or Theme Park Park or Garden Arena or Track

#### Entertainment

All Categories Live Theater Bar or Nightclub Movie Theater Casino

#### Other

#### **Transportation**

All Categories Auto Rental Air Transportation Ground Transportation Transit Service

#### Hospital

#### **Auto Services**

All Categories Auto Rental Auto Repair Dealer or Auto Parts Wrecker Service Parking Rest Area or Tourist Info Automobile Club Car Wash Truck Stop Rest Area Tourist Info

# **By Point of Interest**

#### Community

All Categories Library School Place of Worship Police Station City Hall Court House Community Center Border Crossing Government Office Fire Department Post Office Bank or ATM Utility

#### Others

All Categories Marine Services Garmin Dealer Personal Service Business Service Communications Repair Service Social Service Other

# **Finding Nearest**

With Near Here highlighted, press ENT.

Near Here	
Near Other City	
Near Current Roi	ute
Near Current Ro.	ad
Near Previous Fi	nd
Near Destination	

Highlight your desired search option and press ENT.

## NOTE:

- If you do not have a route in the system, the "Near Current Route" and "Near Destination" options will be grayed out.
- For more information about the Near search option, see page 83.



# NOTE:

If the system database does not find any POI, the pop-up says: "None Found." Select another search option or press the BACK button to return to the Point of Interest screen. With your choice highlighted, press ENT. A *Point Review Screen* appears.



## NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

Route Calculate	
U-Turns	Highways
Toll Roads	Ferries
Carpool Lanes	Traffic
Route Preference	Faster Time
Edit Route	Calculate

#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **Finding by Name**

With Spell highlighted, press ENT.



Use the keyboard to type the name.

## NOTE:

For more information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.

# **By Point of Interest**



Highlight your choice and press ENT. A *Point Review Screen* appears.



#### NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.



## NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **By Phone Number**

The *By Phone Number* option lets you put a phone number into the system so you may route to the location of the phone number.

On the *Find Destination* menu, highlight *By Phone Number* and press ENT. The following screen appears.



Highlight your choice and press ENT.



Highlight your choice and press ENT. *A Point Review Screen* appears.



With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

rold		
U-Turns Toll Roads	Highways Ferries	
Carpool Lanes	Traffic	
oute Preference	Faster Time	
Edit Route	Calculate	

#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **By Address**

The *By Address* option lets you put an address into the system so you may route to it.

On the *Find Destination* menu, highlight *By Address* and press ENT. The following screen appears.

Ohio	and the second sec
Idaho	
Kansas	
Select State/Pr	ovince

The system shows your current state/ province, recently selected state/ province. If you use the *Select State/ Province* option, you can search for an address in another state/province. Highlight your choice and press ENT. If you choose the *Select State/Province* option, the keyboard screen will appear. Type the name of state/province. After typing, highlight *Done* and press ENT. The *Select State/Province* screen will appear. Highlight your desired state/ province and press ENT.

## NOTE:

For information about the keyboard screen, see page 65.



Highlight Search All Cities and press ENT.

## NOTE:

The Select City/Postal Code option will narrow your search. If you use this option, you will need to type the city name or the postal code you want on the keyboard screen.



Use the keyboard to type in the number.

## NOTE:

For more information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.

# **By Address**

Enter Street									
							4		0
1	2	3	1	5	6	1			0
я.	Н.	¢	b	-E	F.	6	#	1	-
1	ĸ	L	H	N	0	#	9	R	•
5	T	U	V	W	X	Ŷ	z		
Language				76	%		D	one	

Type in the street. After typing, highlight *Done* and press ENT.

Main (A	y, St, Ter)	

Highlight your choice and press ENT. The following screen appears.

Akron, OH	
Any Place, OH	
Bellefontaine, OH	

Highlight your choice and press ENT. The following screen appears.



## NOTE:

If the system database does not find the address you are looking for, the pop-up says: "None Found." Press the BACK button to return to the Find Address screen. Highlight the address you want and press ENT. A *Point Review Screen* appears.



#### *NOTE: For more information about the Point Review Screen, see page 69.*

# **By Address**

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

Route Calculate	
Toll Roads	Highways Ferries
Carpool Lanes Route Preference	Traffic Faster Time
Edit Route	Calculate

#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# **By Intersection**

You may know an intersection, but not know the street address (example: Main and E Vine St). This option lets you locate the intersection.


On the *Find Destination* menu, highlight *By Intersection* and press ENT. The following screen appears.

Ohio	
Kansas	
ldaho	
Select State/Province	

The system shows your current state/ province, recently selected state/ province. If you use the *Select State/ Province* option, you can search for an address in another state/province. Highlight your choice and press ENT. If you choose the *Select State/Province* option, the keyboard screen will appear. Type the name of state/province. After typing, highlight *Done* and press ENT. The *Select State/Province* screen will appear. Highlight your desired state/ province and press ENT.

## NOTE:

For information about the keyboard screen, see page 65.

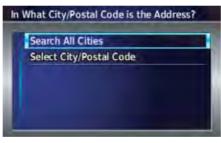

Highlight *Search All Cities* and press ENT.

## NOTE:

The Select City/Postal Code option will narrow your search. If you use this option, you will need to type the city name or the postal code you want on the keyboard screen.



Use the keyboard to type the first street name. After typing, highlight *Done* and press ENT.

## NOTE:

For more information about the keyboard screen, see page 65.

# **By Intersection**



Highlight your choice and press ENT.



Repeat the keyboard process for the second street.

Select Second Street Black Bass Black Bear Rd Black Bird Ln Black Bob (Dr, Rd) Black Gold Ave **Black Heath Ct** 

With your choice highlighted, press ENT.



## NOTE:

If the system database does not find the intersection you are looking for, the pop-up says: "None Found." Press the BACK button to return to the Find Intersection screen. If you find the intersection you want, highlight it and press ENT. A *Point Review Screen* appears.



# NOTE:

For more information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.




#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highrighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# By City

You can locate a city as your destination. On the *Find Destination* menu, highlight *By City* and press ENT. The following screen appears.

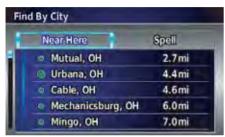

To find a closest city to your current location, current road, destination, etc., select *Near Here* and see page 83. To find a city by its name, select *Spell* and see page 93.

Highlight your desired city and press ENT. A *Point Review Screen* appears.



## NOTE:

For information about the Point Review Screen, see page 69.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.



#### NOTE:

For information about the Route Calculate screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Favorite Places	
Storing Favorite Places	
Renaming Favorite Places	
Deleting Favorite Places	
Sharing Favorite Places	
0	

The *Favorite Places* option allows you to designate your current location as a favorite place for future navigation or to select a stored favorite from the system.

On the *Main Menu*, highlight *Favorite Places*.



## Press ENT.

Mark Position	Delete All
🛃 Home	0.0 mi NE
ABC Fashion	24.0mi SE
a 002	25.3mi SE
ABC Buffet	33.1mi SE
CABC Honda	41.0mi SW

The following options are available from the Favorite Places screen.

Mark Position	To add your current location to your favorites list.
Delete All	To remove all locations from your saved favorites including your "Home" location.

#### NOTE:

If you have saved a "Home" location, it will appear in the "Favorite Places" list even if you have not saved any "Favorite Places."

#### 104 Favorite Places

# **Storing Favorite Places**

The *Favorite Places* screen offers the *Mark Position* option to store favorite locations.

## **Mark Position**

On the *Favorite Places* screen, highlight *Mark Position* and press ENT. The *Point Review Screen* then appears.



#### NOTE:

For more information about the Point Review Screen, see page 69.

Highlight Save and press ENT.

Favorites	-	0.0mi N
001		
N 40°16.47 W083°30.49		
Мар	Options	Go To

The screen will assign an ID number to your selection and offer several options. The current vehicle position is saved in the system.

# Mark by Cursor Position

Follow steps 1 to 3 on page 55 to move a cursor to the location you want to save. Press ENT. A *Point Review Screen* then appears.

Attractions: Pa	ark or Garden	7.4mi E
ABC Parks		
1234 Main St Any Place, Ol 937-555-123	H 12345	
Мар	Save	Go To

The screen will assign an ID number to your selection and offer several options. Highlight *Save* and press ENT. The current cursor position is saved in the system.

## NOTE:

For more information about the Point Review Screen, see page 69.

# **Renaming Favorite Places**

On the *Favorite Places* screen, highlight the location you want to rename and press ENT. A *Point Review Screen* appears.



## NOTE:

For more information about the Point Review Screen, see page 69.

Highlight *Options* and press ENT. The following screen appears.

avo	orite Options
	Delete
	Rename
	Share

Highlight Rename and press ENT.



Use the keyboard to type in the name you selected for the new favorite place.

## NOTE:

For more information about the keyboard screen, see page 65.



After typing, highlight *Done* and press ENT.



Press the BACK button to return to the *Favorite Places* screen.

# **Deleting Favorite Places**

On the *Favorite Places* screen, highlight the location you want to delete and press ENT. A *Point Review Screen* appears.




#### NOTE:

For more information about the Point Review Screen, see page 69.

Highlight *Options* and press ENT. The following screen appears.

# Favorite Options Delete Rename Share

Highlight Delete and press ENT.

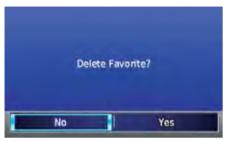

The screen asks you to confirm your selection. Highlight *Yes* and press ENT.

The display returns to the *Favorite Places* screen with your selection deleted.

To delete all *Favorite Places* from the list, highlight *Delete All*. Press ENT to execute the deletion.

# **Sharing Favorite Places**

The *Share* option allows you to save the selected favorite to SD memory card when an SD memory card for Route data is inserted.


On the *Favorite Places* screen, highlight the favorite you want to share and press ENT. A *Point Review Screen* appears.



## NOTE:

For more information about the Point Review Screen, see page 69.

Highlight *Options* and press ENT. The following screen appears.

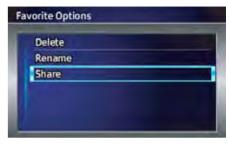

Highlight Share and press ENT.

Check your choice, highlight *Copy to Card*, and press ENT.



Use the keyboard to type in the filename.

En	ter	GPX	File	nan	1e						
										•	e
1	2	э	F	4	6	1	6	9	0	-	2
	.8	C	D	E	F	G.	H		1	ĸ	L
M	N	Ň	0	P.	9	R	5	T	U	V	W
X	Ŧ	z	A	E		0	9				
Γ	Lan	gua	ge	l	? &	%			Do	ne	

After typing, highlight *Done* and press ENT. If highlight *Done* and press ENT without typing, the filename will be decided automatically.

The system starts copying the selected favorite to the SD memory card.

#### NOTE:

- Do not operate any controls while copying the data.
- Copying stops when you start riding.

# **Routes**

Routes	112
New Route	
Setting and Saving a New Route	
Selecting a Route from the List	
Setting a Route on Website	
Recalculate	
Edit Route	
Adding a Location as a Via	
Adding a Road as a Via	
Detour	
Save	
Share	

# Routes

To access the *Routes Menu*, highlight *Routes* on the *Main Menu*.



Press ENT. The first time you select the *Routes* option, or any time you do not have a route in the system, you will see the following screen.

New Route	Share
urrent Route	

Use *New Route* to create a route to a destination. Anytime you have a route entered in the system, you will see the following screen.



Highlight *Current Route* and press ENT. The following screen appears.

The screen now shows your destination (checkered flag) and the starting point (green flag).



### NOTE:

- "Detour" will not appear on the menu if you go off route or do not have satellite reception.
- If the system calculates a route but does not have satellite reception, the voice guidance will not operate until reception is acquired.

The following	options are	available from	the Routes N	lenu
The following	options are	available from	the nomes n	icnu.

#### NOTE:

The "New Route" selection takes you to the seven Find Destination functions. In this "Routes" section of the manual, the instructions will refer you to the "Find Destination" step-by-step sequences.

New Route	To create a route to save.
Share	To save the selected route to your SD memory card when an SD memory card for Route data is inserted.
Current Route	To display the current route. You may <i>Stop</i> , <i>Recalculate</i> , <i>Detour</i> , <i>Edit</i> , <i>Share</i> and <i>Save</i> the route. This function appears only when you have set a route to go.
Stop Route	To suspend your current route for an intentional "detour" so you do not lose your current route or receive off-route messages. You may also use <i>Stop Route</i> if you reach the vicinity of your destination (example: large parking lot) but the route does not terminate. To return to your route, go to the <i>Main Menu</i> , select <i>Route</i> , and then <i>Resume</i> .
Resume	To resume your current route after stopping it. This function does not appear on the <i>Routes Menu</i> until after you use the <i>Stop Route</i> function.
Recalculate	To modify an existing route by picking a route preference (either faster time or shorter distance) and entering up to four "avoid" preferences.
Edit Route	To review your route and add (or delete) one or more locations en route to your destination.
Detour	To recalculate your route because of an unexpected detour of from $\frac{1}{2}$ to 15 miles.
Save	To save the current route.

# **New Route**

# Setting and Saving a New Route

The *New Route* option allows you to set a specific route and save it. You can select the saved route later from *Routes Menu*.

On the *Routes Menu*, highlight *New Route* and press ENT. The following screen appears.



The system offers the seven *Find Destination* menu choices.

See *Find Destination* on page 81 for information about designating a location. A *Point Review Screen* will appear.

Au	to Services:	Dealer or Au	2.5mi	W
4	ABC Store			
A	234 Main St ny Place, Oi 37-555-123	H 12345		
E	Мар	Save	Selec	

#### NOTE:

For more information about the Point Review Screen, see page 69.

With *Select* highlighted, press ENT. The *Select stop to sort Screen* appears.



With *Edit* highlighted, press ENT. The *Edit Route* Screen appears.



With Add Stop highlighted, press ENT.

Select a starting point, and press ENT.

Favorites		_	7.9mi	W
Home				
N 40°16 W083*3				
Мар	Rename	Delete	Sele	ct 丨

With Select highlighted, press ENT.

The screen now shows your destination (checkered flag) and the starting point (green flag).



Highlight Next and press ENT.

#### The Route Calculate Screen appears.



### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Next* highlighted, press ENT. The system calculates the route. When calculation has completed, highlight *Save* and press ENT.



Use the keyboard to type in the name for the route.



#### NOTE:

For more information about the keyboard screen, see page 65.

(cont'd)

# **New Route**

After typing, highlight *Done* and press ENT.



Press ENT.



The saved route will be listed on the *Routes Menu*.

New Route	Share
Current Route	
001	
002	
003	

#### NOTE:

- You can rearrange the order of the locations on the Select stop to sort list. To sort, highlight the item to be repositioned, and press ENT. Use the up and down directional arrows to move the item up or down the list, then press ENT.
- When you create a route with a starting point other than your current position, the system calculates a route to the starting point from your current position.

# Selecting a Route from the List

You can select a saved or imported route from the list.


On the *Routes Menu*, highlight a route and press ENT.

New Route	Share
Current Route	
001	
002	
003	

The following screen appears.



Highlight *Start* and press ENT. The following screen appears.

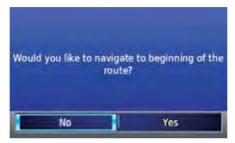

Highlight *Yes* and press ENT. A *Route Calculate* Screen appears. With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

#### NOTE:

To create a route using the current track log points, see page 152.

### Setting a Route on Website

Besides using the *New Route* option, you can set a route on a website (http:// www.TripPlanner.honda.com) and save it to your SD memory card. You can import the data from *Import Data from SD Card* menu (see page 158). For details on how to set a route, see *Help* on the website.

#### NOTE:

The route set on the website may look different when imported because the route will be optimized by the map software in the navigation system. The route might be changed when it's recalculated.

# Recalculate

The *Recalculate* option lets you modify your current route to shorten the time or distance, as well as enter up to four "avoid" preferences.

On the *Routes Menu*, highlight *Current Route* and press ENT. The *Current Route screen* appears.



Highlight *Recalculate* and press ENT. A *Route Calculate Screen* appears.

oute Calculate	
U-Turns Toll Roads	Highways Ferries
Carpool Lanes	Traffic
oute Preference	Faster Time
Edit Route	Calculate

#### NOTE:

For more information about the Route Calculate Screen, see page 72.

After entering your preferences, highlight *Calculate* and press ENT. The system calculates the route to the destination and starts the voice and route guidance.

The *Edit Route* option on the *Routes Menu* lets you edit an existing route in the system to add (or delete) one or more locations on the way to your destination. You can also rename or delete saved routes.

Start	To start the navigation of the selected route. (This option appears only if the location is already saved as a route.) See <i>Selecting a Route from the List</i> on page 117.
Rename	To change the name of a route. (This option appears only if the route is already saved as a route.)
Delete	To delete a saved route. (This option appears only if the location is already saved as a route.)
Sort	To rearrange the order of the locations on the <i>Select stop to sort</i> list. This includes switching a current via with the current destination. To sort, highlight the item to be repositioned, and press ENT. Use the up and down directional arrows to move the item up or down the list, then press ENT.
Edit	To add or delete a location on a route. To add, highlight <i>Add Stop</i> and press ENT to bring up the <i>Add Route Stop (Find)</i> menu. See <i>Adding a Location as a Via</i> on page 120. To delete, highlight a location to be deleted, and press ENT.
Next	To calculate and display preview of modified route. By pressing <i>Next</i> , the <i>Route Preview Screen</i> appears and the system calculates the route.

The following options are available from the Edit Route.

### Adding a Location as a Via

On the *Routes Menu*, highlight a route you want to edit and press ENT.



On the next screen, highlight *Edit Route* and press ENT.



The Select stop to sort Screen appears.



With *Edit* highlighted, press ENT. The *Edit Route Screen* appears.

On the *Edit Route* screen, highlight *Add Stop* and press ENT. The following screen appears.

Id Route Stop	_
By Favorite	
By Previous Find	
By Point of Interest	
By Phone Number	
By Address	
By Intersection	

The *Add Route Stop* menu offers the seven *Find Destination* menu selections.

See *Find Destination* on page 81 for information about adding a location to the route. A *Point Review Screen* will appear.



#### NOTE:

For more information about the Point Review Screen, see page 69.

With Select highlighted, press ENT.

Sort	Edit	Next	
4 Add S	top		
- P Home Add Stop			
🕂 Add S	top		

If you want to add another via stop, highlight *Add Stop*, press ENT, and repeat the procedure. The second added via stop will become your first stop on your route.

#### NOTE:

When you enter two or more via stops, add them in the reverse order of your travel plan (enter the final via before your destination first). Otherwise, use the "Sort" option to change the order of via stops. Highlight *Next* and press ENT if you completed adding or removing a location from the current route and rearranging the order of the locations.



With *Next* highlighted, press ENT. The system calculates the route. When calculation has completed, highlight *Start* and press ENT. The system calculates the route to the destination(s) and starts the voice and route guidance.

### Adding a Road as a Via

You may enter a section of a road (such as a scenic ride) as a via to your route by using the *Cursor Radius Point Locator* feature.

1. Position the cursor radius where you want to end riding the road on the map screen.



*NOTE: For more information about the Cursor Radius Point Locator, see page 55.* 

2. Bring up the *Point Review Screen* by pressing ENT.




If the following screen appears instead of the screen shown above, with your choice highlighted, press ENT.



3. With Go To highlighted, press ENT.



4. With *As Via Point* highlighted, press ENT.

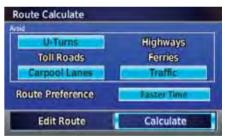

5. With *Calculate* highlighted, press ENT. The system recalculates the route to the destination and displays the map screen.

6. Position the cursor radius point locator where you want to start your ride on the road and repeat the process to add it as a via.

It may be necessary to create additional points along the road to make sure the system does not route you off the selected road to calculate what it considers a more direct route.

- 7. With Go To highlighted, press ENT.
- 8. With *As Via Point* highlighted, press ENT. A *Route Calculate Screen* appears.



#### NOTE:

For more information about the Route Calculate Screen, see page 72.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

# Detour

On the *Routes Menu*, highlight *Current Route* and press ENT. The *Current Route screen* appears.



Highlight *Detour* and press ENT. The following screen appears.

1/2 mile	-
1 mile	
2 miles	
5 miles	
15 miles	

Highlight the distance you want to detour, and press ENT.

#### NOTE:

To cancel your entry, press the BACK button. The original route display returns.

The system calculates the route to the destination and starts the voice and route guidance.

On the *Routes Menu*, highlight *Current Route* and press ENT. The *Current Route screen* appears.



Highlight Save and press ENT.

Use the keyboard to type in the name for the route.



#### NOTE:

For more information about the keyboard screen, see page 65.

# Share

The *Share* option allows you to save the selected route to SD memory card when an SD memory card for Route data is inserted into the route data card slot (see page 181).

On the *Routes Menu*, highlight *Share* and press ENT.

New Route	Share
Current Route	
Route 1	
Route 2	

The following screen appears.



To select all saved routes, highlight *Select all* and press ENT. Or to select individual route(s), highlight your choice(s) and press ENT. Then, highlight *Copy to Card* and press ENT. Use the keyboard to type in the filename.



After typing, highlight *Done* and press ENT. If highlight *Done* and press ENT without typing, the filename will be decided automatically.

The system starts copying the selected route to the SD memory card.

#### NOTE:

- Do not operate any controls while copying the data.
- Copying stops when you start riding.

Route to Home	
Calculating a Route Home	
Checking Your Home Location	
Deleting Your Home Location	

Once you store a *Home* location using *Set Home using Find Menu* (see page 157) or *Set Home using Vehicle Position* (see page 157), *Route to Home* offers a quick method to route there.

On the *Main Menu*, highlight *Route to Home*.

0	Find Destination	1	Route to Home
٩,	Favorite Places	٠	Traffic
	Routes	0	Weather
*	Setup/Info		

Press ENT.

If you have previously entered a *Home* location, a *Route Calculate Screen* appears.

Route Calculate	-
U-Turns	Highways
Toll Roads	Ferries
Carpool Lanes	Traffic
Route Preference	Faster Time
Edit Route	Calculate

If there is no *Home* in the system, you will be directed to *Setup System* screen.



For storing a *Home* location, see *Set Home using Find Menu* on page 157 or *Set Home using Vehicle Position* on page 157.

#### NOTE:

- Once you save a "Home" location, the map screen will display a "Home" icon for 100 miles or smaller map scale.
- Your "Home" location will be deleted by "Delete All" in Favorite Places menu.

### **Calculating a Route Home**

If you have already entered a *Home* location in the system, the screen will display a *Route Calculate* screen.



With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

### Checking Your Home Location

If you forget what location you have designated as *Home*, go to the *Main Menu*, and with *Favorite Places* highlighted, press ENT.

Favorite Places			
f	Mark Position	Delete All	
	🗃 Home	7.9 mi W	
	ABC Fashion	24.0mi SE	
	â 002	25.3mi SE	
	ABC Buffet	33.1mi SE	
	a ABC Honda	41.0mi SW	

*Home* will appear in the *Favorite Places* list. To see the *Point Review Screen* for your *Home* selection, highlight *Home* and press ENT.



### NOTE:

If you want to change your Home location, you may do so with the Find menu or by Vehicle Position. See page 157.

#### **Deleting Your Home** Location

On the *Favorite Places* screen, highlight *Home* and press ENT. A *Point Review Screen* appears.

Favorites	-	7.9mi W
Home		
N 40°16.478 W083°30.49		
Мар	Options	Go To

NOTE:

For information about the Point Review Screen, see page 69.

Highlight Options and press ENT.



On the *Favorite Options screen*, highlight *Delete* and press ENT.

Delete	Favorite?
No	Yes

The screen asks you to confirm your selection. Highlight *Yes* and press ENT. The display returns to the *Favorite Places* screen with your *Home* deleted.

# Traffic

[raffic	
Viewing Traffic on Full Map	
Viewing Traffic by Road	
Viewing Traffic on Current Route	
Traffic Avoidance	

n

# Traffic

The *Traffic* option allows you to review traffic information, such as traffic flow and traffic incident, or to recalculate your current route to avoid the traffic incident.

On the Main Menu, highlight Traffic.



#### Press ENT.



The *Traffic* screen will be displayed.

The following options are available from the traffic information screen.

Full Map	to review all traffic incidents close to your current location.	
View By Road	to review traffic incidents by selecting the road close to your current location.	
On Current Route	to review traffic incidents along your current route, and to recalculate your current route to avoid the traffic incident.	


#### NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.
- You can also see the traffic information map on the Traffic/Weather Review screen. For information about the Traffic/Weather Review screen, see page 80.

#### 132 Traffic

### **Viewing Traffic on Full Map**

On the *Traffic* screen, highlight *Full Map* and press ENT. The following screen will be displayed.

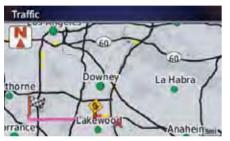

You can scroll the map using the four directional arrow buttons, and zoom in or out on the map.

#### NOTE:

For more information about viewing traffic map, see page 79.

## Viewing Traffic by Road

On the *Traffic* screen, highlight *View By Road* and press ENT. The system will display the list of the roads near your current location



The color box (red or yellow) to the left of the road name indicates the traffic event severity.

#### NOTE:

- When you select the "View By Road" option, traffic incidents other than traffic flow will be displayed.
- For more information about the traffic event severity, see page 79.

Highlight your choice and press ENT.



Highlight *Previous* or *Next* and press ENT to switch to another road screen.



(cont'd)

# Traffic

Highlight *Details* and press ENT to review the detailed information for the selected road.



Press the BACK button to return to the previous screen.

### Viewing Traffic on Current Route

On the *Traffic* screen, highlight *On Current Route* and press ENT.



To avoid all traffic incidents on your current route, highlight *Avoid All* and press ENT. The system will recalculate your current route.

When you select *View All*, the following screen will be displayed.



Highlight *Previous* or *Next* and press ENT to view traffic incidents. To avoid a traffic incident, hightlight *Avoid* and press ENT. The system will recalculate your route avoiding the selected traffic incident.

### **Traffic Avoidance**

#### Automatic Traffic Avoidance

The system periodically tries to find the best route available, taking in factors such as traffic speed, road speed, road closures and other traffic congestion. When updated traffic information is received and it affects the current route, the system will find a better route and avoid the traffic congestion.

#### **Manual Traffic Avoidance**

If you select *On Current Route* when a traffic incident is on your route, you can avoid traffic incidents manually. See *Viewing Traffic on Current Route* on page 134.

#### 136 Traffic

Weather	
Viewing Weather Map	139
Viewing Weather for Other City	139
Viewing Weather Forecast	140

The *Weather* option allows you to review weather information, such as weather forecasts and four kinds of weather maps.

On the Main Menu, highlight Weather.



#### Press ENT.

Los Angeles,	CA 1:58 PM	-
57° Rain	1	48° - 61° Precipitation: 5%
Feels Like Wind: Co		Humidity: 93% Dew Point: 55°
Мар	Other City	y Forecast

The weather information for the current location will be displayed.

The following options are available from the weather information screen.

Мар	to review four kinds of weather maps for the current location.
Other City	to select the city for which you want to get weather information.
Forecast	to review the weather forecast for the current location.

#### NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 164.
- XM service only available in the 48 contiguous United States.
- You can also see the weather information map on the Traffic/Weather Review screen. For information about the Traffic/Weather Review screen, see page 80.
- XM NavWeather may not show the weather at your exact location, but rather the nearest city's weather station data.

#### 138 Weather

### **Viewing Weather Map**

On the weather information screen, highlight *Map* and press ENT. A *Current Conditions* map will be displayed.



Highlight *Previous* or *Next* to switch other weather maps. Press the BACK button to return to the weather information screen.

#### NOTE:

For more information about viewing weather maps, see page 77.

### Viewing Weather for Other City

On the weather information screen, highlight *Other City* and press ENT.



Use the keyboard to type the name of the city you want.

#### NOTE:

For information about the keyboard screen, see page 65.

After typing, highlight *Done* and press ENT.

#### NOTE:

XM NavWeather may not show the weather at your exact location, but rather the nearest city's weather station data.



Highlight your choice and press ENT.



The weather information for the selected city will be displayed. Highlight *Map* or *Forecast* to review the weather map or the forecast for the selected city. Press the BACK button to return to the weather information screen.

### **Viewing Weather Forecast**

On the weather information screen, highlight *Forecast* and press ENT.



Press the BACK button to return to the weather information screen.

# Setup / Info

Setup / Info	
Setup Screen	
Setup Screen	143
Setup System	
Setup System	
Setup Language	
Info Screens	
GPS Info	164
System Info	
XM Info	
Turn Off Honda Navigation System	



On the *Main Menu*, highlight *Setup / Info* and press the ENT button on the right fairing panel. The *Setup / Info* menu appears.

Setup Screen	
Setup System	
Setup Language	
GPS Info	
System Info	
XM Info	

These options let you set up what will or will not appear on your screen as well as when and how it will look. There are three *Setup* categories for *Screen, System*, and *Language* functions. Each function has a default setting from the factory. For a complete list, see *Factory Default Settings* on page 161. To change any default setting, highlight a category and press ENT. Use the right panel controls to highlight the option you want and press ENT. The field will turn highlighted, indicating your choice is now operative. When you have completed your changes, press the BACK button. The screen will return to the *Setup / Info* menu.

The following items are available from the Setup / Info menu:

Setup Screen	To select how your screen will appear, including color, intensity, and map orientation, pop-ups, and other features.
Setup System	To select time elements, designate a home base for routing, and return all optional settings to the initial settings selected by the factory.
Setup Language	To select the pre-recorded voice or text-to-speech (TTS) voice for the system's voice guidance as well as keyboard language.
GPS Info	To check your GPS status, display the time and date, see the coordinates of your current location and check the accuracy range of the GPS signal.
System Info	To check the software operating your system and the unit ID number and identify the maps used in the system and the copyrights.
XM Info	To check the software used in the system, available channels and data services, and your Radio ID.
Turn Off Honda Navigation System	To turn off the navigation system.

On the *Setup / Info* menu, highlight *Setup Screen* and press ENT. The *Setup Screen* appears.



## **Dimmer / Day**

For a dimmer daylight display, select a segment to the left. For a brighter display, select a segment to the right. The default setting for daylight is Full Brightness.

## Dimmer / Night

For a dimmer night display, select a segment to the left. For a brighter night display, select a segment to the right. The default setting for night display is Half Brightness.

## **Map Layout**

Move the highlight to the *Map Layout* field and press ENT. The *Map Layout* screen appears.



There are three map options:

- The *Full Map* fills the screen with no detail shown.
- The *Half Map* appears on half of the screen with two details related to time and distance as well as the next three route maneuvers.
- The *Wide Map* appears on threequarters of the screen with three details related to time and distance.

### NOTE:

For more information about map layouts, see page 46.

On the *Map Layout* screen, highlight your choice and press ENT. Your choice will appear in the *Map Layout* field on the *Setup Screen*.

### **Map Orientation**

Move the highlight to the *Map Orientation* field on the *Setup Screen*, and press ENT. The *Map Orientation* screen appears.



There are three options. The default is 2D Heading Up.

## Selecting 2D Heading Up

This option rotates the map so that the direction you are heading always points toward the top of the screen. The red side of the compass in the upper left of the screen indicates where north is.



Highlight 2D Heading Up and press ENT.



Highlight your choice and press ENT.


### NOTE:

For information about Auto zoom, see page 54.

2D Heading Up will appear in the Map Orientation field on the Setup Screen.

#### Selecting 2D North Up

This option fixes the display with north always positioned at the top of the screen.

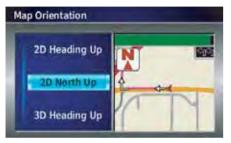

Highlight 2D North Up and press ENT.



Highlight your choice and press ENT.


#### NOTE:

For information about Auto zoom, see page 54.

2D North Up will appear in the Map Orientation field on the Setup Screen.

#### Selecting 3D Heading Up

This option displays the map in 3 dimensions (3D), with the direction you are heading always pointed toward the top of the screen. The red side of the compass in the upper left of the screen indicates where north is.

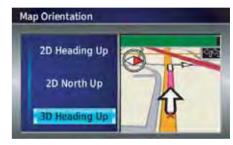

Highlight 3D Heading Up and press ENT. 3D Heading Up will appear in the Map Orientation field on the Setup Screen.

### **Map Color Mode**

Move the highlight to the *Map Color Mode* field on the *Setup Screen*, and press ENT. The *Map Color Mode* screen appears.



You have three color mode choices:

- The *Day* option offers higher intensity for easier viewing during daylight hours.
- The *Night* option offers lower intensity and a black background for easier viewing at night.
- The *Auto* option automatically switches between the day and night modes based on the time of day and GPS sunrise/sunset data. This is the default setting.

On the *Map Color Mode* screen, highlight your choice and press ENT. Your choice will appear in the *Map Color Mode* field on the *Setup Screen*.

### NOTE:

The "Night" mode or the "Auto" mode after sunset provides a black background as shown below.



For more information about the night screen, see page 49.

## POI Map Display Setup

The default is *Off*. If the option is On, POI (point of interest) icons will appear when the map scale is 0.2 mile or smaller.

#### NOTE:

The POI icon of the location you stored as Favorite will be displayed on the 100 miles or smaller map scale.

There are two other icons that are not part of the *POI Icon* option. They appear whether the option is on or off.

Honda motorcycle dealer (wing) icons remain visible until you zoom out past the 10 miles map scale.

The *Home* icon appears if you have designated a *Home* location (for 100 miles or smaller map scale).

## Turning on POI Icons on the Map

If you want to show POI icons on the map, highlight *POI Map Display Setup* on the *Setup Screen* and press ENT.



Highlight *Display* and press ENT to turn on *POI Map Display Setup*. *Display 1* or *Display 2* will be displayed instead of *Off*.




Highlight *Edit Displays* and press ENT. The POI category menu appears.

Display 1	Display 2
All Categories	Some
Food & Drink	All
Lodging	All
Fuel	iiA:
Shopping	Some

All items are selected by default. Two types of the settings are available as Display 1 and Display 2. You can respectively select and/or edit settings.

# When Displaying All POI icons on the Map

If you want to show all POI icons on the map, highlight *All Categories* and press ENT.

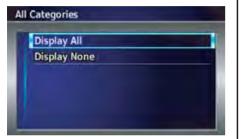

#### Highlight Display All and press ENT.




# When Displaying Your Desired POI icons

If you want to show your desired POI icons, select either Display 1 or Display 2, highlight your desired categories and press ENT. If subcategories are displayed, highlight your desired item and press ENT.

Display 1	Display 2
All Categories	Some
Food & Drink	AU
Lodging	None
Fuel	All
Shopping	Some

The highlighted field indicates selection. Press the BACK button to return to the *Setup POI Display* screen. The icons will appear on all maps, whether you are riding a route or not. The points of interest are loaded in the system and you cannot add any locations to the database or control when the icons appear. To get more information for a POI that interests you, stop your motorcycle and press any directional arrow on the right fairing panel to bring up the *Cursor Radius Point Locator*. Move the locator to the POI icon. The POI's name will appear. To bring up a *Point Review Screen* for the location, press ENT.

You can switch among *Display 1*, *Display 2*, or *Off* by pressing and holding the DISP button when a map screen is displayed.

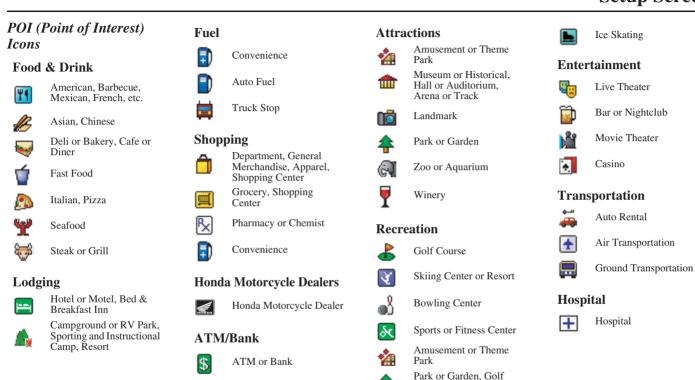

Course Arena or Track

TIT

(cont'd)

Setup / Info

149

#### **Auto Services** ÷ Auto Rental -Auto Repair Dealer or Auto Parts. Automobile Club, Car Wash Wrecker Service P Parking ŤŦ Rest Area Tourist Info Truck Stop Community



Library

<u>....</u> School



Place of Worship







Court House, Community





Bank or ATM

#### Others

\$

(5



Marine Services

Garmin Dealer

Setup / Info 150

## **Alert Setup**

The system notifies you of urgent conditions with the alert icon and voice guidance (default setting). The alert icon will appear in the lower left corner of the screen. You can select the notification method, such as with voice only, with icon only, etc.



*NOTE: For more information about the alert icon, see page 52.*  To change this option, highlight *Alert Setup* and press ENT.

Traffic Alert Display / Speal     Weather Alert Display / Speal	Turn Alert	Display / Spea
🕌 Weather Alert Display (Speak	🔶 Traffic Alert	Display / Spea
	😹 Weather Alert	Display / Speal

Highlight your choice and press ENT.

Off	
<b>Display Only</b>	
Speak Only	
Display / Spe	ak

Highlight your choice and press ENT. Press the BACK button to return to the *Setup Screen*.

## **Track Log Setup**

The option creates a visual log of where you have ridden by spreading "breadcrumbs". These breadcrumbs appear, whether or not there is a route in the system, for any map scale up to and including 100 miles. If the system spreads the maximum number of breadcrumbs, the first created will disappear as the latest breadcrumb appears.




To turn this option on, highlight *Track Log Setup* and press ENT.

(cont'd)



To record your track log, highlight *Recording* and press ENT. To display the breadcrumb on the map, highlight *Map Display* and press ENT.

To clear the breadcrumbs from the system, highlight *Clear Track Log* and press ENT.

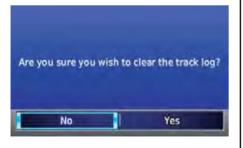


Highlight *Yes* and press ENT. If you clear the track log from the system with *Recording* option *On*, new breadcrumbs will appear as you continue - regardless of whether or not you have a route in the system.

To create a route using the current track log points, highlight *Create Route from Track Log* and press ENT.

	elect Track Segm		
1	02-NOV-14	03:17	0.0 mi
	01-NOV-14	03:10	7.2 mi
	01-NOV-14	03:01	10.7mi
	26-OCT-14	09:38	14.1mi
	26-OCT-14	03:32	29.1mi
	26-OCT-14	02:03	19.3mi

Highlight a track segment and press ENT.

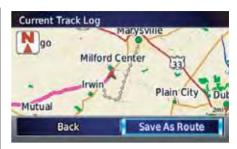

Highlight Save As Route and press ENT.

Use the keyboard to type in the name for the route.



**NOTE:** For more information about the keyboard screen, see page 65. After typing, highlight Done and press ENT.

The saved route will be listed on the *Routes* Menu.

If you want to start route guidance immediately, press *Start*.



To save the current track to the SD Card when an SD memory card is inserted, highlight *Save Track Log to SD Card* and press ENT.

To view saved track logs when an SD memory card for Route Data is inserted, highlight *View Track Logs on SD Card* and press ENT.

When you complete your selections for *Setup Screen*, press the BACK button to return to the *Setup / Info* menu.

## **Select Theme**

This option allows you to choose the color of your display.

Move the highlight to the *Select Theme* field on the Setup Screen, and press ENT. The *Select Theme* screen appears.



There are three options. The default is *Blue Theme*.

## Setup System

On the *Setup / Info* menu, highlight *Setup System* and press ENT. The *Setup System* screen appears.



## Units

The default is *Miles*. To select *km*, highlight *Units* and press ENT. The *km* option will appear on the *Units* field.

## **Time Format**

The default is *12 Hour* (am and pm) display. To select *24 Hour* (military) time, highlight *Time Format* and press ENT. The *24 Hour* option will appear on the *Time Format* field.

## **Time and Date**

You can set the time, date, time zone, and daylight saving automatically or manually.



To set time and date automatically, just check *Automatic*. To set time manually, uncheck *Automatic* by pressing ENT, and set time using the four directional arrow buttons. The date cannot be set manually.

## Greeting

You can select the greeting screen that appears when you turn the ignition on. Highlight *Greeting* and press ENT.



## Selecting Standard Greeting

The default for the opening/ending greeting is the *Standard* greeting, which shows the Gold Wing logo and then fades out. The same logo appears as the closing greeting.

Highlight Standard and press ENT.

Units	Milez
Time Format	12 Hour
Time and Date	12:04:05 am
Greeting	5tandard
Attention Tone	10 M

Your choice will appear in the *Greeting* field on the *Setup System* screen. To return to the *Setup / Info* menu, press the BACK button.

## Selecting Personal Greeting

The opening greeting includes the Gold Wing logo screen followed by a screen that reads: *Hello!* followed by the text you enter. The closing greeting will be *See You!* followed by the text you enter.

To choose the customized greeting, highlight *Personal*, and press ENT.



Use the keyboard to type your name or phrase you want to appear below *Hello!* in the customized greeting.

#### NOTE:

For more information about the keyboard screen, see page 65.

(cont'd)

After typing, highlight *Done* and press ENT.



Your choice will appear in the *Greeting* field on the *Setup System* screen. To return to the *Setup / Info* menu, press the BACK button. The next time you start the Navigation System, you will see a two-screen sequence: the Gold Wing logo followed by a second screen that says *Hello!* with the text you entered. When you exit the system, you will see a screen that says: *See you!* followed by the text you entered.

## Selecting Off (No Greeting)

If you do not want an opening greeting, highlight *Off* and press ENT.



Your choice will appear in the *Greeting* field on the *Setup System* screen. To return to the *Setup / Info* menu, press the BACK button.

### NOTE:

"Off" only affects the opening greeting. You will still see the standard closing.

## **Attention Tone**

If this option is set to *On* (default is *Off*), the attention tone sounds before voice prompts. Highlight *Attention Tone* and press ENT to turn the attention tone on or off.

## Set Home using Find Menu

If you want to designate a location from the *Find Destination* menu, highlight *Set Home using Find Menu* and press ENT. The *Find Home Location* menu appears.



The *Find Home Location* menu offers the seven *Find Destination* menu functions. For the following procedure, see *Find Destination* on page 81. The *Point Review Screen* then appears.



With *Save Home* highlighted, press ENT. The display returns to the *Setup System* screen.

#### NOTE:

Your new "Home" designation will be listed in "Favorite Places."

## Set Home using Vehicle Position

If you want to designate your current location as *Home*, highlight *Set Home using Vehicle Position* and press ENT. The *Point Review Screen* appears.

Coordinates	
Coordinates	
N 40°14.254' W083°22.055'	
Мар	Save Home

With *Save Home* highlighted, press ENT. The display returns to *Setup System* screen.

NOTE:

Your new "Home" designation will be listed in "Favorite Places."

## Import Data from SD Card

The *Import Data from SD Card* option allows user to import up to 50 saved routes, tracks and favorites from an SD card for Route Data when an SD Card which contains GPX data (track, route, favorites) is inserted into the route data card slot (see page 181).

Highlight *Import Data from SD Card* and press ENT. The following screen appears.



Highlight either *Import Routes and Tracks* or *Import Favorites* and press ENT.

After checking your choice(s), highlight *Import* and press ENT.



The imported Routes and Tracks will be listed on *Routes Menu (see page 117)*. The imported Favorites will be listed on *Favorite Places (see page 104)*.


### NOTE:

- Do not operate any controls while importing the data.
- Importing stops when you start riding.

## **Restore All Settings**

The *Restore All Settings* option lets you return the system to initial default settings selected by the factory. (See the table on page 161.)

Highlight *Restore All Settings* and press ENT. The following screen appears.

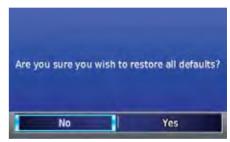

The screen will ask you to confirm your request. Highlight *Yes* and, press ENT to restore all settings.

## NOTE:

*Executing the Restore All Settings option deletes the "Home" location stored in the system.* 


# Formatting the Route Data SD Card

With the additional SD card, the navigation system allows users to save and share routes using the Honda Trip Planner website.

It is important to format the Route Data SD Card if it has been replaced, damaged, corrupt or erased.

#### NOTE:

It is necessary to "share" at least one address to the new Route Data SD Card to ensure that the proper Garmin GPX folder structure is created on the card. If this is not done, the user will not be able to use the save and sharing route features. Operate the motorcycle's navigation buttons and follow the screen prompts:

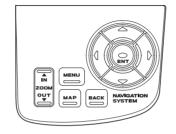

Press MENU and select *Find Destination*. Press ENT.



Scroll down the menu and select *By Address*. Press ENT.



Follow the screen prompts and enter the user's address. Select *Save* and press ENT.

Select Options and press ENT.



Select Share and then press ENT.

Delete	
Rename	
Share	


Select the route to share and press ENT. It should have a check mark next to it.

Select *Copy to Card* and press ENT. Follow the screen prompts and name the route.

Select Done and then press ENT.

elect Favorites to cop Select All	Copy to Card
1234 Torrance	<b>1</b>

The screen should display "Data exported successfully." This message confirms the Garmin GPX folder has been created on the Route Data SD Card.

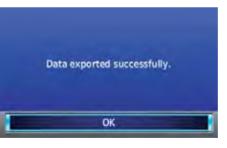

The Route Data SD Card can now be used with a PC and the Honda Trip Planner website, where routes can be planned and saved in the Garmin GPX folder. When the card is reinserted into the Navi unit, the saved routes can be used by the navigation system.

#### Factory Default Settings Setup Screen

FEATURE	DESCRIPTION	DEFAULT
Dimmer / Day	For daytime screen viewing.	Full Brightness
Dimmer / Night	For nighttime screen viewing.	Half Brightness
Map Layout	Three map layout choices.	Half Map
Map Orientation	Three map orientation choices.	2D Heading Up
Map Color Mode	Background color for daylight map display/screen mode.	Auto
POI Map Display Setup	If the map scale is 0.5 mile smaller, point of interest icons appear on the map screen.	Off
Alert Setup	Three alert notification choices.	Display/Speak
Track Log Setup	Creates log of your journey by spreading "breadcrumbs" every 275 yards (250 meters), depending on the map scale. If on, breadcrumbs appear whether or not there is a route in the system.	Map Display : Off Recording : On
Select Theme*	Three color theme choices.	Blue Theme

\* The setting will not be restored to the default setting by *Restore All Settings* function.

(cont'd)

### Setup System

FEATURE	DESCRIPTION	DEFAULT
Units	Distance measurement (miles or kilometers).	Miles
Time Format	12 hour (am/pm) or 24 hour (military).	12 Hour
Time and Date*	Allows you to set the time, date, time zone, and daylight savins automatically or manually.	Automatic
Greeting	Three options including no greeting.	Standard
Attention Tone	Turns the attention tone on or off that sounds before voice prompts	Off

#### Setup Language\*

FEATURE	DESCRIPTION	DEFAULT
Text & Voice	Allows you to select the pre-recorded voice or text-to-speech (TTS) voice for the system's voice guidance.	American English-Jill (TTS)
Keyboard	Allows you to select the keyboard language.	American English

\* The setting will not be restored to the default setting by *Restore All Settings* function.

## **Text & Voice**

The *Text & Voice* option allows you to select the type of voices from the pre-recorded voice or text-to speech (TTS) voice.

On the Setup / Info menu, highlight Setup Language and press ENT. The Setup Language screen appears. With Text & Voice highlighted, press ENT. The following screen appears.

American English	and the second s
Français	
Español	

American English is pre-recorded voices, which have a limited vocabulary and do not speak names of locations or streets. The choices with "TTS" are text-tospeech voices, which will read and speak the same words that are displayed on the screen. The voices have an extensive vocabulary, and they pronounce the street names as you approach turns. To change the voice setting and language to be displayed, highlight your choice and press ENT. The Disclaimer screen in the newly selected language will appear.

## Keyboard

*Keyboard* allows you to select the type of keyboard.

On the *Setup / Info* menu, highlight *Setup Language* and press ENT. The *Setup Language* screen appears. With *Keyboard* highlighted, press ENT. The following screen appears.

Français Español	American English	
Español	Français	
	Español	

To change the keyboard setting, highlight your choice and press ENT. The screen will return to the *Setup Language screen*.

## **GPS Info**

The *GPS Info* option lets you check your GPS status, shows the position of the satellites to which the system is connected, displays the time and date, shows your current coordinates, and indicates the accuracy range of the GPS signal.

On the *Setup / Info* menu, highlight *GPS Info* and press ENT. The following screen appears.



Press the BACK button to return to the *Setup / Info* menu.

## System Info

The *System Info* option identifies the software operating your Navigation System and provides the software ID number. In addition, the version of map software loaded in the system appears at the bottom of the screen. You can also check the copyrights.

On the *Setup / Info* menu, highlight *Info/ System* and press ENT. After checking the information, press the BACK button to return to the *Setup / Info* menu.

# XM Info

The *XM Info* option identifies the software, available audio channels, and data services used in your Navigation System, and provides the radio ID number.

## NOTE:

XM service only available in the 48 contiguous United States.

On the *Setup / Info* menu, highlight *XM Info* and press ENT. The following screen appears.



You need to activate your XM subscription before you use the XM features. If you have not already subscribed to XM but wish to do so, read the information on the screen, then highlight *Subscribe* and press ENT.

#### Radio ID: TJZHE04L

Before proceeding, call 1-800-XM-RADIO (1-800-967-2346). You will be asked for your radio ID, which is TJZHE04L. Please follow the instructions from the XM operator. If needed, you can adjust your XM channels by pressing 'Next'.

Back Next

Highlight Next and press ENT.

#### Radio ID

Before proceeding, please verify your subscription information, which is displayed below. Audio Channels: 178 found XM Channel: 84 Back Next

Highlight – or +, and press ENT to change the channel. After selecting channel, highlight *Next* and press ENT.



Highlight Power Off XM and press ENT.

Your motorcycle is capable of receiving XM® Radio anywhere in the United States, except Hawaii, Alaska, and Puerto Rico. XM is a registered trademark of Sirius

XM Radio®, Inc.

For more information about XM, See your Owner's Manual.

# **Turn Off Honda Navigation System**

You can turn off the navigation system. On the *Setup / Info* menu, highlight *Turn Off Honda Navigation System* and press ENT. The following screen appears.



To resume the system, press either DISP, MAP, or MENU button. When the *Disclaimer* screen appears, press ENT.

# **Technical & Consumer Information**

Glossary	
System Messages	
Troubleshooting	
System Limitations	
Database Limitations	
Customer Support	179

# Glossary

The following is a glossary of terms related to your Navigation System.

Banner	The message or direction's information area across the top of the map display screen.	
Highlighted Field	In the system setup fields, indicates that the field is selected as the default.	
Breadcrumbs	Tracking dots that can be followed on the map to retrace your route. This function can be turned on/off in <i>Setup Screen</i> , <i>Track Log Setup</i> . The default is off.	
SD Memory Card for Map	An SD memory card containing map software is installed in the Navi box in the travel trunk.	
SD Memory Card for Route data	An SD memory card to import /export data.	
Database	This consists of the map data and the POI (Point of Interest) data stored on the SD memory card.	
GPS	Global Positioning System. A network of 24 satellites in orbit around the earth. The navigation system can simultaneously receive signals from up to 12 satellites to accurately position the vehicle on the map.	
GPS Antenna	Located on the top of the fairing under the windscreen air vent. Electronic items operating in this general location can interfere with the GPS signal.	
Icon	Symbol representing a Point of Interest (POI) that appears on a map scale of 0.5 mile or smaller screen if the <i>POI Icon</i> option is selected.	
Initialization	This refers to the time needed to reacquire the GPS satellite signals whenever the power has been disconnected.	
Map Matching	Refers to the matching of the vehicle position to mapped roads in the system.	
Navi	Abbreviation for Navigation or Navigation System.	
North Pointer	The map symbol showing the map orientation.	
Off Route	This occurs when you leave the route entered in the system. The banner at the top of the screen will read: <i>Calculating</i> The Navi voice guidance will announce: <i>Off Route</i> . <i>Recalculating</i> .	
Outlying Areas	Rural areas that typically have only their main roads mapped.	

POI	Point of Interest. These are businesses, schools, etc., found on the <i>Find Destination</i> , <i>New Route</i> , <i>Edit Route/Add Stop</i> , <i>Recalculate/Edit Route</i> , or <i>Route to Home/Edit Home Location</i> ( <i>Route to Home</i> ) menus.	
Point	Used to refer to a location (point on a map). Example: Point Review Screen.	
Speed Sensor	Opeed Sensor         Provides speed signals to the Navi system for moving the vehicle icon on the map.	

# System Messages

Screen Message	Explanation – Suggested Action
Antenna Shorted to Ground	The antenna has been shorted. See your Honda dealer.
GPS Antenna Disconnected	The antenna connection has been disconnected. Check the antenna connection that goes into the Navi box. If that is not the cause of the problem, see your Honda dealer.
<i>Lost GPS Satellite Reception</i> (message banner turns red)	Satellite reception has been lost.
<i>Poor GPS Satellite Reception</i> (message banner turns yellow)	Satellite reception has degraded. Use caution, the position presented by the system may not be accurate. (For subsequent incidents of temporary poor reception, the message banner will continue to give navigation information, but the color will change to yellow as an alert to use caution.)
Calculating%	The Navi is calculating a route.
Route Calculation Pending	The Navi is waiting to calculate a route. Occurs rarely.
Route Truncated	You attempted to create an overly long route. The system shortened the route so it would fit the available memory.
Invalid Operation	You tried to operate controls that are shut off while your motorcycle is in motion.
Sunrise, Switching to Day Mode/ Sunset, Switching to Night Mode	Messages indicating the Navi is switching between day and night modes.
Favorite Memory is Full	You have tried to save more favorites than the system can handle (approximately 2,000).
Favorite Name Already Exists	Each favorite must have a unique name.
Route Memory Full	You have tried to save more routes than the system can handle.
POI Map Display	Displays when you press and hold the DISP button to toggle Current POI Map Display.
Unverified Road	The current road has not been fully verified by the map data supplier.

#### Hardware

PROBLEM	EXPLANATION
The Vehicle Position icon does not move on the map screen while I'm riding my motorcycle.	The map will not display if the speed sensor is not working. See your Honda dealer.

#### Voice Guidance

PROBLEM	EXPLANATION
I did not hear the voice guidance when I expected to hear it.	The Navigation System voice guidance operates whether the audio system is on or off. However, the volume of the voice guidance depends on the setting of the VOLUME knob on the audio system controls. If the knob is turned fully off, or "Mute" is selected, you will not hear the voice guidance. Also, since the Navi voice can be routed through the speakers or the headphones, check that you are listening to the sound source you selected.

#### Screen

PROBLEM	EXPLANATION
While I ride, my screen shows "white dots" on it. What do they mean?	These are called "breadcrumbs." They appear if the <i>Track Log Setup</i> option is on. (The default is off.) See page 151.
What is the sequence of messages I will see if the system has not been initialized recently?	Searching for Satellites. Locating Satellites. Acquiring Satellites. GPS Ready.

(cont'd)

# Troubleshooting

PROBLEM	EXPLANATION
The distance appears like ""	Satellite reception has been lost.
Arrival Time appears like ":" am/pm.	The system estimates it will take more than 24 hours to get to the destination.
After using the <i>Cursor Radius Point Locator</i> , I resumed riding, but the map display is frozen.	If you resume riding after using this feature without removing it from the screen, the screen will continue to display the last map screen until you terminate the point locator feature by pressing the DISP button. We suggest you press the MAP button before you resume riding. Either action will return your main map display.
I get inconsistent results when I type in initials searching for a location.	The database includes some entries that leave spaces between initials and some entries that do not. If your entry fails, try the alternative.
When I approached the Canadian border, the map showed a border crossing POI icon, but this did not happen when I approached Mexico.	The system does not include border crossing icons for Mexico.

#### Software

PROBLEM	EXPLANATION
I found some errors in the database. How do I report them?	Minor errors are bound to occur in a database this big. If you encounter major errors, you can report them per the instructions on page 179.
I want to buy a new SD memory card. How do I purchase one?	See Map Software & Navigation System Software Upgrades on page 179.
How can I determine the software version in my Navigation System?	Select System Info from the Setup / Info menu.
When is my city going to become part of a fully verified detailed coverage area?	The mapping database supplier is constantly verifying new and existing areas that currently show on the map as unverified. Alaska and Hawaii are covered.

PROBLEM	EXPLANATION
Will the Navigation System work outside North America?	It will work in Hawaii, Alaska, and Canada as well as the continental U.S., but XM feature will not work in Hawaii and Alaska.
Why is the street I am on not on the map? It has been here for a year.	The mapping database is constantly undergoing revision. See page 179 to learn how to obtain the latest detailed coverage information.

#### Features

PROBLEM	EXPLANATION
	The setting switches automatically by default, but you can change it. See <i>Setup System</i> screen, <i>Time and Date</i> on page 154.
	Yes. You can turn the Navigation System off with the ignition on. See <i>Turn Off Honda Navigation System</i> on page 166.

(cont'd)

# Troubleshooting

## Routing

PROBLEM	EXPLANATION
My system does not route me the same way I would go. Why is this?	In some situations, your local knowledge may generate a better route than the data currently available to the system.
I entered a new route with vias that would create a loop starting and ending at my current location, and turned off the ignition. When I turned the system on again, the route was gone.	Shutting the system after entering a loop from your current location cancels the route. The system assumes you reached your destination. You can save the route before turning off the ignition. See <i>Save</i> on page 125.
I stopped for coffee about 220 yards (200 meters) from my route destination. When I started up again, the route was no longer in the system.	If you turn the ignition off when you are within 220 yards (200 meters) of your destination, the system assumes you have reached your destination.
I attempted to route to a destination that is not on a road, but the system did not calculate a route.	The system will not calculate to a destination that is not within 1.2 miles (2 km) off a road in the database.
I went more than 33 yards (30 meters) off my route, but the system did not alert me.	The automatic re-routing feature will normally give you visual and voice alerts if you move more than 33 yards (30 meters) off route. However, some situations, such as riding on a road that closely parallels another road, may prevent activation of this feature because the system may be reading your location on the other road, within the 33 yards (30 meters) limit. As explained in <i>System Limitations</i> , there are elements that can affect the accuracy of all GPS equipment.

### **GPS Signal**

PROBLEM	EXPLANATION
The Navigation System is unable to acquire a proper GPS signal.	Make sure there is nothing blocking the GPS antenna located under the windscreen (see page 7). If there is not, move the vehicle to an open space away from tall buildings, trees, etc.
How long should it take for my system to become GPS-ready if it has not been used for some time?	In a garage or other area that would interfere with receiving GPS signals, turn on the ignition for four minutes. Then move your motorcycle outside to a clear area where it should be able to pick up GPS signals. If you don't receive any signals, contact your dealer.

#### XM NavTraffic and XM NavWeather

PROBLEM	EXPLANATION
XM NavTraffic/NavWeather is missing and is not displaying properly. What is wrong?	<ul> <li>Verify the following:</li> <li>Your XM subscription may have expired. Call XM at (800) 967-2346 and verify your account status. If your subscription has lapsed, you may need to request a "rapid refresh." After XM performs the refresh, leave the vehicle running outside for 30 minutes to receive the refresh.</li> <li>It is possible that there is a temporary technical problem with your metropolitan area traffic and/or weather. You can call XM at (800) 967-2346 to see if there is an outage.</li> <li>If the situation persists, see your local Honda dealer for assistance.</li> <li>XM NavTraffic/NavWeather relies on a satellite signal. It will not work in Hawaii and Alaska.</li> </ul>

# **System Limitations**

Although your Navigation System is a highly sophisticated piece of equipment, you may find it has certain limitations. The system uses signals from the Global Positioning System (GPS) to determine its current location. The GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System.

Although the system will direct you to your desired destination, it may not always do it by what you consider to be the most direct route.

The points of interest listings are not as complete in outlying areas as they are in metropolitan areas. For example, only limited numbers of gas stations, restaurants, supermarkets, banks, etc., are included. In outlying areas, you may not find listings for places you know exist, and the facilities listed may not be the closest. This is also true for police, agencies and hospitals. Always check with local information sources if you need law enforcement or hospital services.

On rare occasions, you may find that the system "reboots." This is indicated by the display returning to the logo screen. A reboot can be caused by a number of things, including excessive heat or shock. It does not necessarily indicate a problem that requires service. After the system completes the reboot, it should allow you to complete whatever functions you were performing before the reboot.

Honda has made every effort to verify that the system's database was accurate at the time it was created. However, businesses do close or move to new locations, and new businesses start in the old locations. For this reason, you may occasionally find inaccurate information when you select and drive to a point of interest. The number of these inaccuracies will increase as time goes on. However, database updates are available annually. See *Map Software & Navigation System Software Upgrades* on page 179.

## Loss of Satellite Signal

If the system loses power for more than five minutes, it takes a while to reacquire the GPS signal (satellite positions).

- The ignition must be turned to ON or ACC.
- The motorcycle must be parked outside, away from buildings.
- The motorcycle should be stationary. (Acquiring the signal takes longer if the motorcycle is moving.)

The average acquiring time is about five minutes, but it can take as long as 30 minutes. If the system is unable to acquire a signal, follow the instructions on the screen. Contact your local Honda dealer if a problem still persists.

# **Database Limitations**

The navigation system's digitized map database reflects the most complete and accurate data available at the time of production. Accordingly, your copy may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

In addition, this database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Population density
- Neighborhood quality or safety
- · Availability or proximity of law enforcement
- · Construction work, zones, or hazards
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- · Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Pavement characteristics or conditions
- · Special events

We assume no liability for any incident that may result from an error in the program or from changed conditions not noted above.

#### Honda Customer Support

You may contact Honda Customer Service, Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2200, mailstop: 100-4C-7B, Torrance, CA 90509-2200. Telephone: (866) 784-1870.

#### **Reporting Errors**

Occasionally, you may encounter database errors. Report errors online at https://my.garmin.com/mapErrors.

#### Map Software & Navigation System Software Upgrades

Honda is continually expanding the scope of the Map software and Navigation System software. The Map software is updated to correspond with new model releases. You cannot update the current SD memory card installed in your Gold Wing. You must replace it with a new SD memory card. The replaced SD memory card may be used in other electronic equipment such as a digital camera.

In the future, as map software and Navigation System software updates become available, you may only purchase a new SD memory card by going online to the Honda Owner Link website (*http://powersports.honda.com/ownerlink*) or the Honda Rider's Club of America website (*http://www.hrca.honda.com*), which both link to the website of the software developer, Garmin Ltd, (*http://www.garmin.com/goldwing*). You may also order directly from Garmin by going to their website or by calling (866) 418-9438.

#### Importing/exporting data to/from an SD memory card

Do not use the SD memory card containing map software and Navigation System software to store route data.

# **Customer Support**

### Handling the SD Memory Card

When handling an SD memory card, keep the following in mind.

- A new SD memory card consists of the new Map software and the updated Navigation System software that enables the new maps to operate on the screen.
- When you install a new SD memory card, there may be some changes not only in the map content, but in the Navigation system itself.
- Be sure not to get water or dust in the SD memory card slot(s).
- Do not delete or remove files in the SD memory card for Map. Navigation System might not operate properly.
- Do not insert an SD memory card facing the wrong way or in the wrong direction.
- Do not remove an SD memory card while importing/exporting data.
- Do not operate any controls while importing/exporting data.
- Do not remove an SD memory card containing map software and Navigation System software when the Navigation System is being operated.
- Use an SD memory card (32 GB or less).

#### NOTE:


For information about identifying the software currently operating your system, see page 164.

#### Removing and Inserting the SD memory Card

The SD memory card which contains map software and Navigation System software is located in the lower slot (1-b) of the Navi box (2) attached to the backside of the travel trunk. The upper slot (1-a) is for the SD memory card which contains route share data (GPX data).

#### NOTE:

- The Navigation System is a precision device that can be damaged by static electricity. Before touching the Navi box, discharge ٠ any static electricity by touching a metal area of your motorcycle outside the travel trunk. Do not use the SD memory card containing map software and Navigation System software to store route data.
- ۰
- Make sure the SD memory card lock switch is always in the unlocked position in order to share and transfer data. •
- Make sure the ignition switch is **OFF** to remove an SD memory card containing map software and Navigation System software.
- Open the travel trunk cover. 2.
- 3. Push the latch (3) on the left side of the Navi box to open the cover.

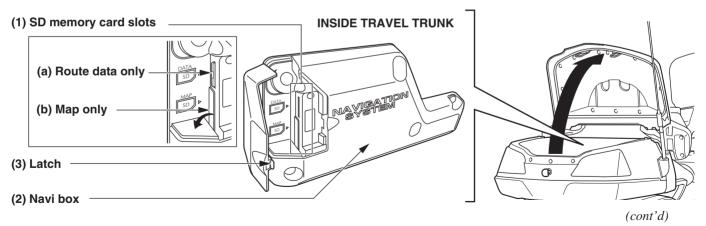

# **Customer Support**

- 4. Push in to eject the SD memory card (1). For an SD memory card for Map (1-b), open the rubber cover first.
- 5. Insert the new SD memory card and push in until it clicks.

#### NOTE:

Make sure which slot your SD memory card should be inserted.

6. Turn the ignition switch to ACC. It automatically starts updating. The initial Navigation System screen (sunrise beyond the Earth) will appear, followed by the *Disclaimer* screen. This means the update is completed.

When you inserted an SD memory card containing imported/exported data, a screen appears. Select *Yes* or *No*, and follow the procedure on page 158 when you want to import the data.

- 7. Close the Navi box cover and push the latch to the right until it clicks. Check that the cover is securely closed.
- 8. Close the travel trunk cover.
- 9. To check the update was successful, go to the Setup / Info menu and select System Info. Check that the screen identifies the new update.
- 10. Turn the ignition switch to OFF.

A         address,         find destination by	C         center display controls	errors,       reporting
MAP	cursor radius point locator 55	by favorite

GPS info menu164       H      half map46      I      import data158	M           main menu         26, 57           map,         46           half         46           scale zoom         54           screen layouts         46	share126system info164traffic132weather138XM info164message banner46messages,170
intersection, find destination by99 K	memory card, accessing	N       new route114       next turn pop-up51
keyboard screens	find destination82GPS info164main26new route114recalculate118route111route to home128	O operating controls
database	save125screens57setup / info142setup language163setup screen143setup system154	phone number, find distination by95 point of interest, find destination by90 point review screens69

previous find,	info164	stop
find destination by	keyboard 65	support, customer179
5	list	system info menu164
R	map	system,
K	menu	limitations176
recalculate118	point review	messages170
re-routing, automatic53	route calculate	startup
resume	traffic	r
right fairing panel controls	traffic/weather review	Т
route to home127	weather	
route,	scroll bar	tips, getting started35
calculate screen72	SD memory card,	toggle, zoom
edit119	handling	traffic,
menu111, 112	insert	avoiding incidents
select	remove	review screen
set114	share	screen79
setting on website117	settings,	viewing by road133
share	factory default 161	viewing current route134
	setup / info menu 142	viewing full map133
S	setup language menu	trip, let's take a
5	setup screen menu	troubleshooting
save,	setup system menu	
current route	share,	V
screen,	favorite 108	•
center display43	route	volume lever
edit route	startup	
	stattup10	

W
weather,
review screen80
screen77
viewing forecast140
viewing map139
viewing other city139
wide map46
X
XM info menu164 XM subscription164
Z
zoom, map scale54