

INSTALLATION INSTRUCTIONS

Accessory

FRONT FORK BOOT P/N 08F70-K87-A30

Application
After '19
CMX300/A

CMX500/A


Publication No. MII 17465

Issue Date


March 2020

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

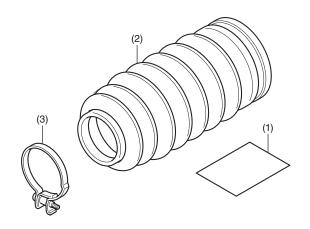

No.	Description	Qty
(1)	URL paper	1
(2)	Front fork boot	2
(3)	Band	2

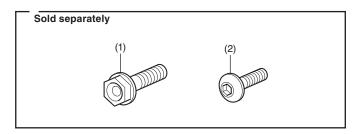

No.	Description	Qty
(1)	Brake caliper bolt (8 mm flange bolt) [90131-KZZ-900]	2
(2)	Front fender bolt (6 mm socket bolt) [90130-K87-A00]	4

TOOLS REQUIRED

Socket (12 mm)

Ratchet

Hex wrench (5 mm)

Phillips® screwdriver

Torque wrench


TORQUE INFORMATION

Refer to the Service Manual for the torque values of the removed parts.


INSTALLATION

NOTE:


- Take care not to damage the painted surfaces of the motorcycle.
- 1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - Do not suspend the brake caliper assembly from the brake hose.

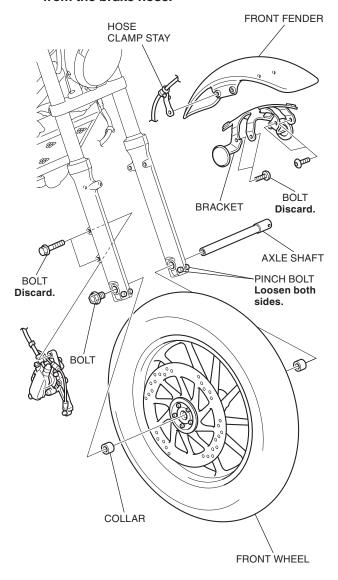

- 2. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - · Repeat on the left side.

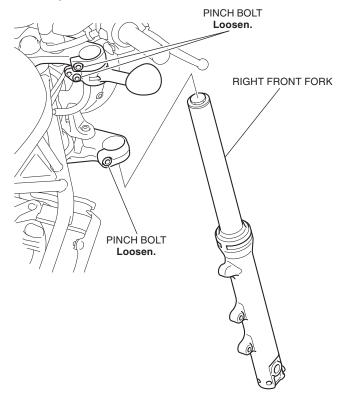

- 3. Loosely install the front fork boot as shown.
 - · Repeat on the left side.

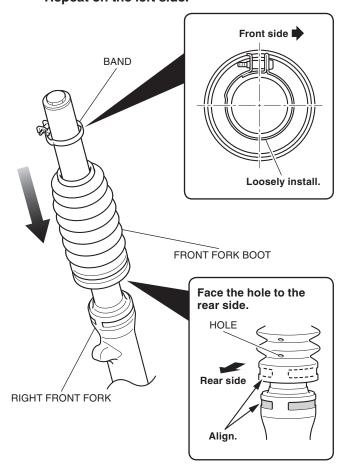

- 4. Install the removed parts in the reverse order of removal and tighten the loosely installed hardware.
 - Replace the brake caliper bolts and front fender bolts with new ones.
 - Tighten the band screw firmly until the collar is fully seated.