




# INSTALLATION INSTRUCTIONS

Accessory  
**FRONT UNDERHOOD TRAY**  
P/N: 08L78-HL5-A00

Application  
**SXS500M2**

Publication No.  
**MII 14948**  
Issue Date  
**July 2014**

## PARTS LIST

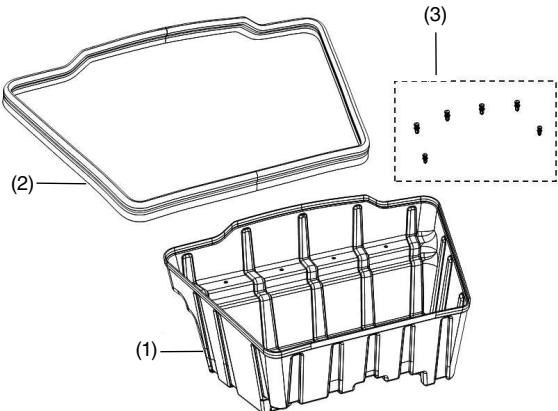

No.	Description	Qty
(1)	Storage tray	1
(2)	Rubber seal	1
(3)	Trim clip	6

## TOOLS AND SUPPLIES REQUIRED

Power drill

8 mm drill bit



Marker

## USE AND CARE INFORMATION


Check the accessory mounts frequently and reinstall if necessary.

## INSTALLATION

1. Remove the hood by rotating the knobs and pulling upward as shown.

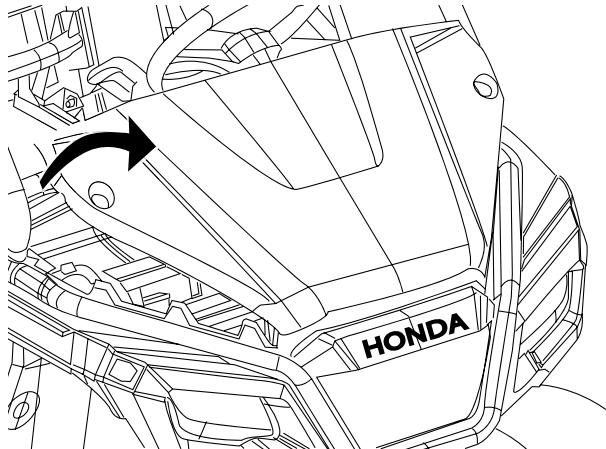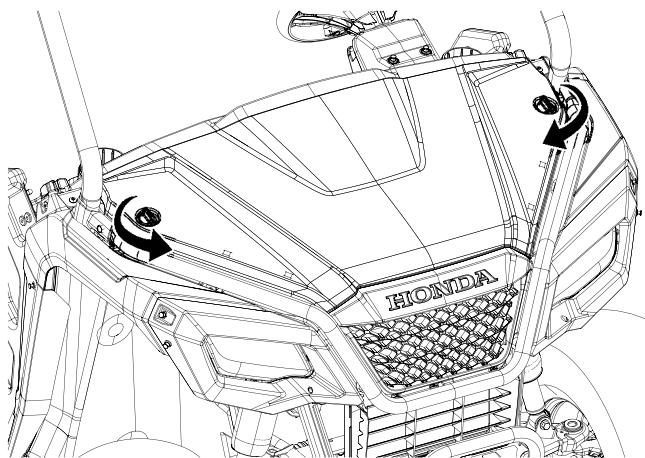

2. Place the underhood storage tray between the center of the frame tubes and mark the new fastener locations as shown.

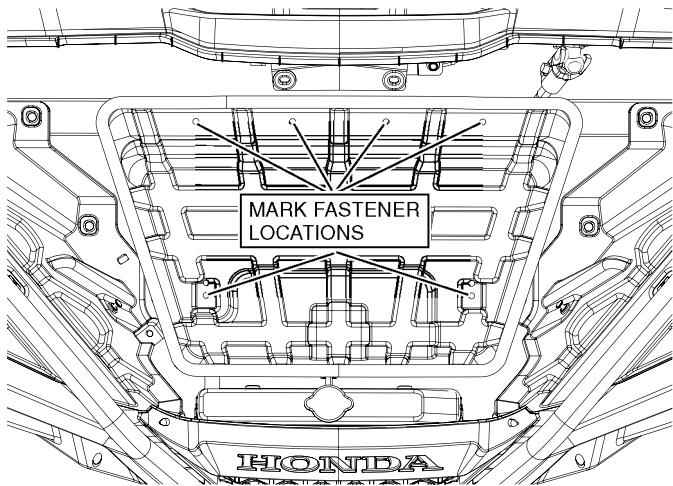

6. Reinstall the hood.

3. Remove the underhood storage tray. Drill the marked hole locations with an 8 mm drill bit and remove any burrs.
4. Reinstall the underhood storage tray between the frame tubes and install the six trim clips through the holes in the cargo tray and holes that were drilled in [Step 3](#). When all six clips are installed, push the center of the clips to secure them in place.
5. Mount the rubber seal on the tray edge.

