

r ∉ Honda -	Accessory	Application	Publication No.
INSTALLATION	TOP CASE PANEL KIT	Approduct	MII 17714
INSTRUCTIONS	(ALUMINUM) P/N 08L83-MKT-D00	NC750XA/XD	Issue Date April 2021
Honda Dealer: Please give	a copy of these instruct	ions to your customer.	


PARTS LIST

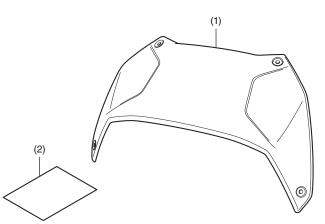

No.	Description	Qty
(1)	Top box lid panel	1
(2)	Installation instructions	1

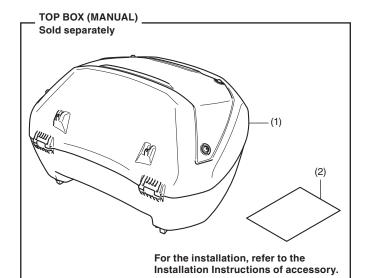

No.	Description	Qty
(1)	Top box	1
(2)	Installation instructions	1

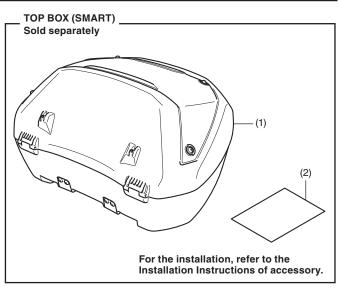

No.	Description	Qty
(1)	Top box	1
(2)	Installation instructions	1

TOOLS AND SUPPLIES REQUIRED

Hex wrench (3 mm) Isopropyl alcohol Shop towel Torque wrench

TORQUE CHART


Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf∙m	lbf·ft
Screw	4.2	0.4	3.1


INSTALLATION

NOTE:


- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- 1. Open the lid, then remove the parts as shown.

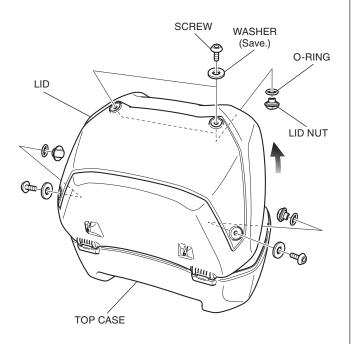


2. To maintain the adhesive strength of the doublesided tape, be sure to clean the surface of the indicated area with isopropyl alcohol.

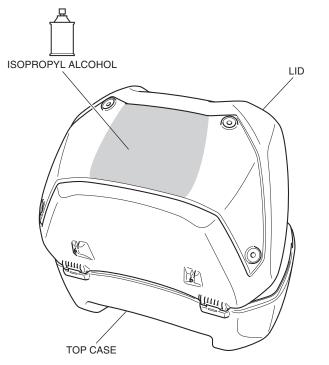


3. Peel off the adhesive backings on the rear of the top case lid panel as shown.

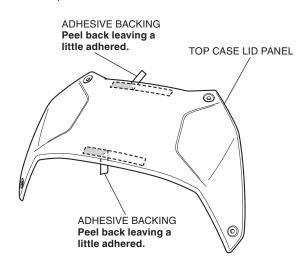


- 4. Attach the top case lid panel as shown.
 - Align the top case lid panel with the shape of the lid.

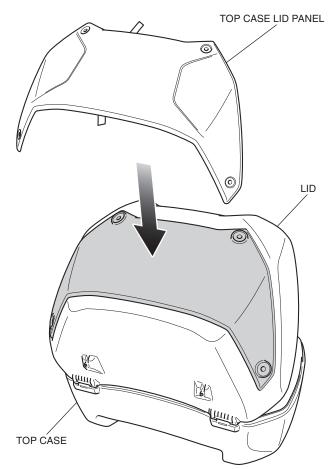


- 5. Temporarily set the screw and check that there is no misalignment.
 - If there is a misalignment, start over from step 4.

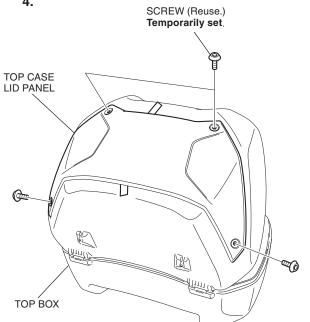

6. Remove the adhesive backings while pressing on the top case lid panel firmly with the palm.

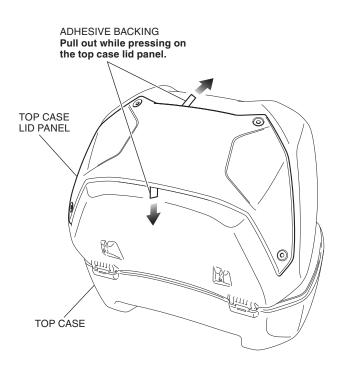

- 7. Applying adequate pressure of 5kgf (50N) to the attached top case lid panel.
 - Make sure to crimp with a force of 5 kgf (50 N).

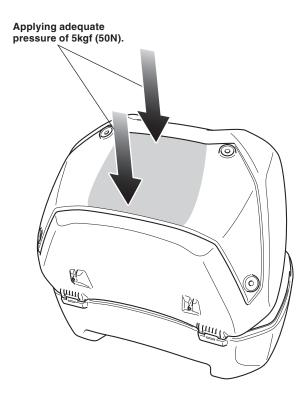

- 8. Leave the top case lid panels for 10 minutes to stabilize the fitting of the adhesive surface.
- 9. Install the parts as shown.

