

HONDA

INSTALLATION INSTRUCTIONS

Accessory

HAND GUARD
P/N 08P70-MGZ-J80

Application

CB500X/XA


Publication No.

MII 14565

Issue Date

May 2013

PARTS LIST

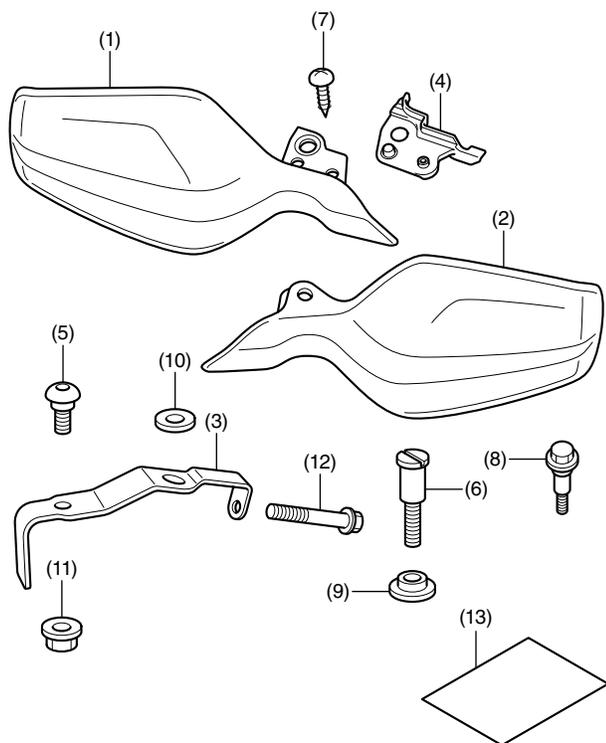

No.	Description	Qty
(1)	Right hand guard	1
(2)	Left hand guard	1
(3)	Left guard stay	1
(4)	Right guard bracket	1
(5)	6 mm socket bolt	1
(6)	Left lever pivot bolt	1
(7)	4 mm screw	1
(8)	Right lever pivot bolt	1
(9)	Collar	2
(10)	Washer	1
(11)	6 mm flange nut	1
(12)	6 mm SH flange bolt	1
(13)	Installation Instruction URL	1

TOOLS AND SUPPLIES REQUIRED

- Open-end wrench (8 and 10 mm)
- Hex wrench (5 mm)
- Phillips® screwdriver
- Flat-tip screwdriver
- Grease
- Shop towel
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N-m	kgf-m	lbf-ft
4 mm screw	1	0.1	0.7
Right lever pivot bolt	1	0.1	0.7
Left lever pivot bolt	1	0.1	0.7
6 mm socket bolt	10	1.0	7
6 mm SH flange bolt	10	1.0	7

INSTALLATION


NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
1. Refer to the Service Manual for the motorcycle, remove the left rearview mirror.


LEFT REARVIEW MIRROR

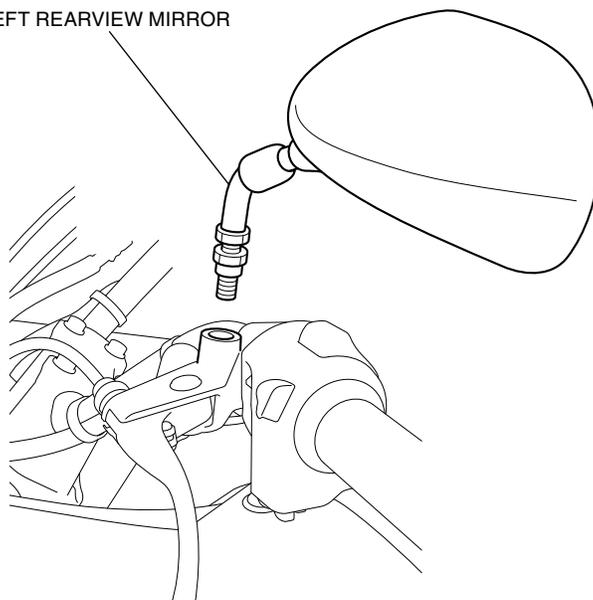


- Refer to the Service Manual for the motorcycle, remove the clutch lever pivot bolt.

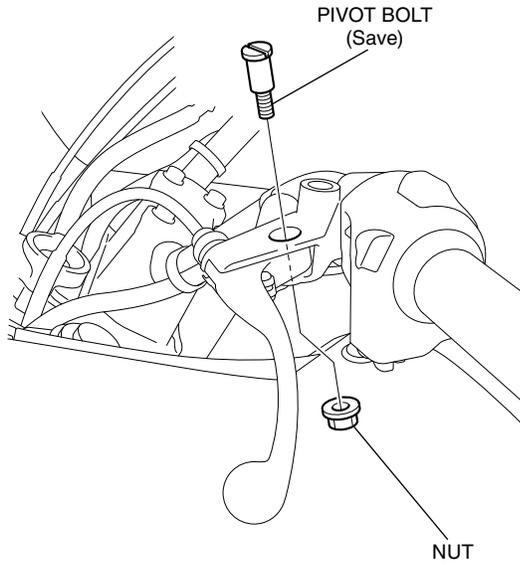


- Install the accessory left lever pivot bolt as shown.

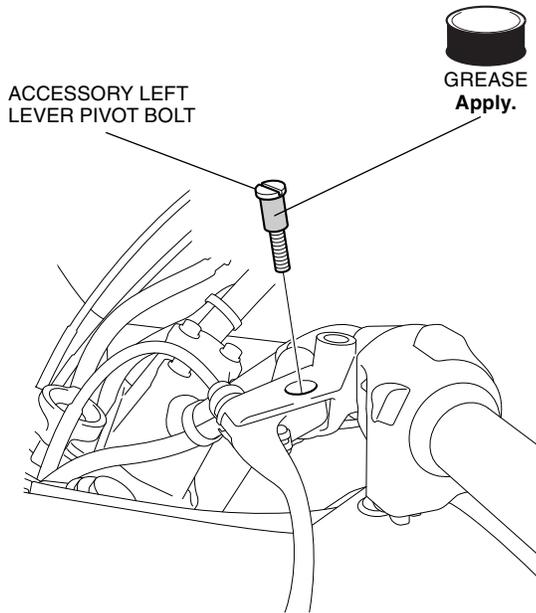


- Remove the bolt as shown.

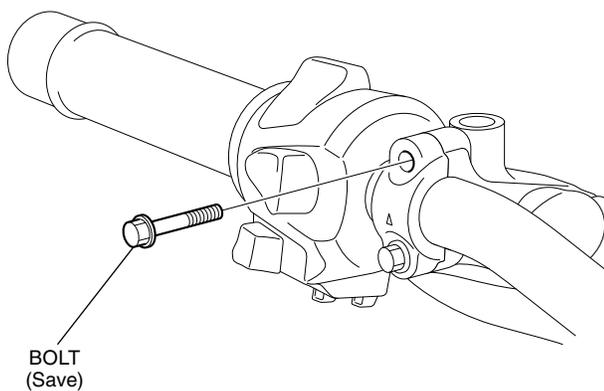


- Install the left hand guard as shown.

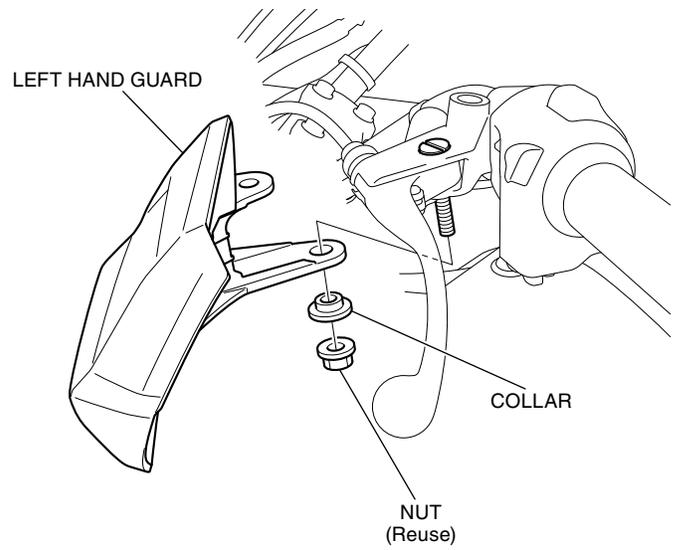


- Loosely install the left guard stay as shown.

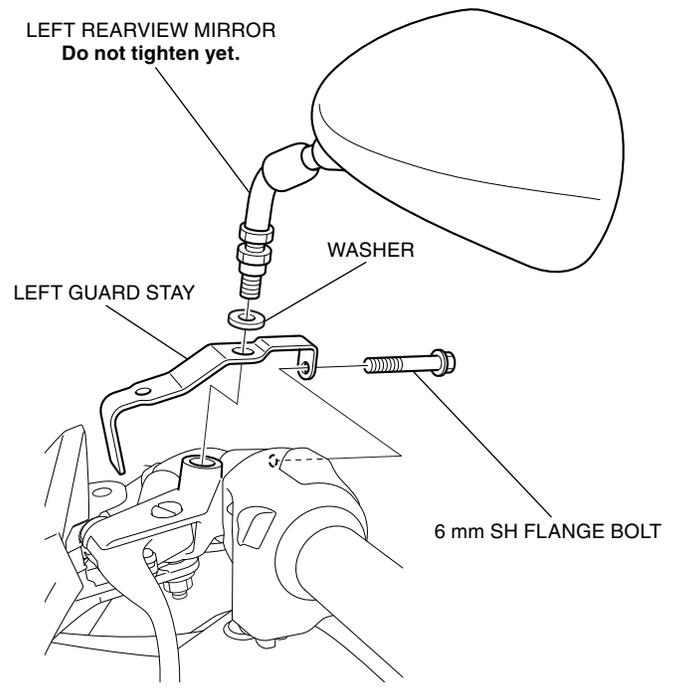


7. Install the left hand guard as shown.

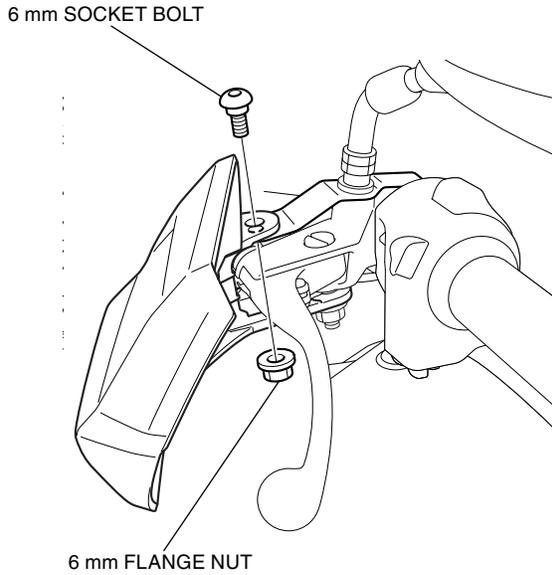


8. Tighten all loosely installed hardware to the specifications in the torque chart.

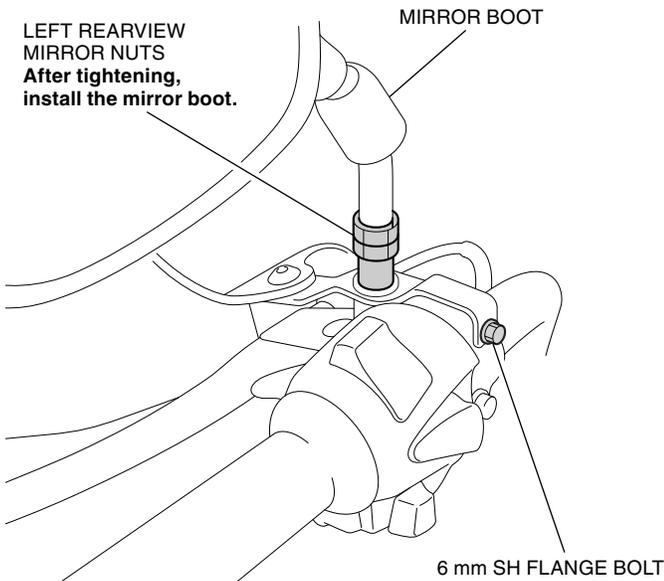


9. Temporarily move the throttle cables up as shown.

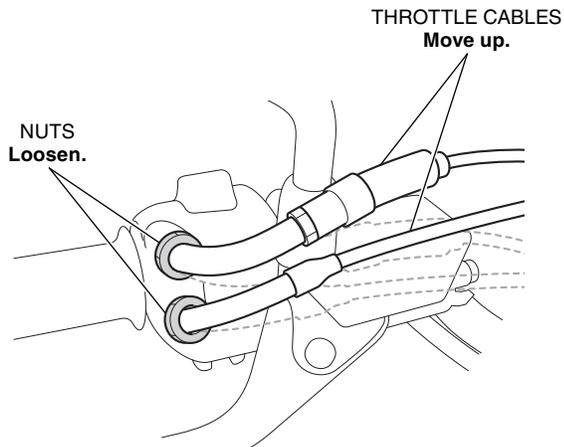

10. Remove the brake lever pivot bolt and nut as shown.

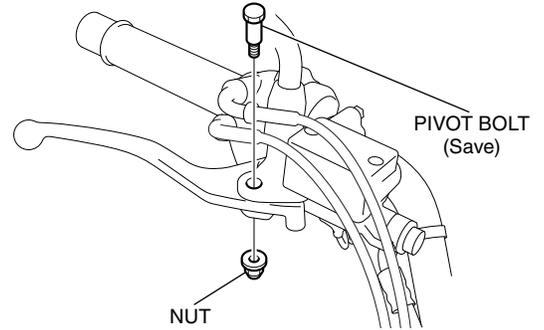


11. Assemble the right hand guard as shown.

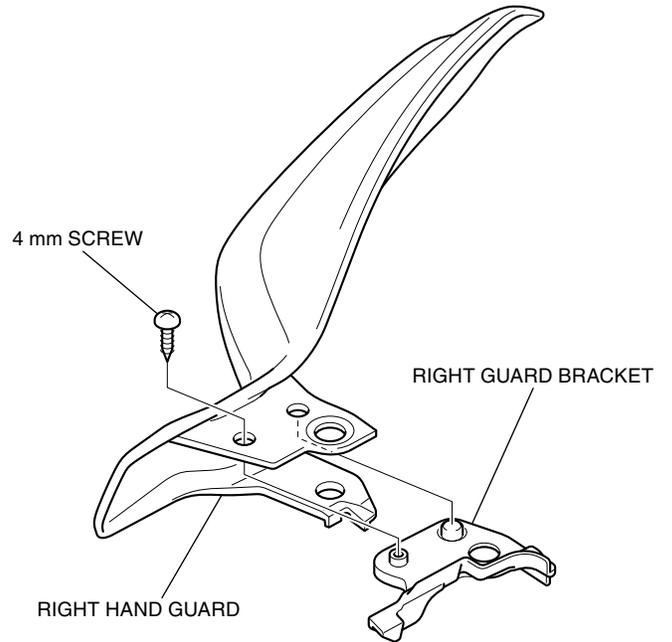

12. Install the right hand guard as shown.

- First install the right lever pivot bolt.

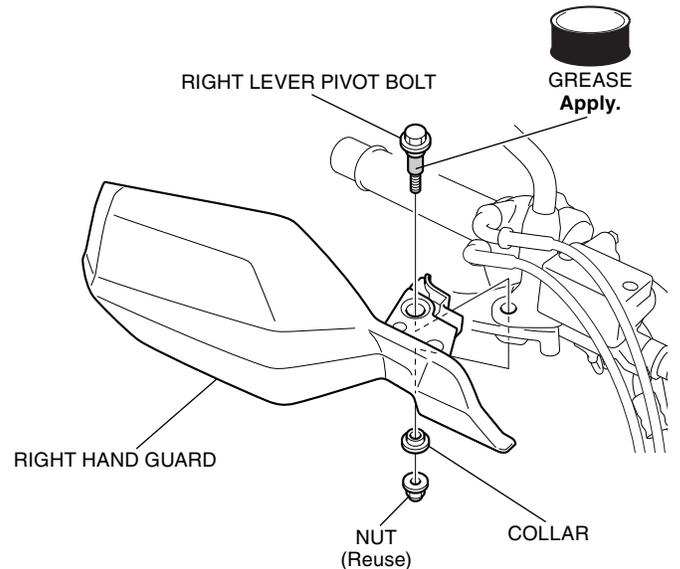

13. Reposition the throttle cables and tighten the nuts securely.