



INSTALLATION INSTRUCTIONS

Accessory

**FRONT BUMPER
P/N 08P71-HL4-AK0**

Application

**After 21YM
SXS1000M3P/M3D/
M3LS/M5P/M5D/M5LS**


Publication No.

MII 17762

Issue Date

April 2022

PARTS LIST

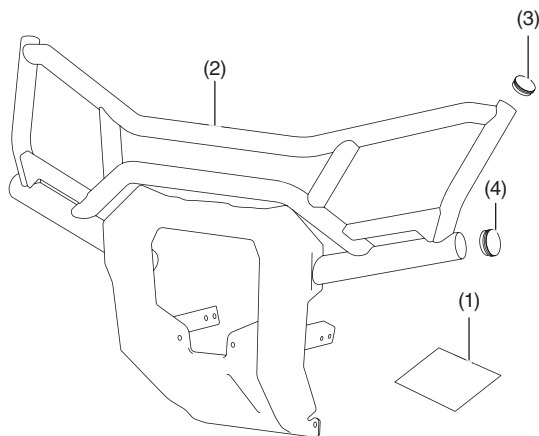

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Front bumper	1
(3)	1-3/4" Cap	2
(4)	2-1/4" Cap	2

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values.


Item	N·m	kgf·m	lbf·ft
8 mm flange bolt	36	3.6	26
10 mm flange bolt	34	3.5	25

INSTALLATION

▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

1. Remove the vehicle's parts as shown.

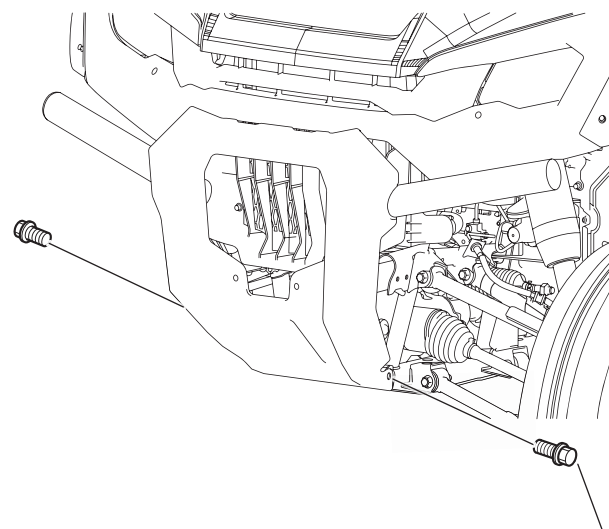


10 mm FLANGE BOLT (Save).


2. Remove the front bumper as shown.

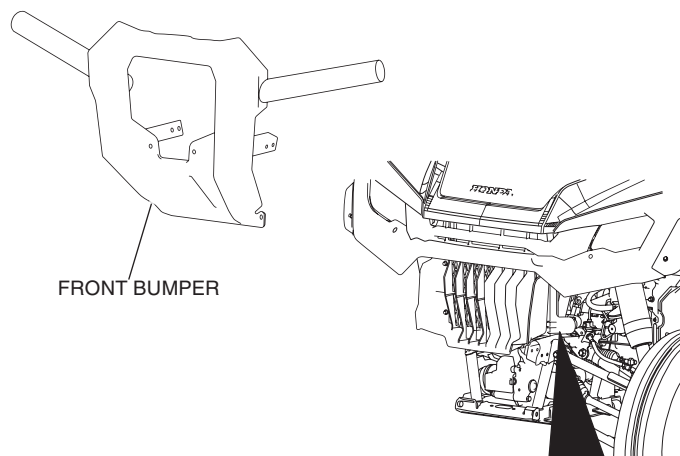


Remove the bolts as shown.

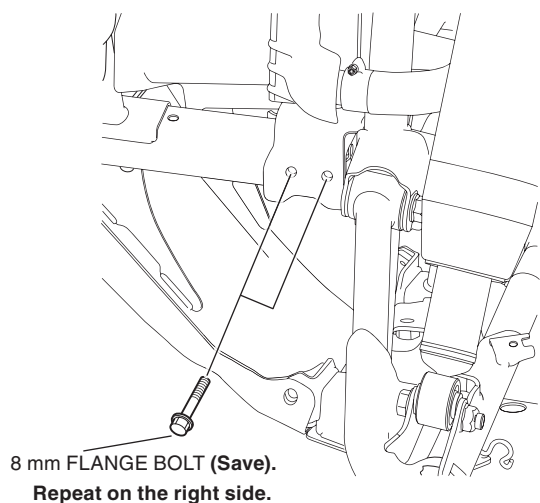


3. Install the caps as shown.

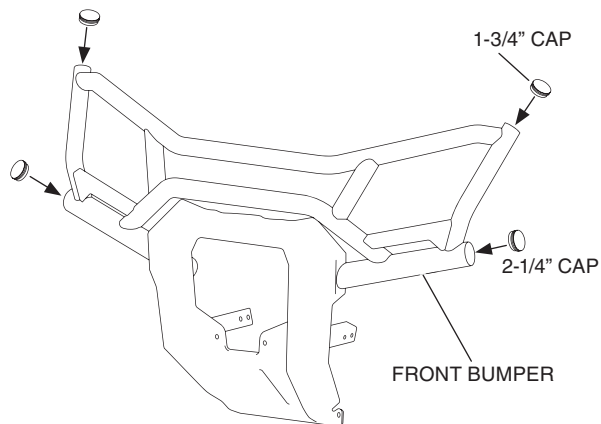


4. Loosely install the front bumper as shown.

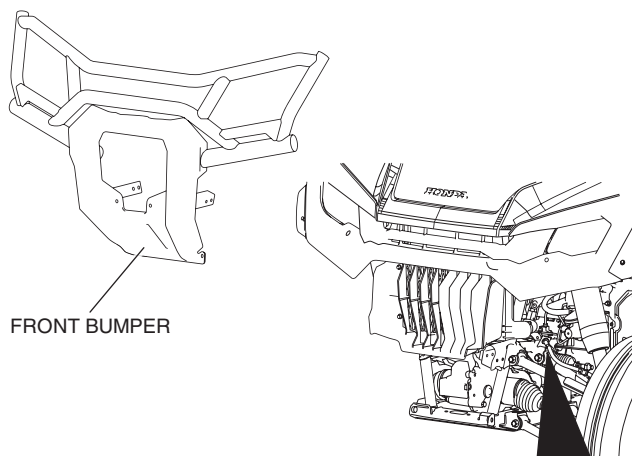

Loosely install the bolts as shown.

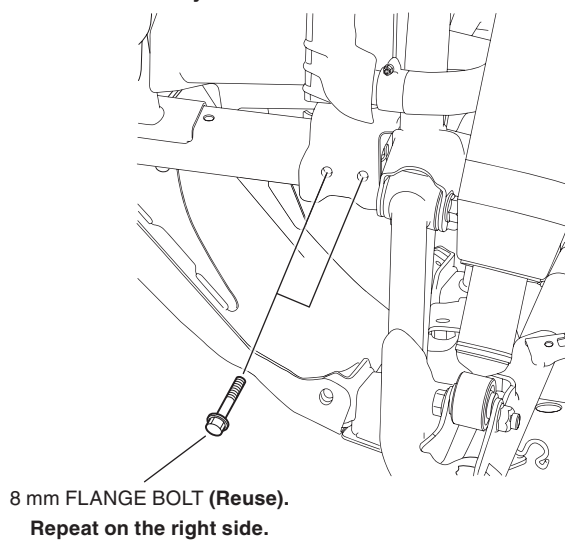

5. Loosely install the parts as shown.

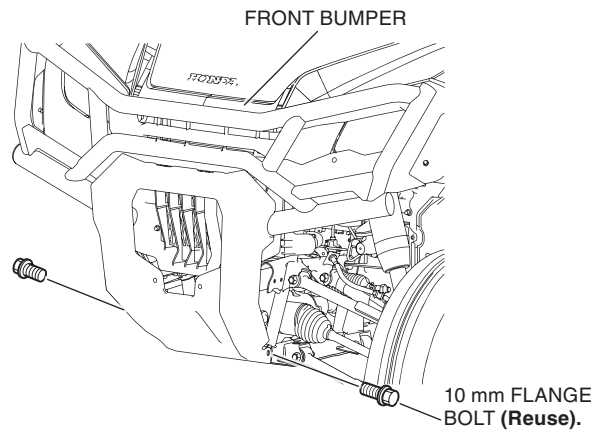

6. Tighten the loosely installed hardware to the values specified in the Torque Chart.