


Accessory	Application	Publication No.
METER VISOR P/N 08R72-K87-A00 08R70-K87-J00	CMX500/A CMX300/A	MII 16241
		Issue Date
		April 2017

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

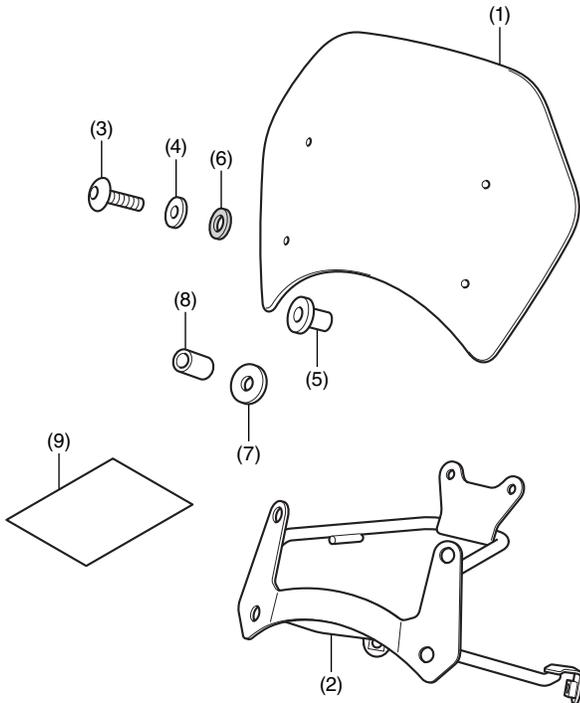

No.	Description	Qty
(1)	Meter visor	1
(2)	Meter visor stay	1
(3)	5 mm socket bolt	4
(4)	5 mm thrust washer	4
(5)	5 mm well nut	4
(6)	Rubber washer	4
(7)	Washer	2
(8)	Collar	2
(9)	Installation Instruction URL	1

## TOOLS REQUIRED

Hex wrench (5 mm)

Torque wrench

## TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N·m	kgf·m	lbf·ft
5 mm socket bolt	1.0	0.1	0.7

## INSTALLATION

### NOTE:


- Take care not to damage the painted surfaces of the motorcycle.
- Reinstall the removed parts on the motorcycle and make sure that wires and harnesses are not pinched.
- **Illustration shows CMX300A type, other types are similar.**

1. Refer to the Service Manual for the motorcycle, remove the bolts and collars as shown.

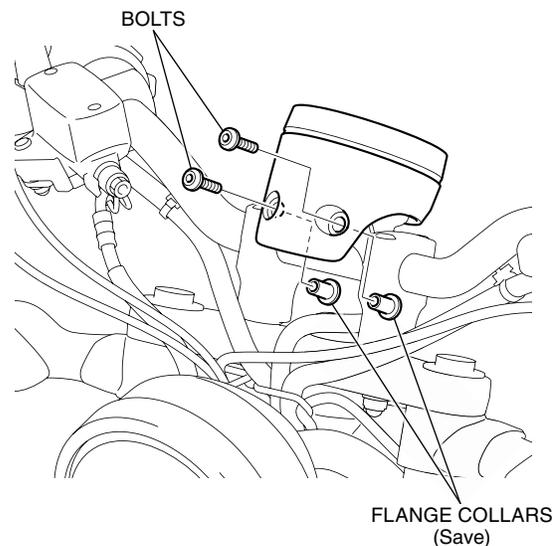


2. Refer to the Service Manual for the motorcycle, remove the bolt and nuts.

- **Repeat on the right side.**

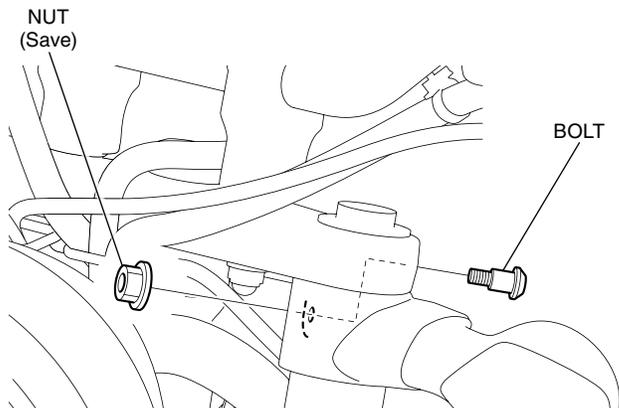


3. Loosely install the meter visor stay as shown.

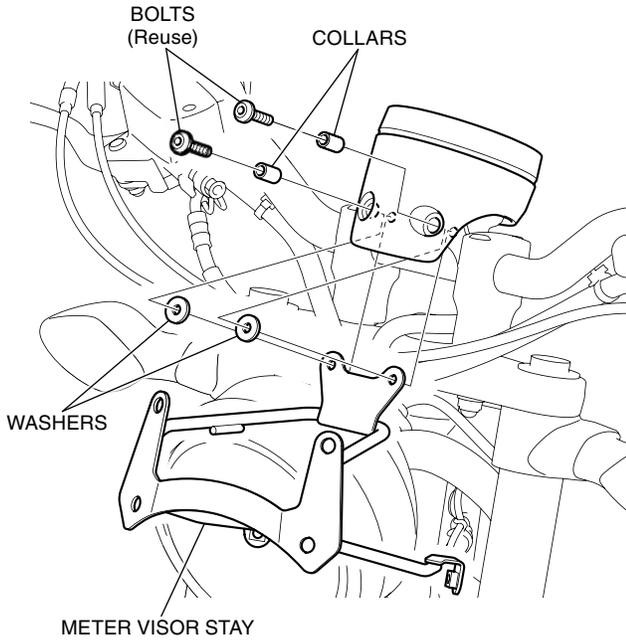


4. Loosely install the bolt as shown.

- Repeat on the right side.

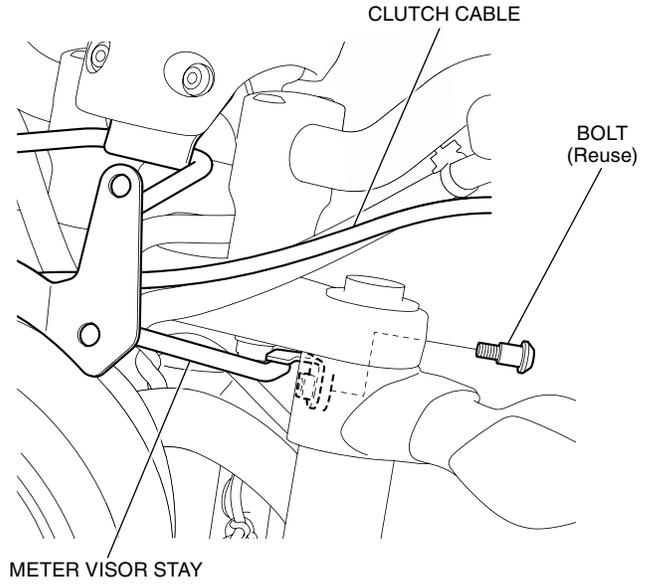


Motorcycle with the Accessory Socket and this accessory.

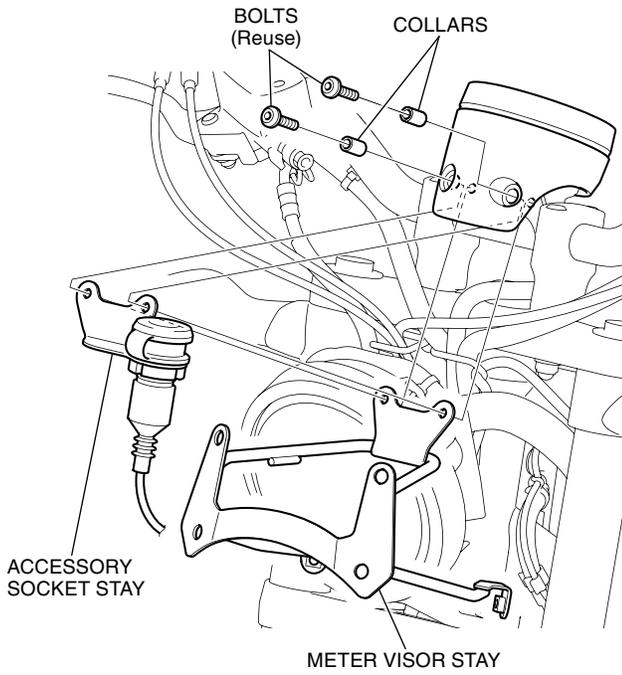


5. Tighten all loosely installed bolts to the value specified in the Torque Chart.

6. Install the meter visor as shown.

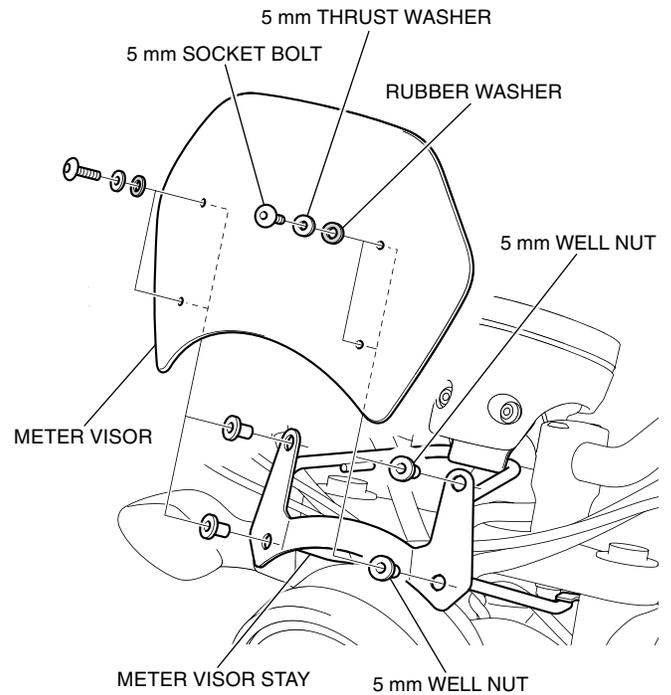

7. Route the throttle cables as shown.

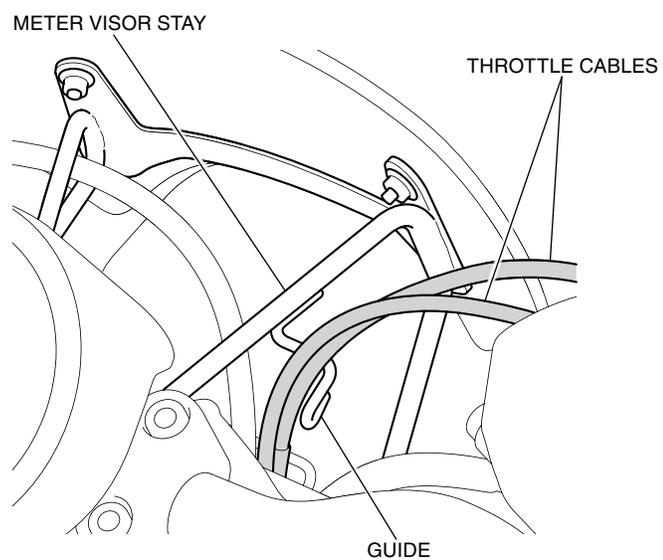

8. Move the handlebar right and left, and check that this accessory does not interfere with the motorcycle parts.