



INSTALLATION INSTRUCTIONS


Accessory
ACCESSORY SOCKET
 P/N 08U70-MJW-J00

Application
After '15
CB500F/FA
CBR500R/RA

Publication No.
MII 15802
 Issue Date
March 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

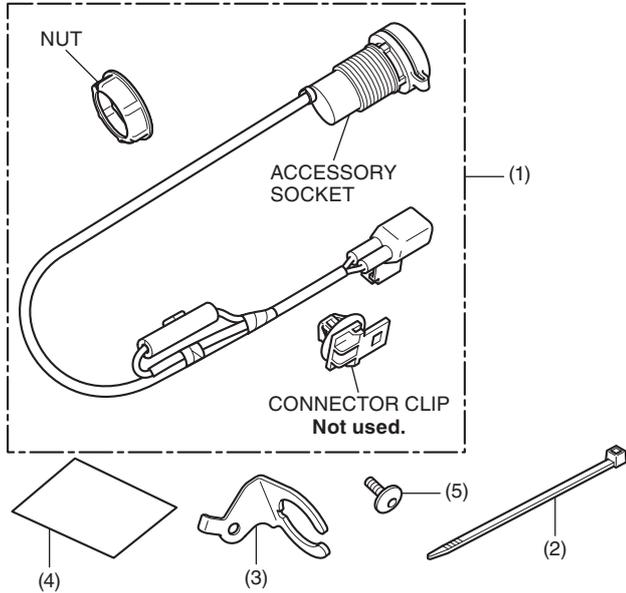

No.	Description	Qty
(1)	Accessory socket	1
(2)	Wire tie	4
(3)	Accessory socket stay	1
(4)	Installation Instruction URL	1
(5)	6 mm screw	1

TOOLS AND SUPPLY REQUIRED

- Hex wrench (5 mm)
- Side cutters
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm screw	9	0.9	6.6

INSTALLATION


▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTE:

- Disconnect the negative (-) cable from the battery before installing this accessory.
- The clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Although the CBR500R/RA is shown for this installation, use the same procedures for the CB500F/FA model.

- Remove the pillion seat as shown.

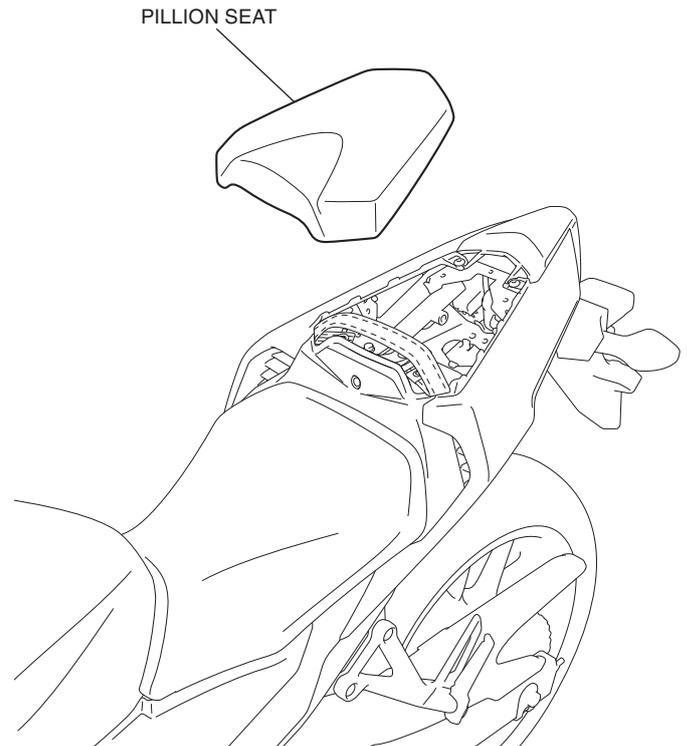


2. Remove the seat, and disconnect the negative (-) battery cable.

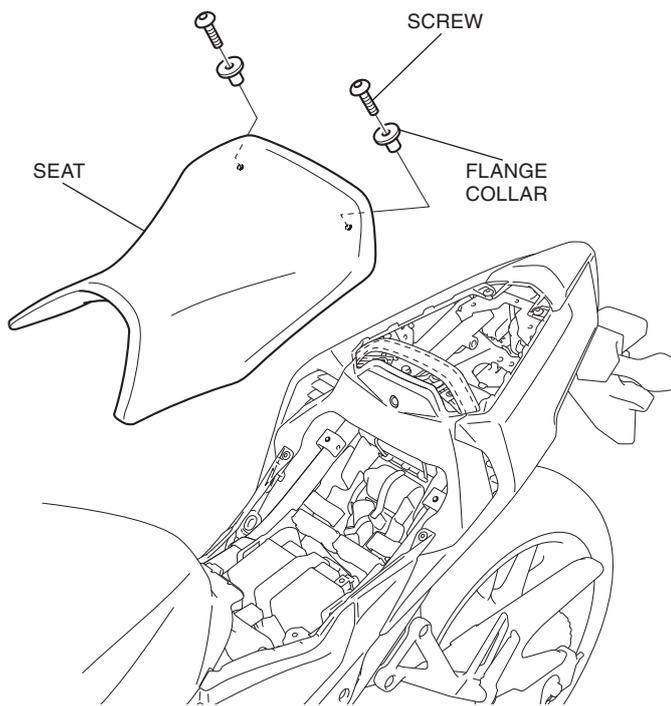


3. Remove the left side cover as shown.
• Repeat on the right side.


<Left side>

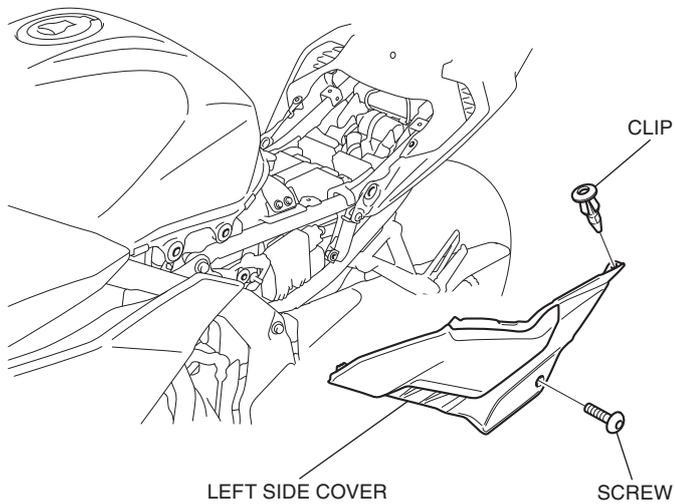


4. Remove the clips and screws as shown.

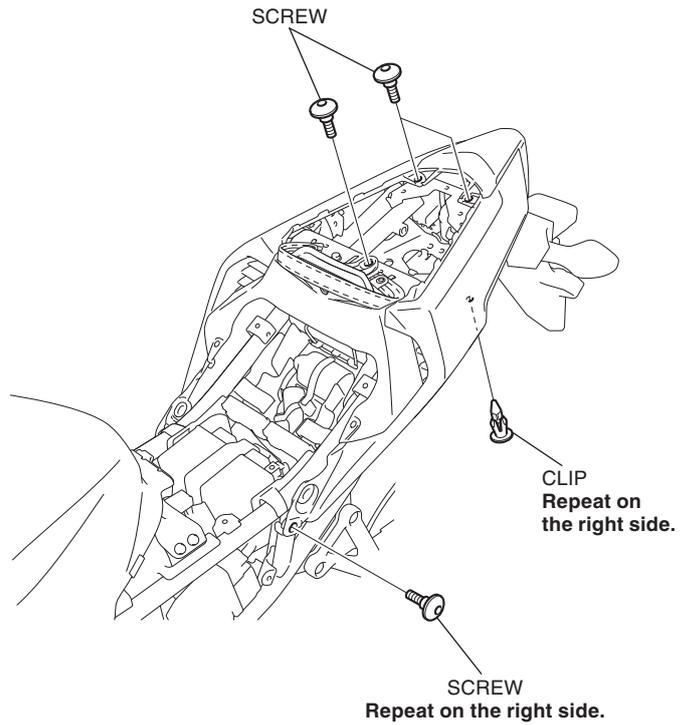


5. Remove the rear cowl as shown.

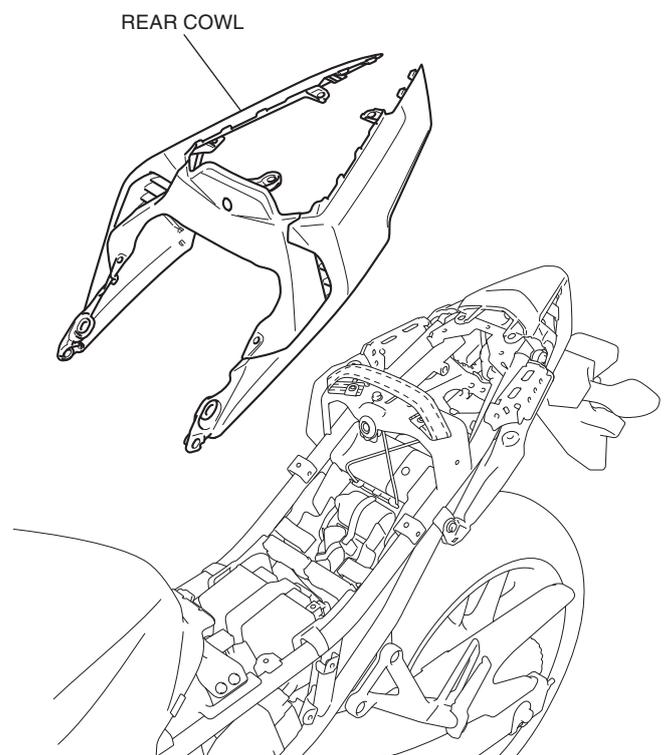


6. Remove the dummy connector as shown.

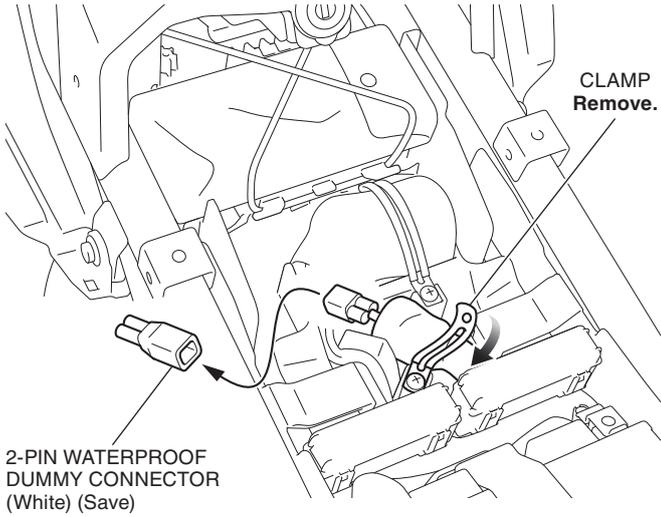



7. Open the cover as shown.

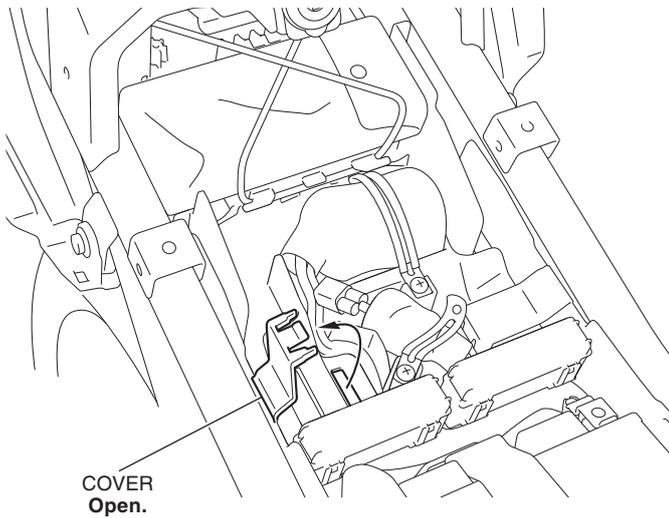


8. Install the accessory socket stay as shown.
<Right side>

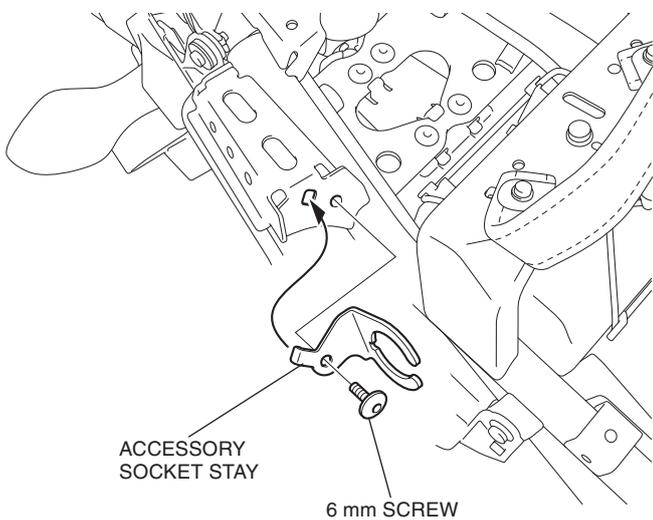


9. Install the accessory socket to the accessory socket stay as shown.

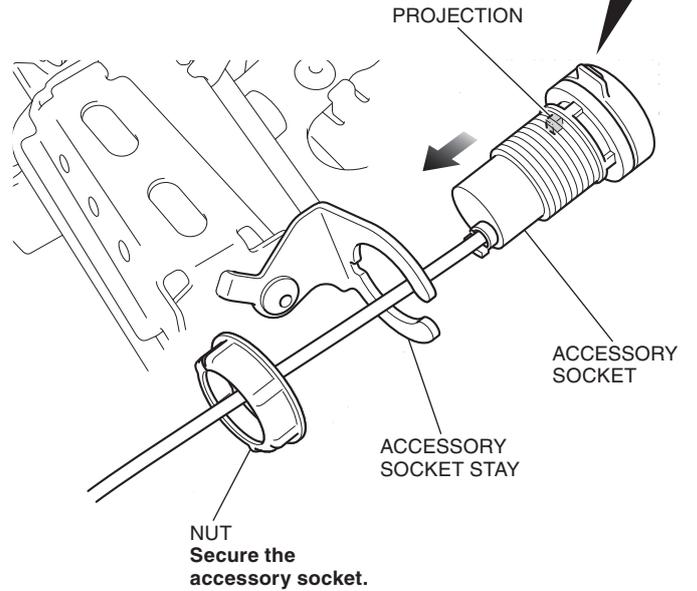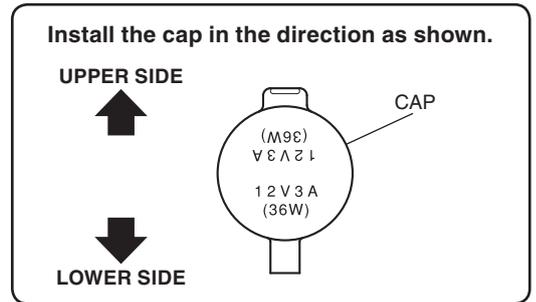


10. Route the accessory socket harness as shown.

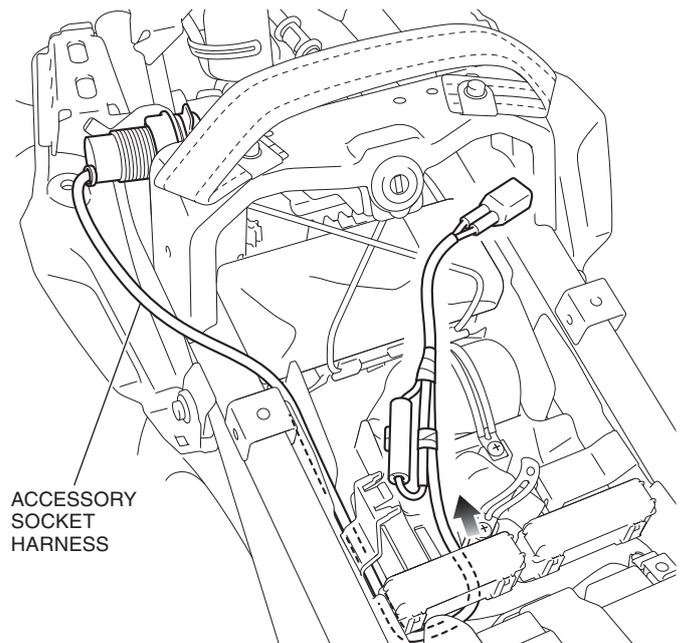

11. Connect the accessory socket harness as shown.

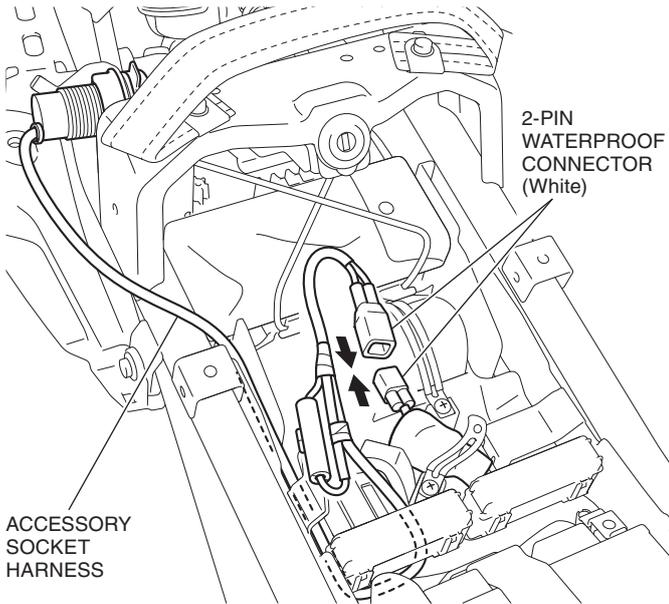


12. Secure the accessory socket harness with the wire tie as shown.

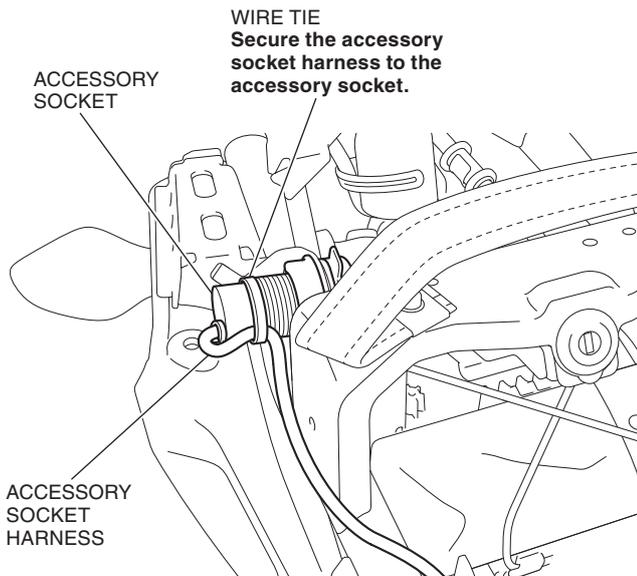


13. Close the cover as shown.


- Confirm that no wire harness is caught or too tight.

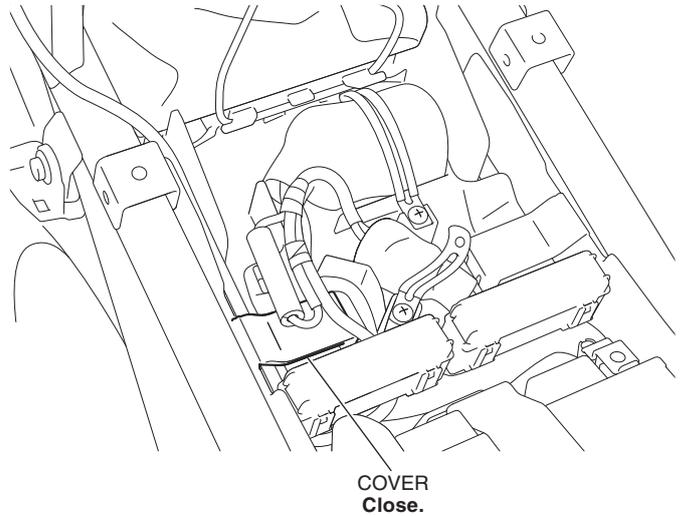


14. Turn up the accessory socket harness as shown.

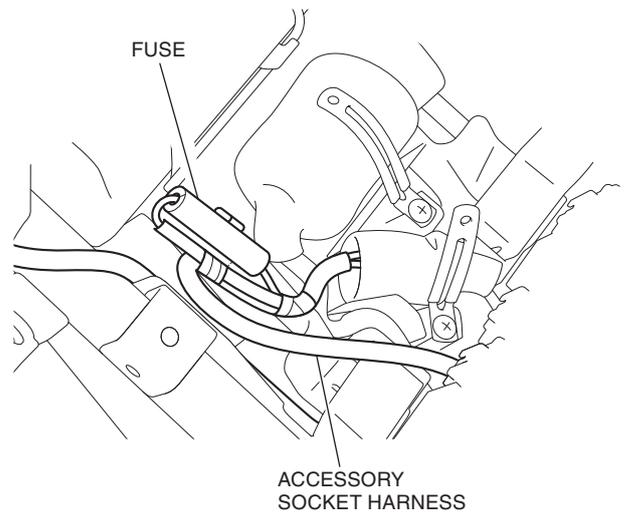

15. Secure the accessory socket harness with the wire ties as shown.

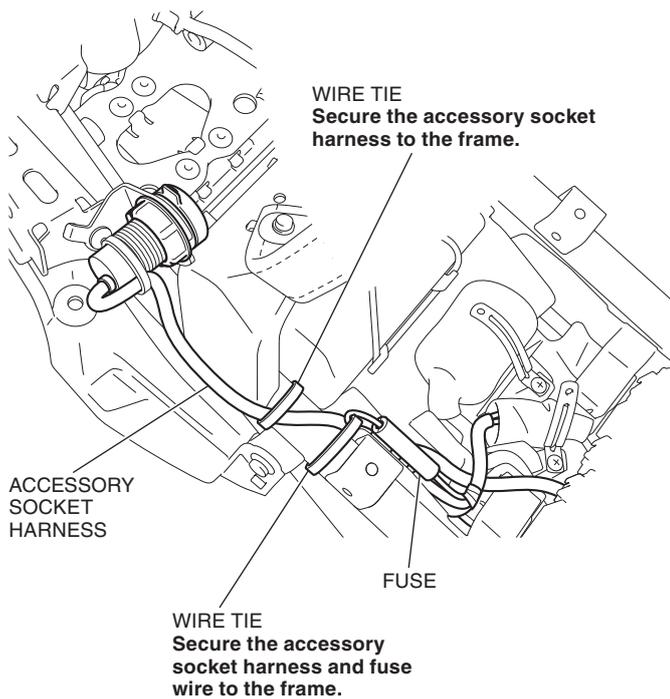

16. Secure the harness boot as shown.

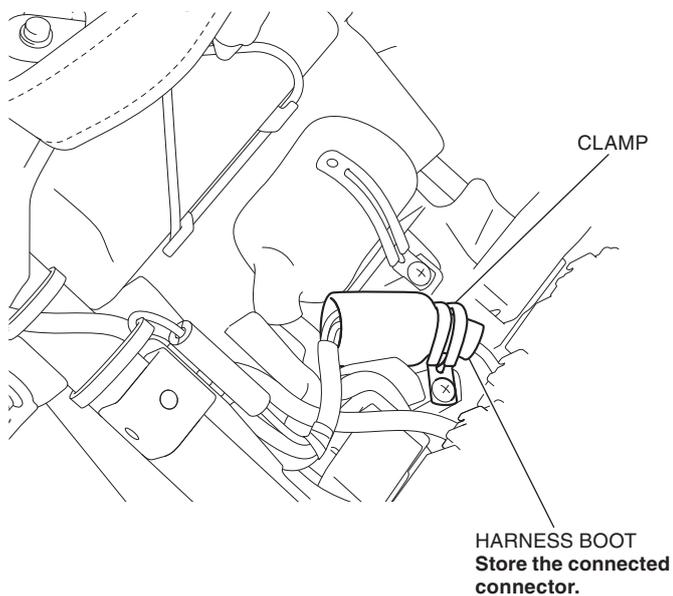

17. Install the motorcycle's parts in the reverse order of removal.
- **Confirm that no wire harness is caught or too tight.**
18. Check the accessory socket, headlight and the other lights for proper operation.