



INSTALLATION INSTRUCTIONS

Accessory

REAR PANEL
P/N 0SB73-HL6-A00

Application

SXS1000S2R
SXS1000S2X

Publication No.


MII 16561

Issue Date

February 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

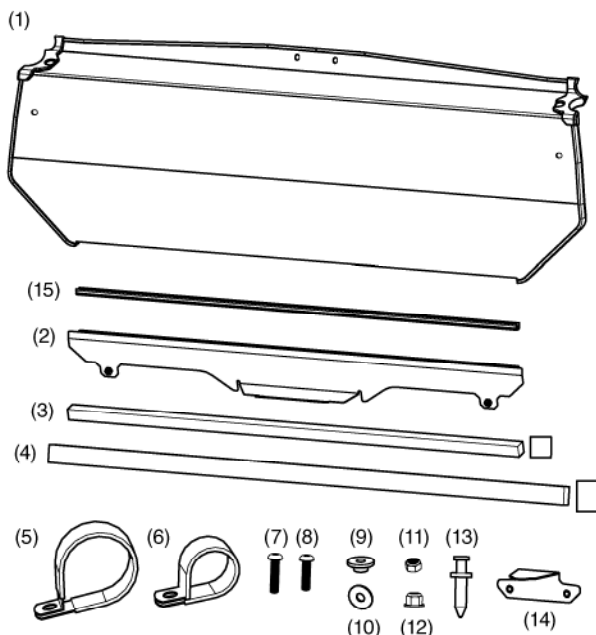

TOOLS REQUIRED

10 mm socket
Tape measure
Scissors
4 mm hex wrench
Ratchet


USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt and then wash with a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.


No.	Description	Qty
(1)	Rear panel	1
(2)	Lower mounting bracket	1
(3)	Adhesive foam (39" L x 1.5" H x 3/4" D)	1
(4)	Foam seal (48" L x 1 1/2" H x 1" D)	1
(5)	Large clamp	2
(6)	Small clamp	2
(7)	6 x 25 mm screw	2
(8)	6 x 20 mm screw	2
(9)	Shoulder spacer	4
(10)	Flat washer	2
(11)	6 mm Nylock nut	2
(12)	6 mm Nylock flange nut	2
(13)	Trim clip	2
(14)	Upper mounting bracket	1
(15)	Flocked trim	1
(16)	Installation Instruction URL (not shown)	1

INSTALLATION


1. Remove the four corner bolts and washers securing the original roof from the vehicle. Set aside hardware to be reinstalled.

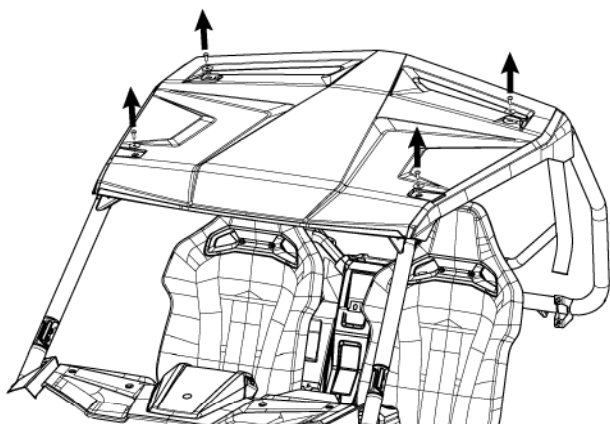


2. Remove the two original bolts securing the roof from the inside of the vehicle. Remove the roof and set aside.

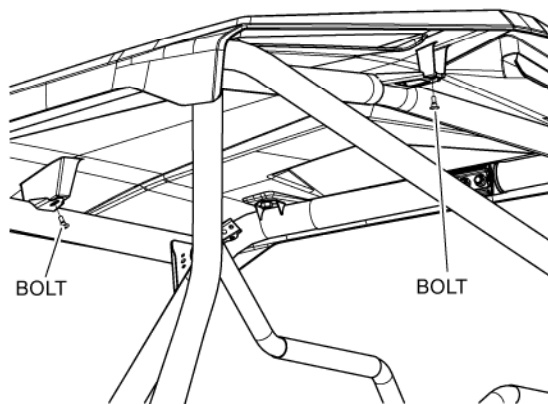


3. Remove the two original trim clips from the seat back upper cover as shown.

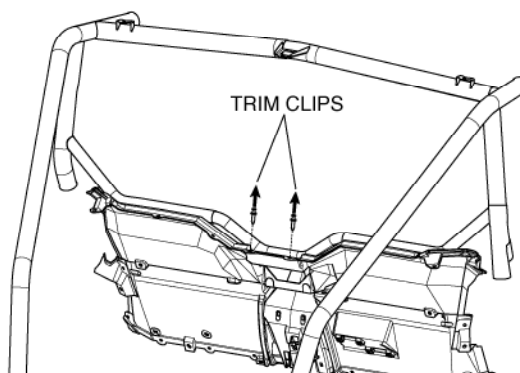


4. Cut two 15.75 inch (400 mm) pieces of adhesive foam (39" x 1.5" x 0.75"). Remove the backing and apply both pieces to the bottom outside edges of the lower mounting bracket as shown. Use the remaining adhesive foam to seal the center of the bracket on the inside of the vehicle.

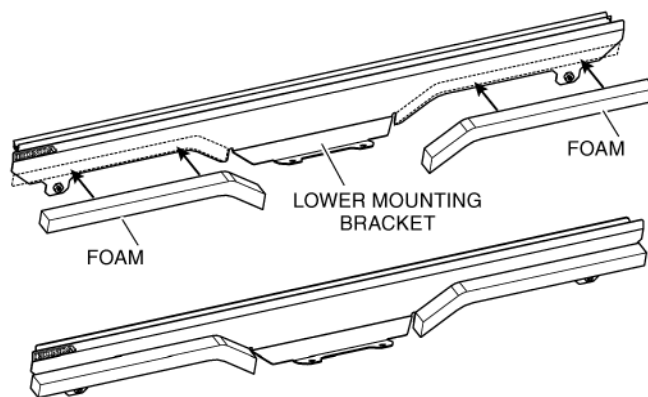


5. Install the flocked trim into the channel along the top edge of the bracket as shown.

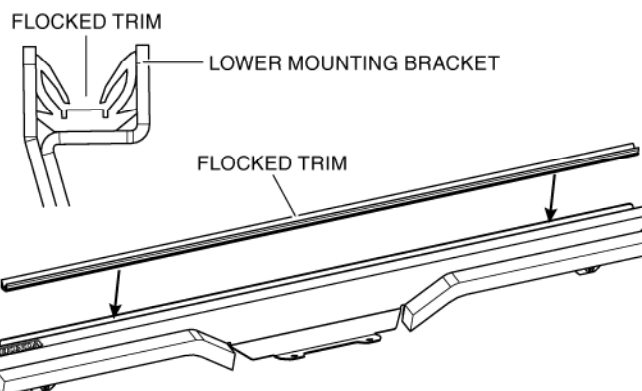


6. Install two small clamps around the horizontal OPS tube and two large clamps around the vertical OPS tubes behind the seats as shown.

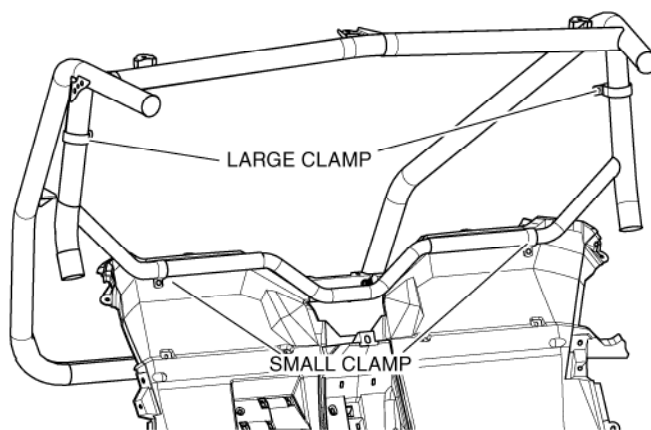


7. Place the lower mounting bracket just behind the horizontal OPS tube behind the seat. The mounting flange in the center of the lower mounting bracket will rest on top of the seat back upper cover. The HONDA logo can be seen from the outside of the vehicle.

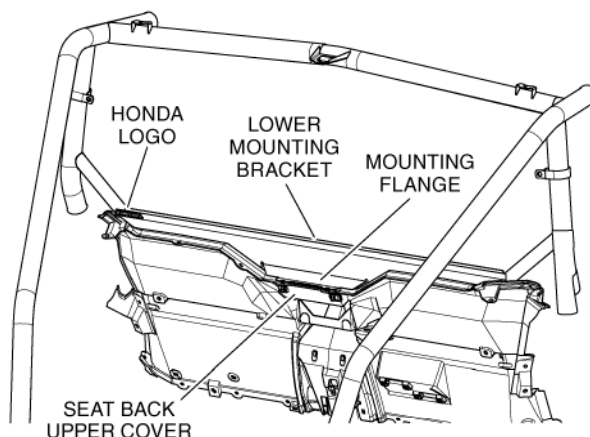

8. Lift the rear panel into place so the mounting hole in the driver's side corner of the rear panel (A) is near the large clamp on the vertical OPS tube. Repeat on the passenger side (B), then lower the bottom edge down into the channel on the mounting bracket (C) as shown.

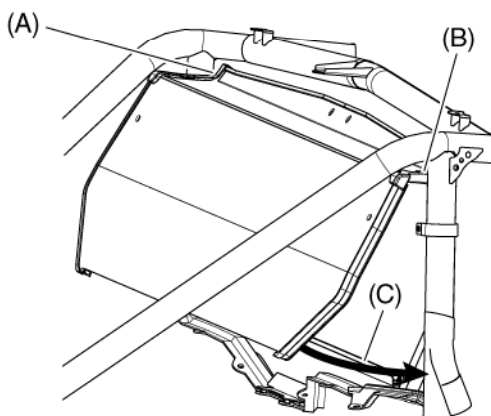


9. Adjust the position of the rear panel as needed to line up the mounting holes in the rear panel with the large and small clamps. Make sure the lower edge of the rear panel is inside of the channel on the mounting bracket.

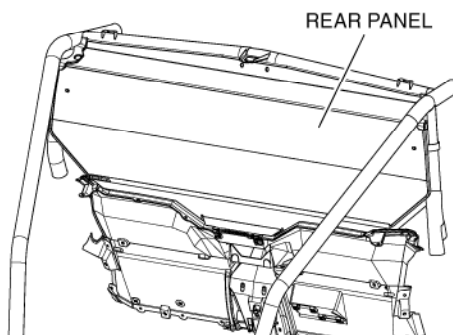


10. Loosely attach the two large clamps to the rear panel using one 25 mm hex head bolt, shoulder spacer, and 6 mm Nylock flange nut per clamp (see image under step 11).
11. Loosely attach the two small clamps to the lower mounting bracket using one 20 mm hex head bolt and flat washer per clamp (as shown).


NOTE: Make sure the small clamps are properly aligned with the weld nuts on the lower mounting bracket before installing the hardware.

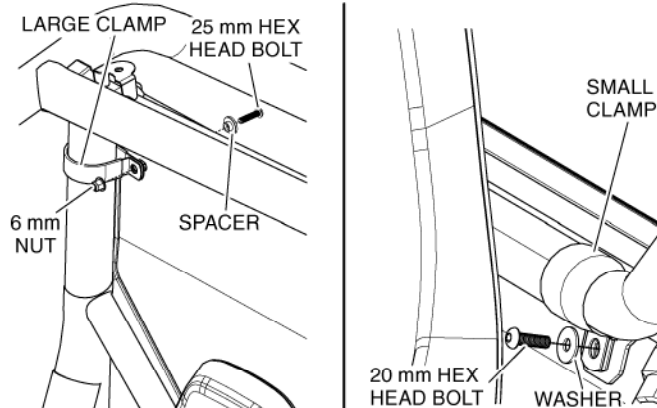


12. Insert a trim clip into each of the two holes in the center flange of the lower mounting bracket.

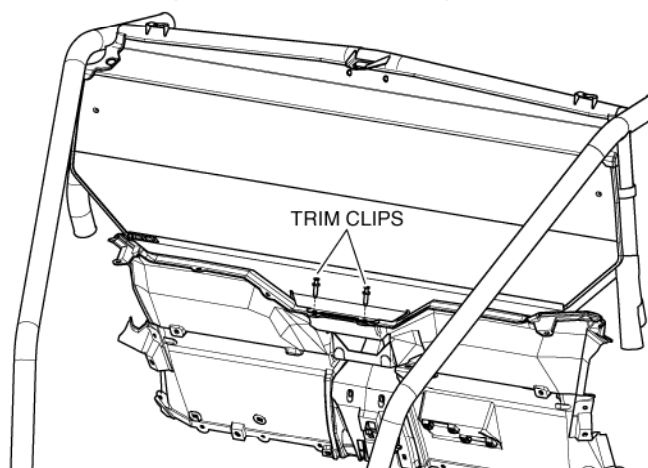


13. Remove the backing from the foam seal (48" x 1.5" x 1") and adhere it to the topside of the upper OPS crossbar as shown. Make sure the foam seal is centered side-to-side on the OPS before pressing it into place.

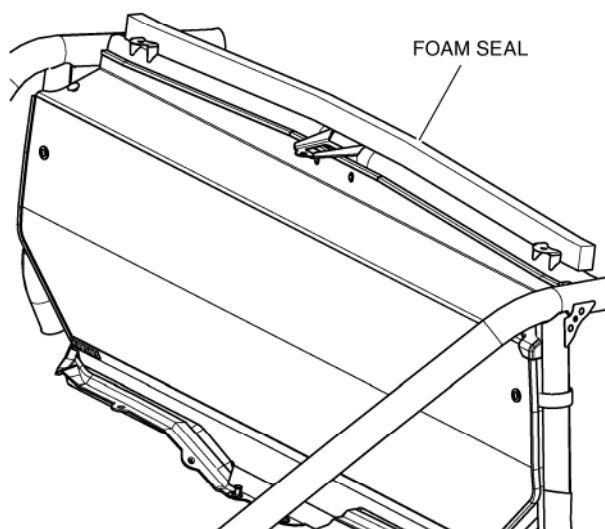

14. Reinstall the roof excluding the hardware in the rear center location. Make sure the roof's rear center mounting tab is lined up with the mounting location on the OPS tube.
15. From outside of the vehicle, loosely install the upper mounting bracket between the rear panel and the center roof mounting location.

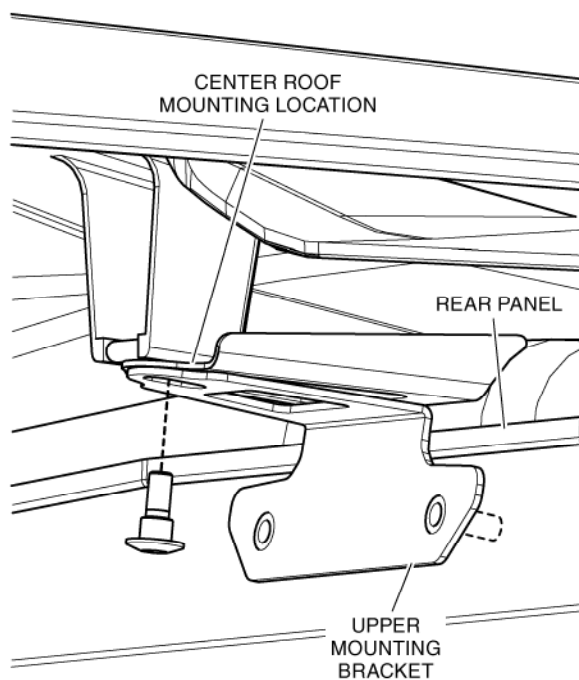

16. From inside of the vehicle, loosely attach the upper mounting bracket to the rear panel using two shoulder spacers and 6 mm Nylock nuts as shown.

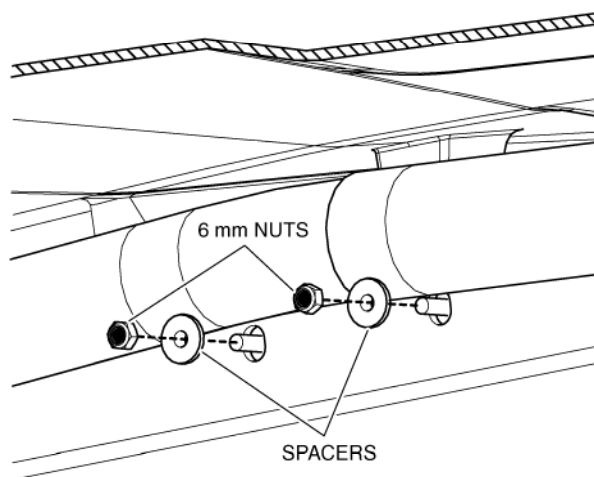

17. Adjust the position of the rear panel, lower mounting bracket, and clamps as needed, then tighten all hardware securely.