



# INSTALLATION INSTRUCTIONS


Accessory  
**DELUXE SADDLEBAG MAT SET**  
 P/N 0SP11-MJG-100D

Application  
**GL1800B**

Publication No.  
**MII 14386**  
 Issue Date  
**December 2012**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

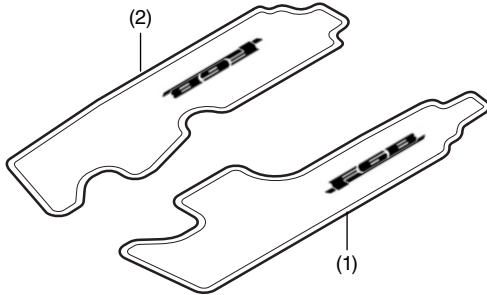

No.	Description	Qty
(1)	Right saddlebag mat	1
(2)	Left saddlebag mat	1


## USE AND CARE INFORMATION

- The combined weight of the cargo and accessories must not exceed the maximum weight capacity of the trunk or saddlebag. Consider the weight of the accessory when loading cargo. Do not overload the trunk or saddlebag.


Saddlebag Mats	0.9 lbs (0.4 kg) each
----------------	-----------------------

## INSTALLATION

- Open the saddlebag.
- Remove the parts shown from the left saddlebag.

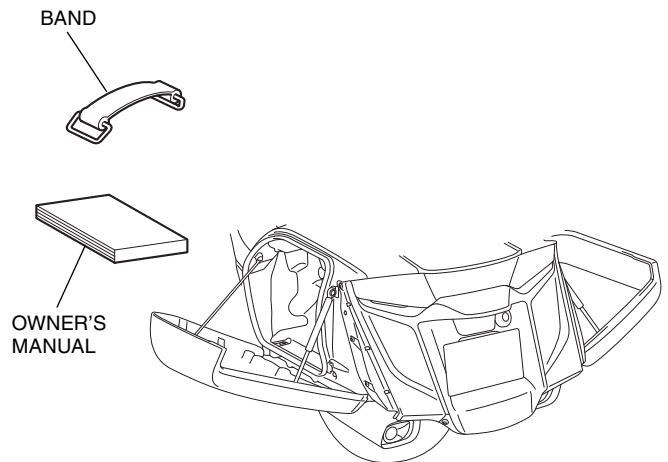

- Install the saddlebag mats as shown.

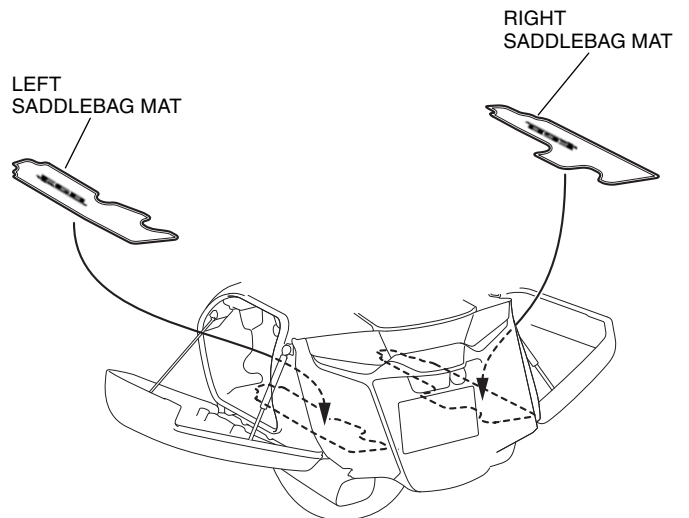

- Install the removed parts in the reverse order of removal.