




# INSTALLATION INSTRUCTIONS

Accessory <b>BED MAT (3P) P/N 0SP42-HL4-201</b>	Application <b>SXS1000M3/M3P</b>	Publication No. <b>MII 15262</b>
		Issue Date <b>April 2015</b>

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

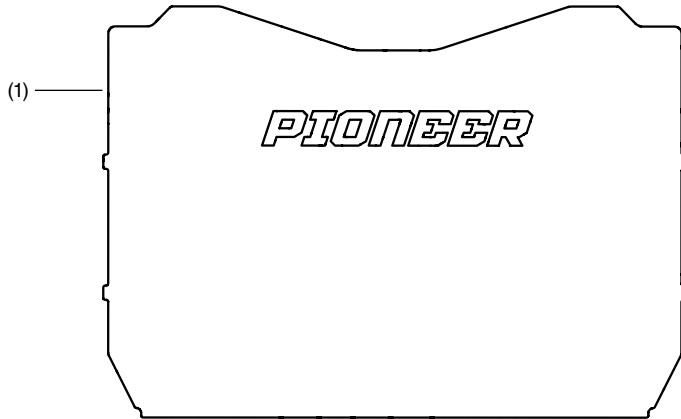

No.	Description	Qty
(1)	Bed mat	1

## TOOLS AND SUPPLIES REQUIRED

None required.

## USE AND CARE INFORMATION

- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wipe with a clean cloth or sponge.
- Never clean with, or expose the floor mat to petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.
- Wipe up spilled brake or battery fluid at once as they may damage the surface of the mat.

## INSTALLATION

1. Ensure the cargo box is clean, empty, and dry.
2. Place the bed mat in the cargo box. The mat should fit the contours of the cargo box and sit completely flat.

