



### PARTS LIST

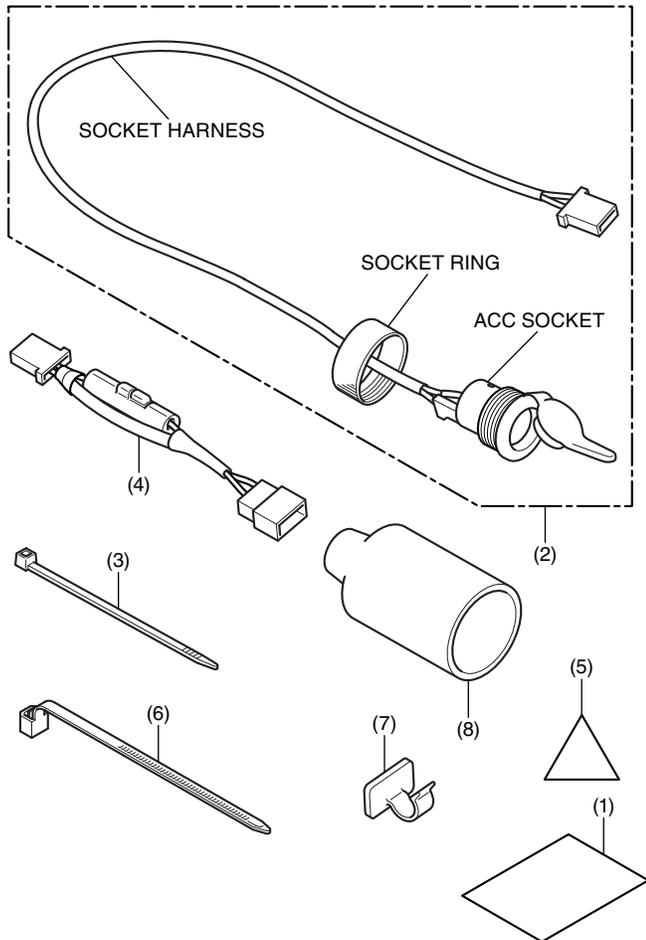

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Socket assy.	1
(3)	Wire tie (narrow)	1
(4)	ACC harness	1
(5)	Safety label	1
(6)	Wire tie (wide)	1
(7)	Harness clip	2
(8)	Harness boot	1

### SUB HARNESS

Sold separately

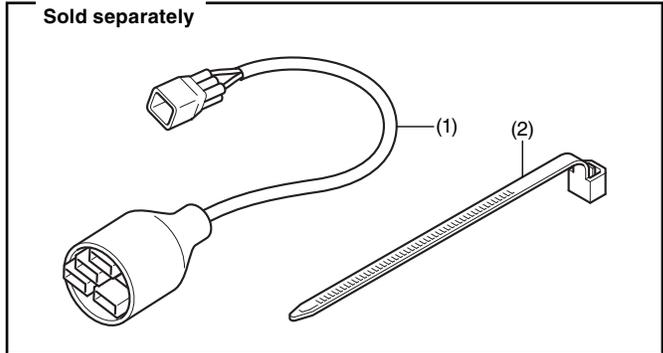

No.	Description	Qty
(1)	Sub harness	1
(2)	Wire tie	1

### TOOLS AND SUPPLIES REQUIRED

- |                   |                |
|-------------------|----------------|
| Side cutters      | Electric drill |
| Hole saw (30 mm)  | Awl            |
| Isopropyl alcohol | Shop towel     |

### TORQUE INFORMATION

Refer to the Service Manual for the torque values of the removed parts.

### INSTALLATION NOTES

#### ▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

#### NOTE:


- Take care not to damage the painted surfaces of the motorcycle.
- Reinstall the removed parts on the motorcycle and make sure that wires and harnesses are not pinched.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memory of the clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with any harness or brake hose.
- When replacing the sub harness, that is required to install this accessory, follow the instructions described in these installation instructions.
- Illustrations show CTX700N type, other type is similar.**

## INSTALLATION (CTX700N/ND)


1. Refer to the Service Manual for the motorcycle, remove the seat, and disconnect the negative (-) cable from the battery as shown.

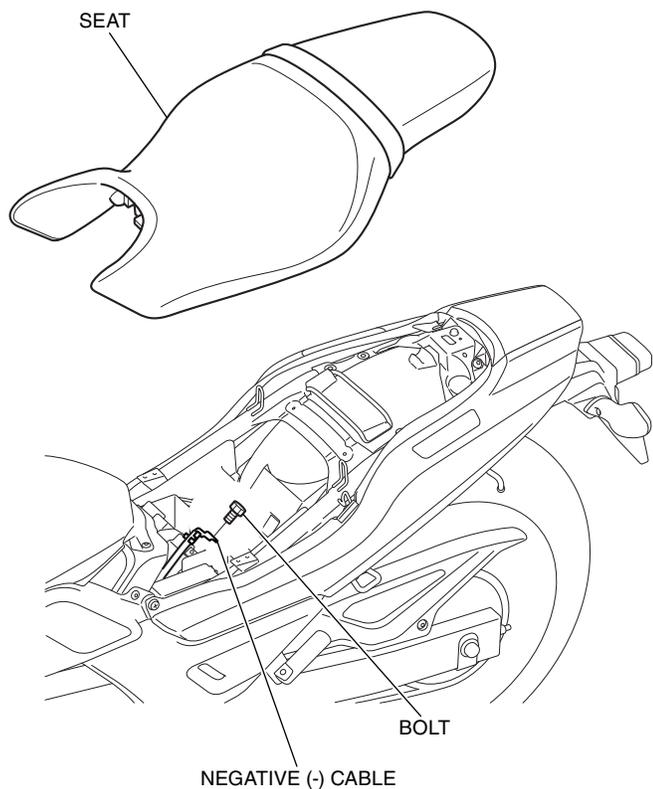


2. Refer to the Service Manual for the motorcycle, remove the right rear cowl.

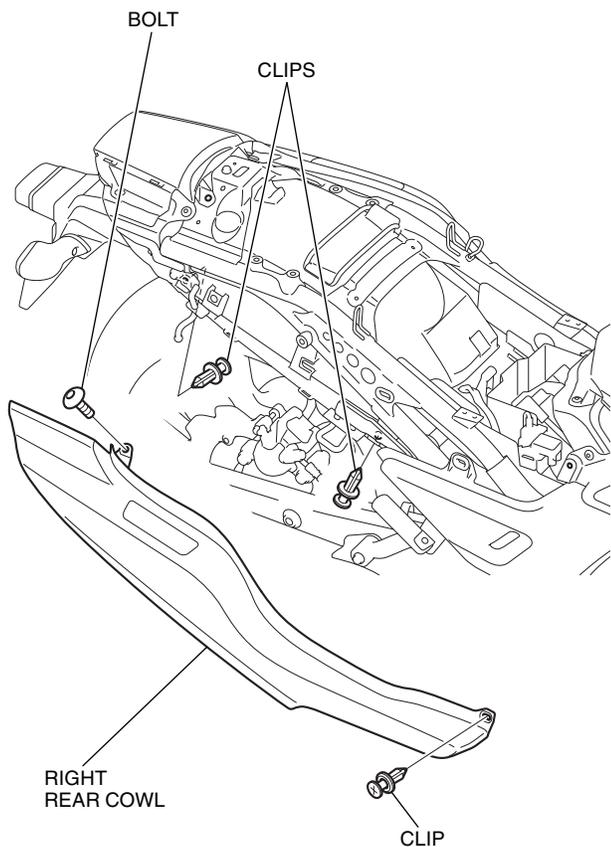


3. Refer to the Service Manual for the motorcycle, remove the right radiator cover.

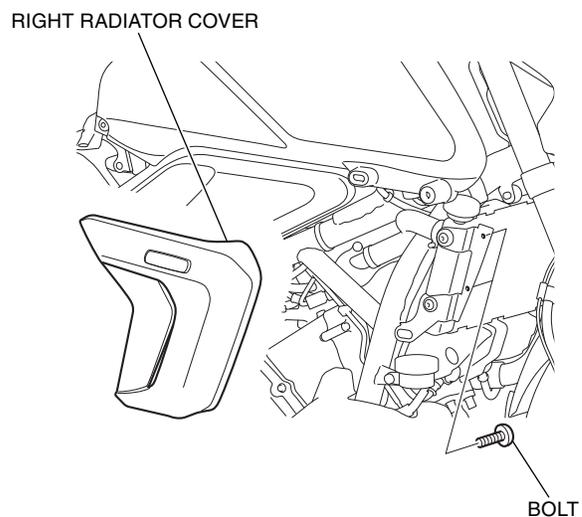

4. Refer to the Service Manual for the motorcycle, remove the right shelter.


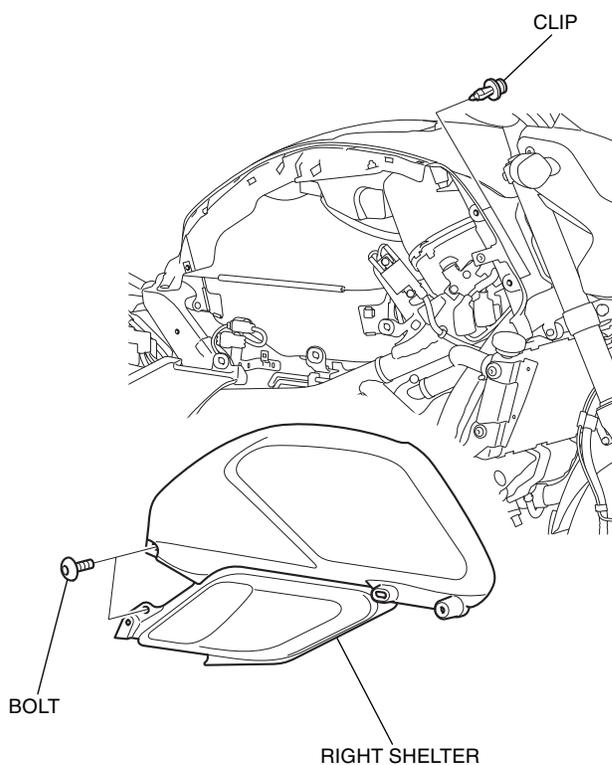


5. Refer to the Service Manual for the motorcycle, open the shelter lid and pocket lid as shown.

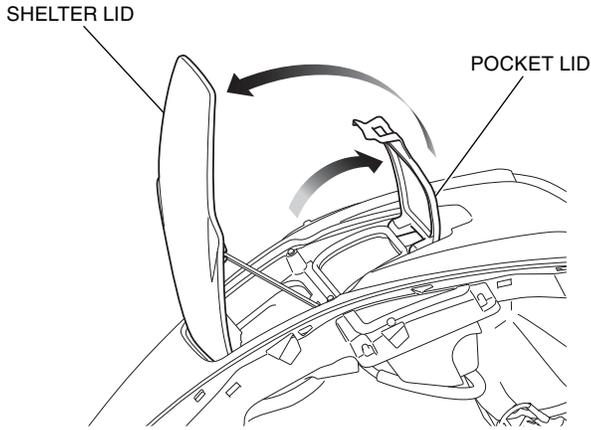

6. Drill a 30 mm hole at the marked point on the side of the pocket using an electric drill and hole saw.


- Remove any burrs from the edge of the hole.

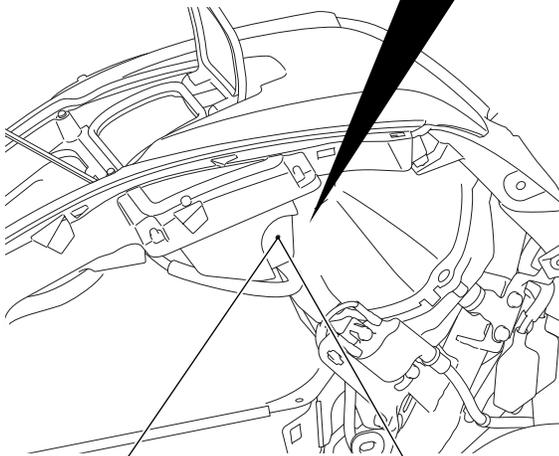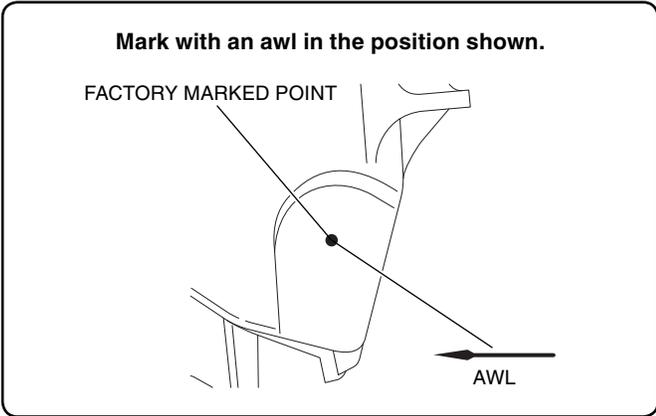


MARKED POINT

ELECTRIC DRILL  
(30 mm HOLE SAW)  
Drill at the marked point.

7. Install the ACC socket as shown.

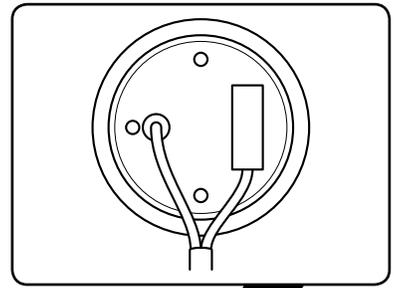


CAP  
Close the cap when it is not used.

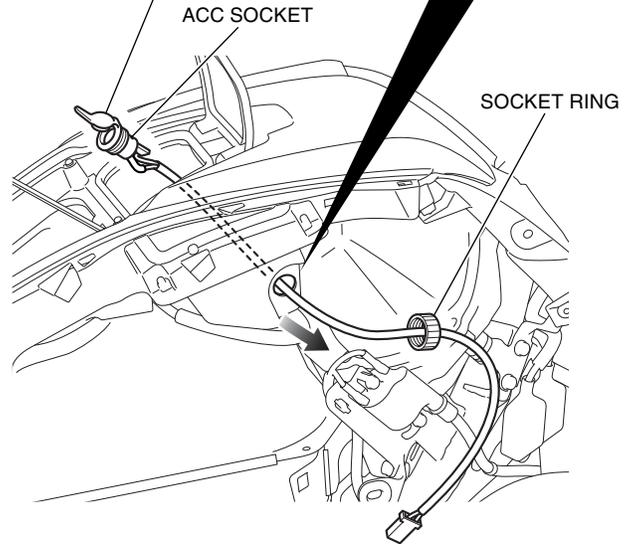


8. Remove the dummy connector 6P connector as shown.

<VIEW FROM RIGHT SIDE>


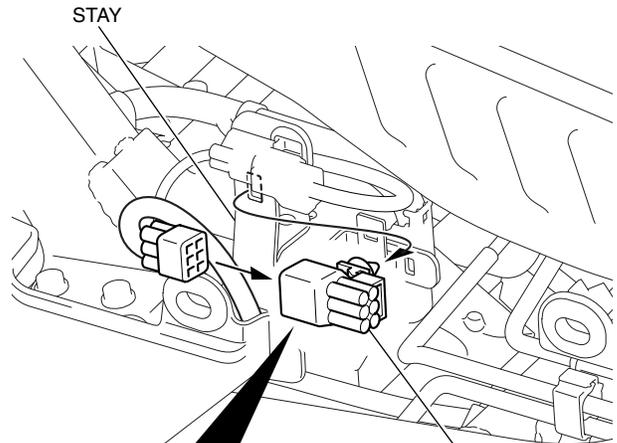


DUMMY CONNECTOR  
(Save)


DUMMY CONNECTOR  
Release from the stay.

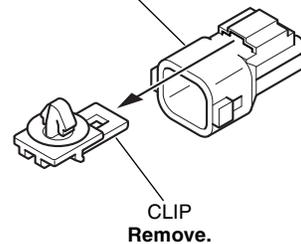


9. Connect the sub harness as shown.

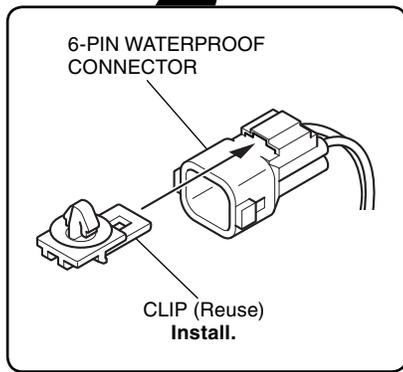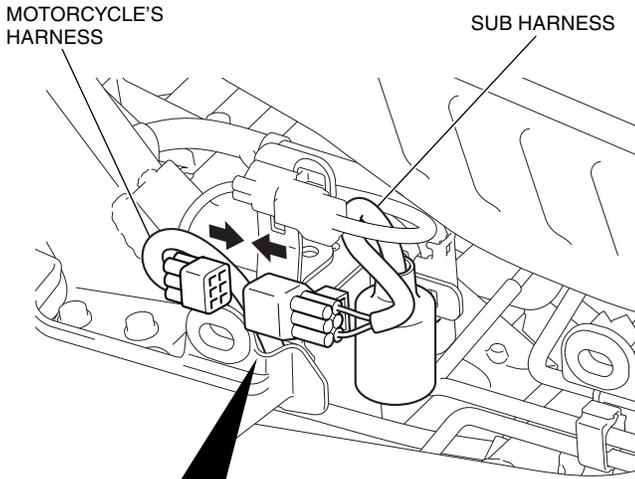


10. Install the 6-pin waterproof connector as shown.

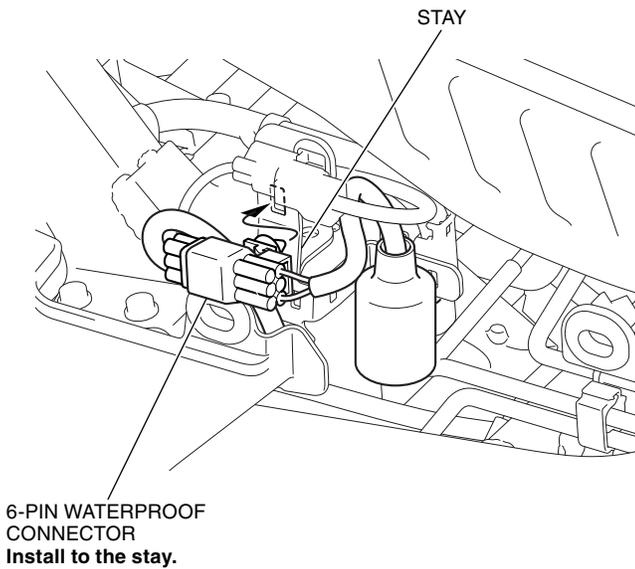


11. Route the socket harness as shown.

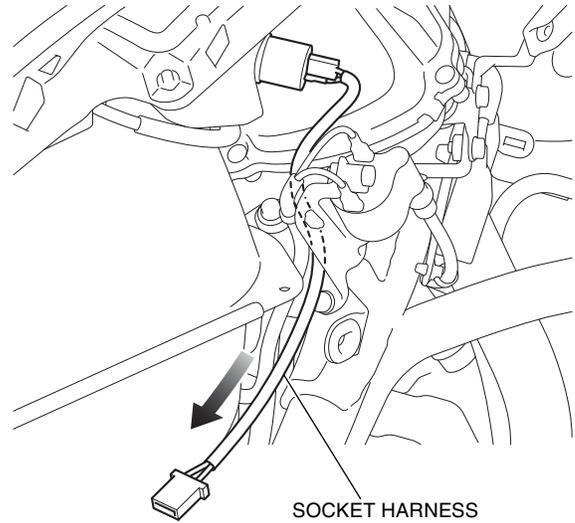


12. Pass the boot over the ACC harness as shown.

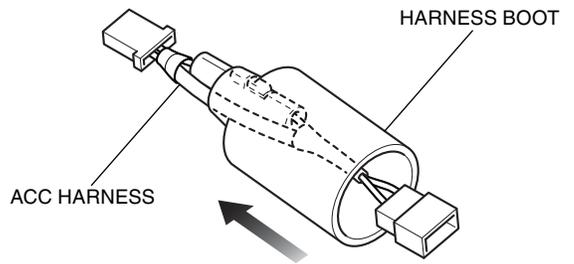


13. Connect the ACC harness to the socket harness as shown.

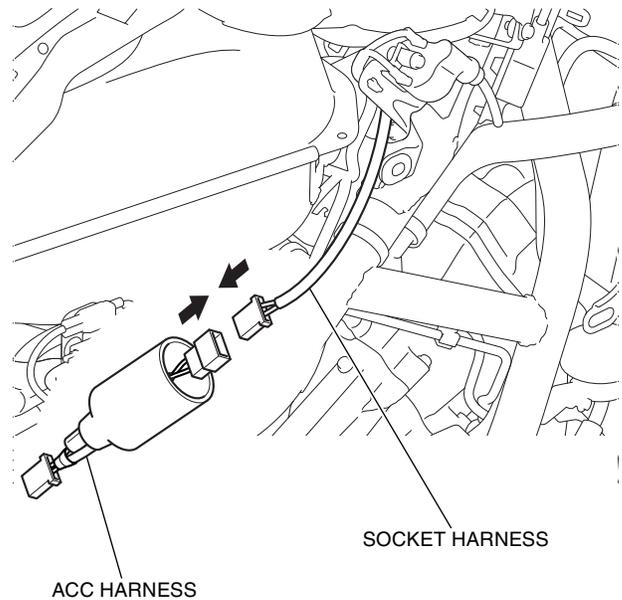


14. Cover the connector with the harness boot as shown.

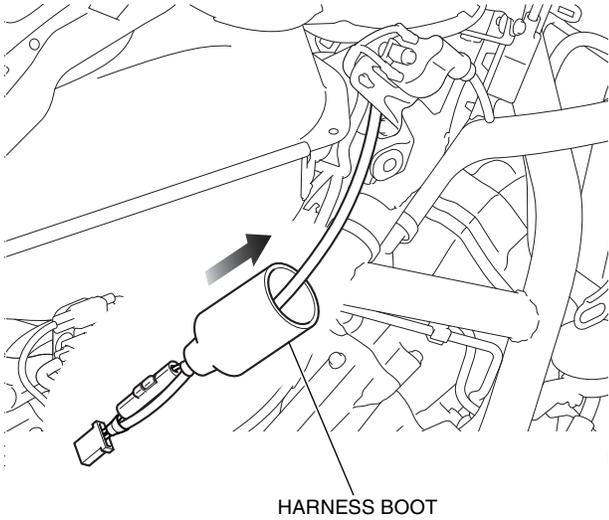



15. Connect the ACC harness to the sub harness as shown.

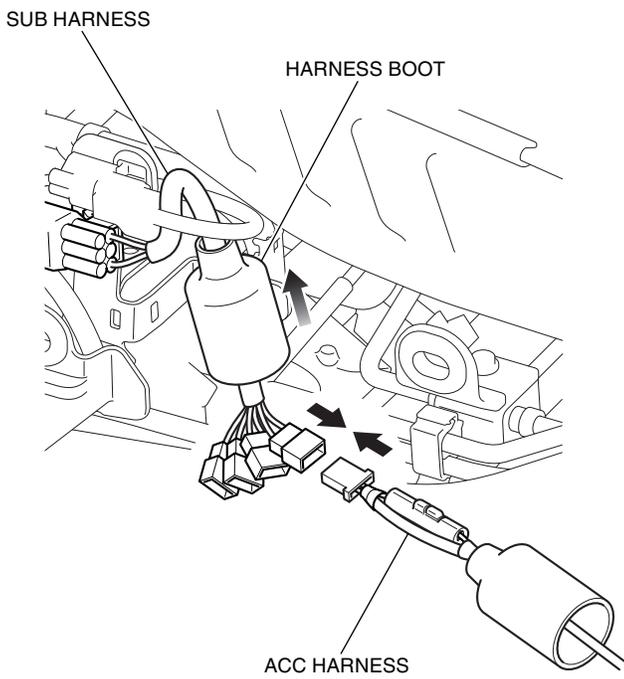


16. Cover the connectors with the harness boot as shown.

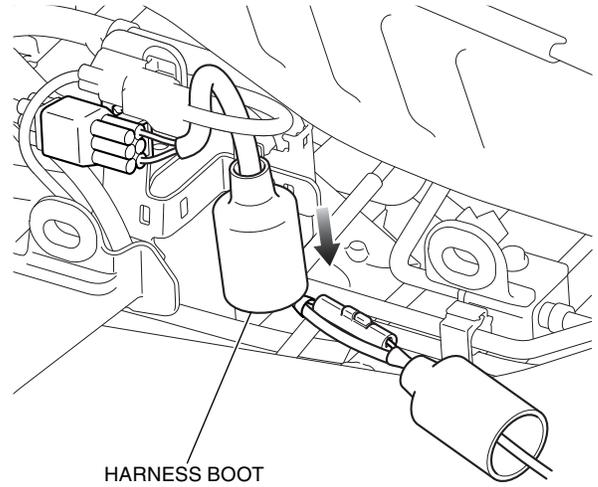


17. Secure the sub harness with the wire tie as shown.

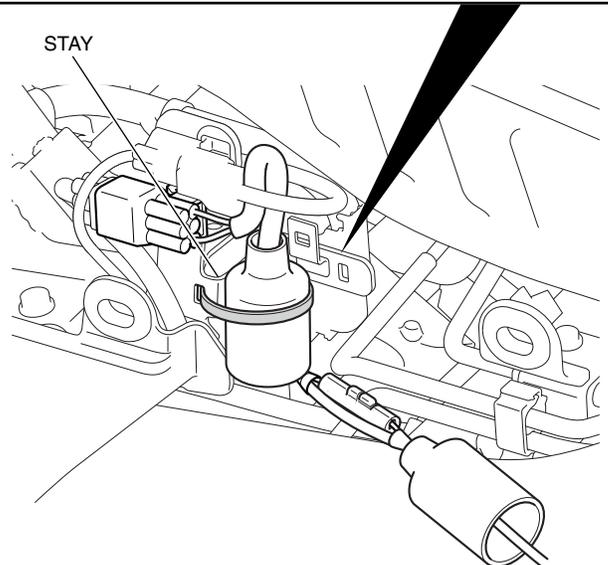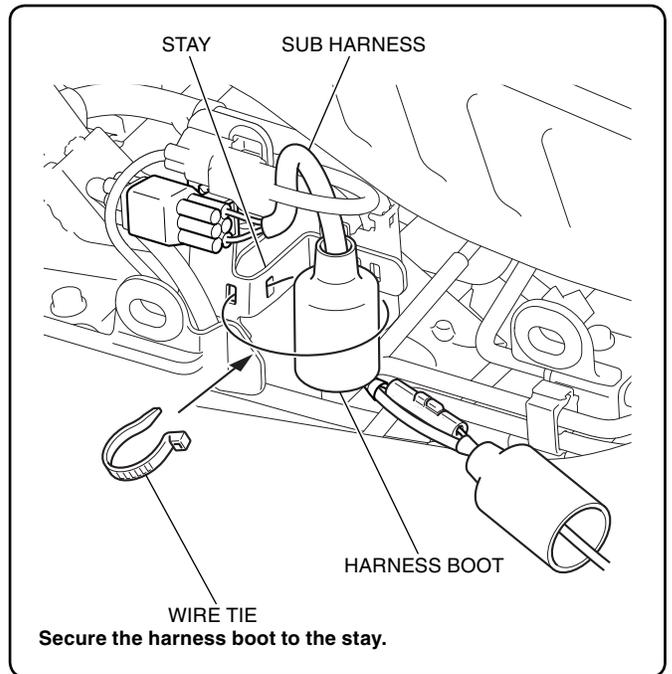


18. Attach the harness clips as shown.

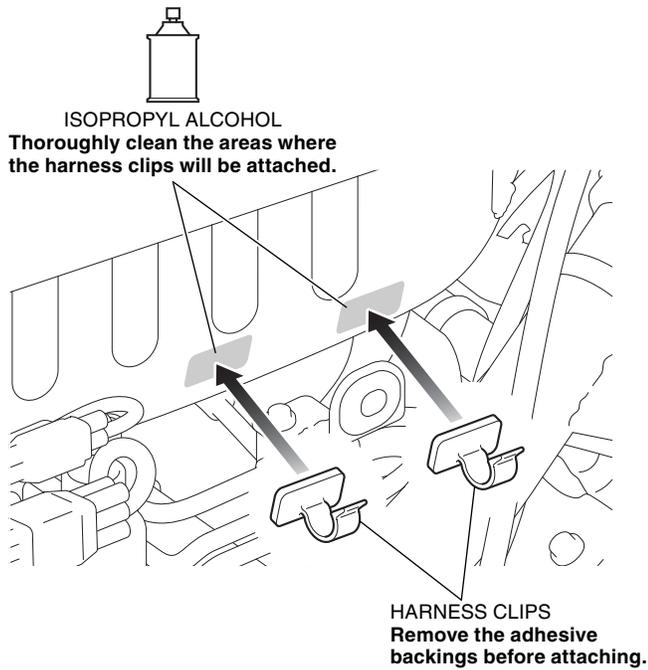



19. Secure the socket harness as shown.

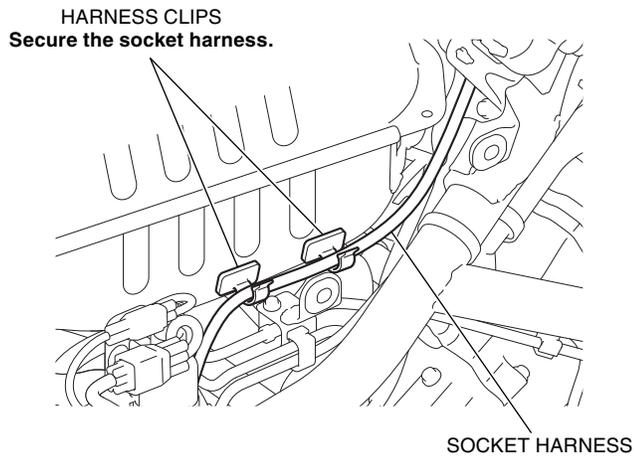


20. Secure the socket harness with the wire tie as shown.

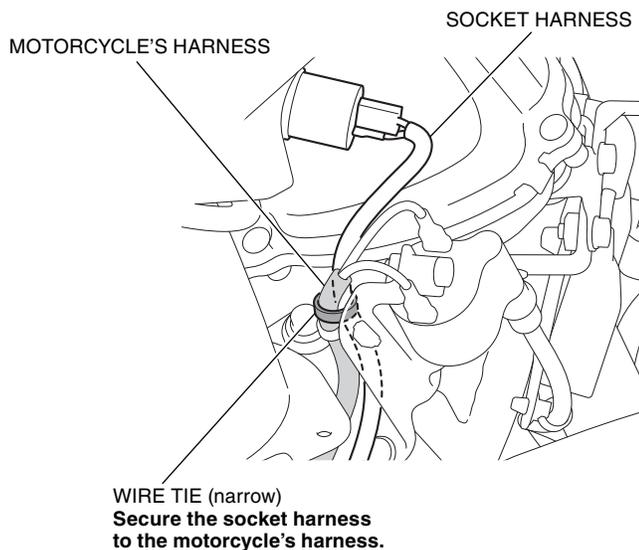

21. Secure the ACC harness with the wire tie as shown.

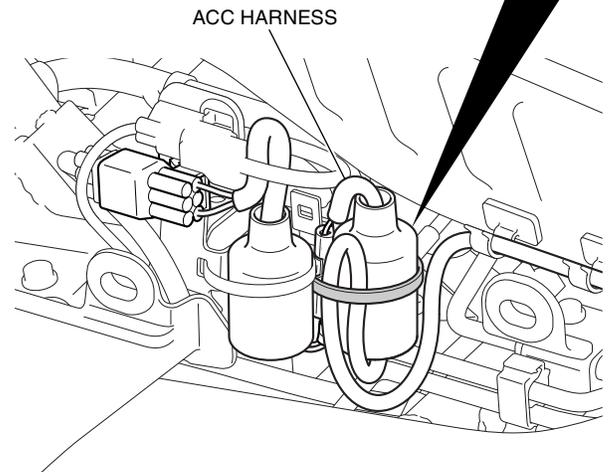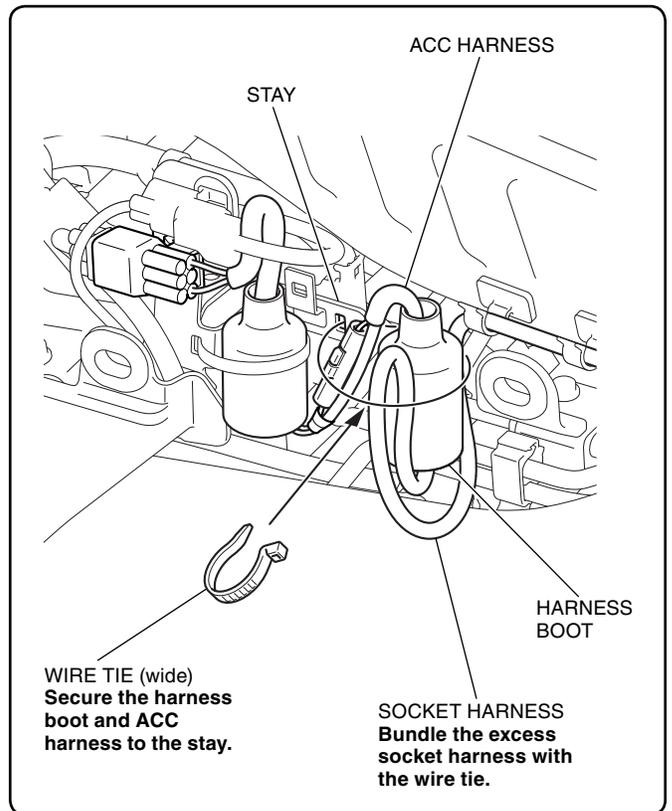

22. Attach the safety label in the position shown.

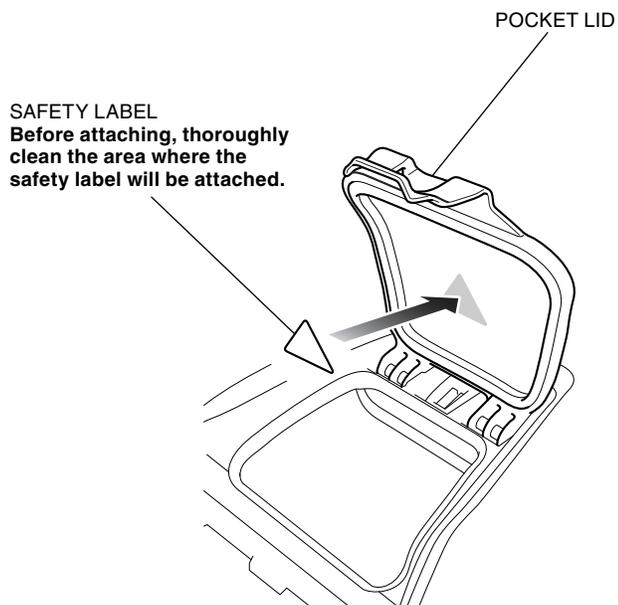


23. Install the motorcycle's parts in the reverse order of removal.


- Confirm that the harness is not caught or too tight.

### INSTALLATION (CTX700/D)


1. Refer to the Service Manual for the motorcycle, remove the seat, and disconnect the negative (-) cable from the battery as shown.

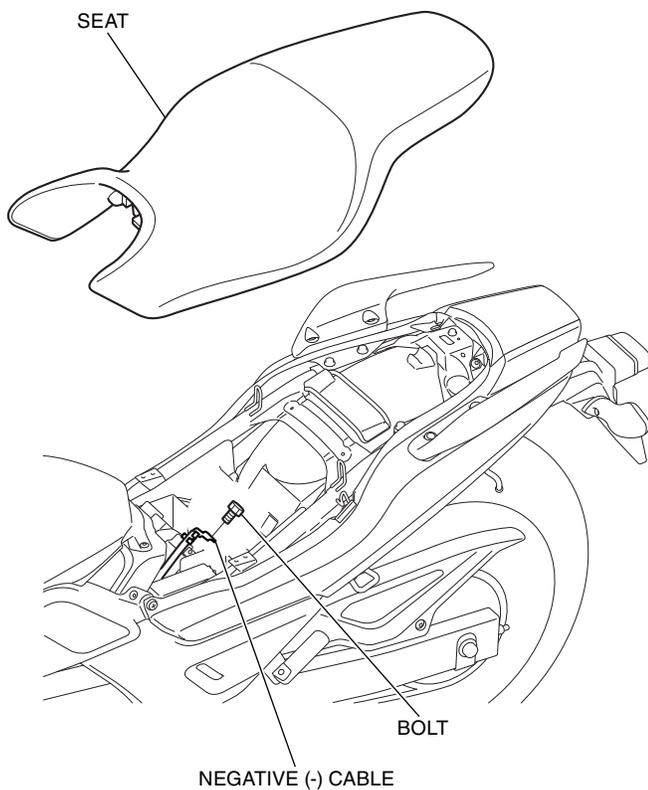


2. Refer to the Service Manual for the motorcycle, remove the right rear grip.

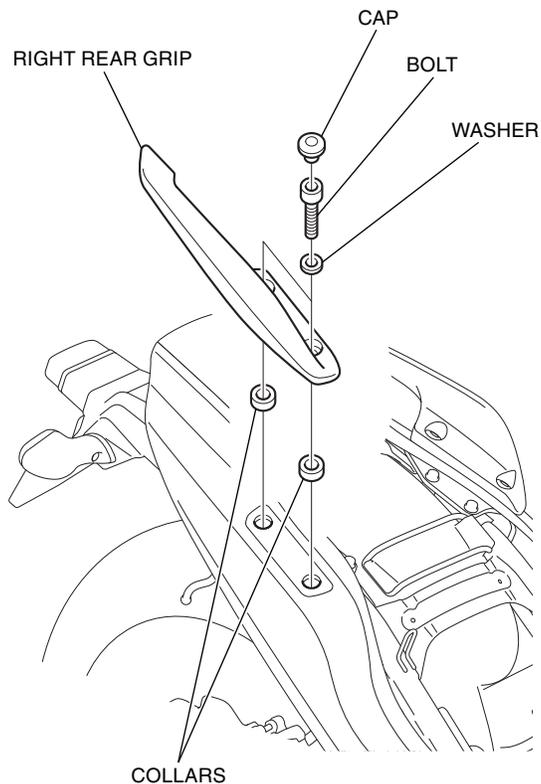


3. Refer to the Service Manual for the motorcycle, remove the right rear cowl.

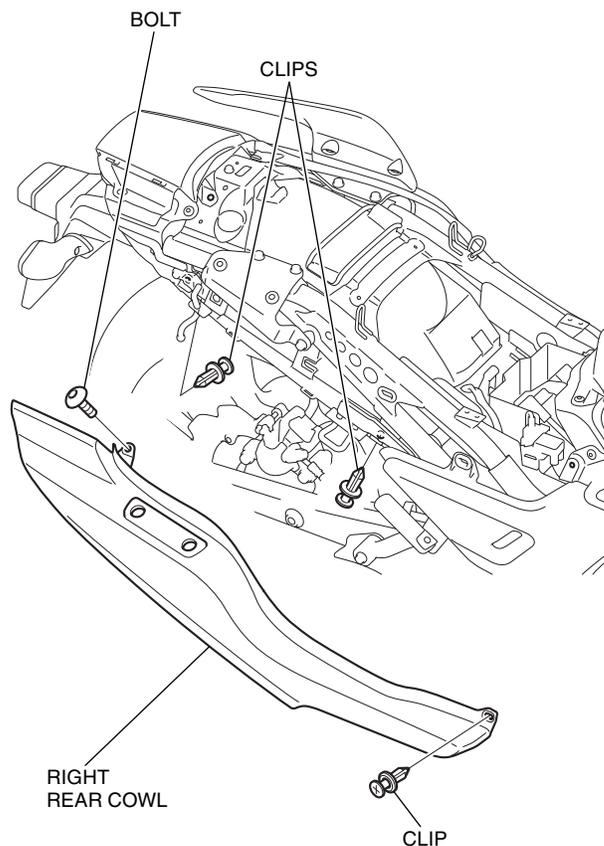


4. Refer to the Service Manual for the motorcycle, remove the inner covers.

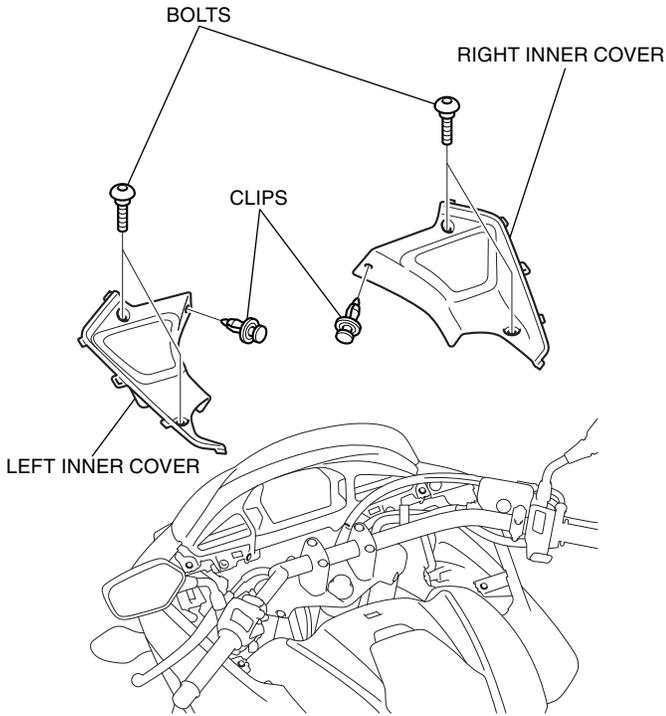


5. Refer to the Service Manual for the motorcycle, remove the windscreen moulding.

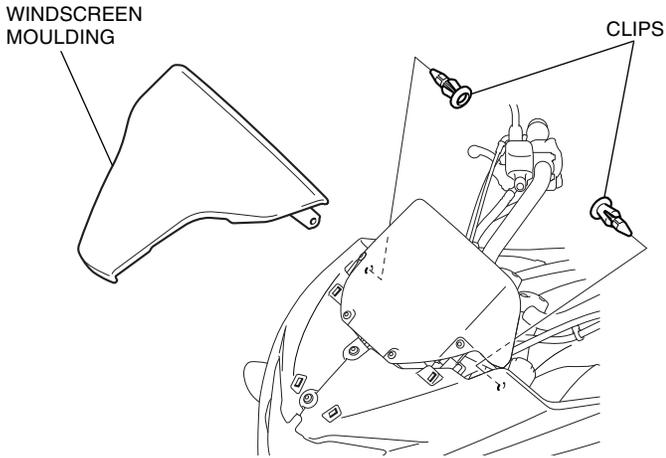


6. Refer to the Service Manual for the motorcycle, remove the side cowls.

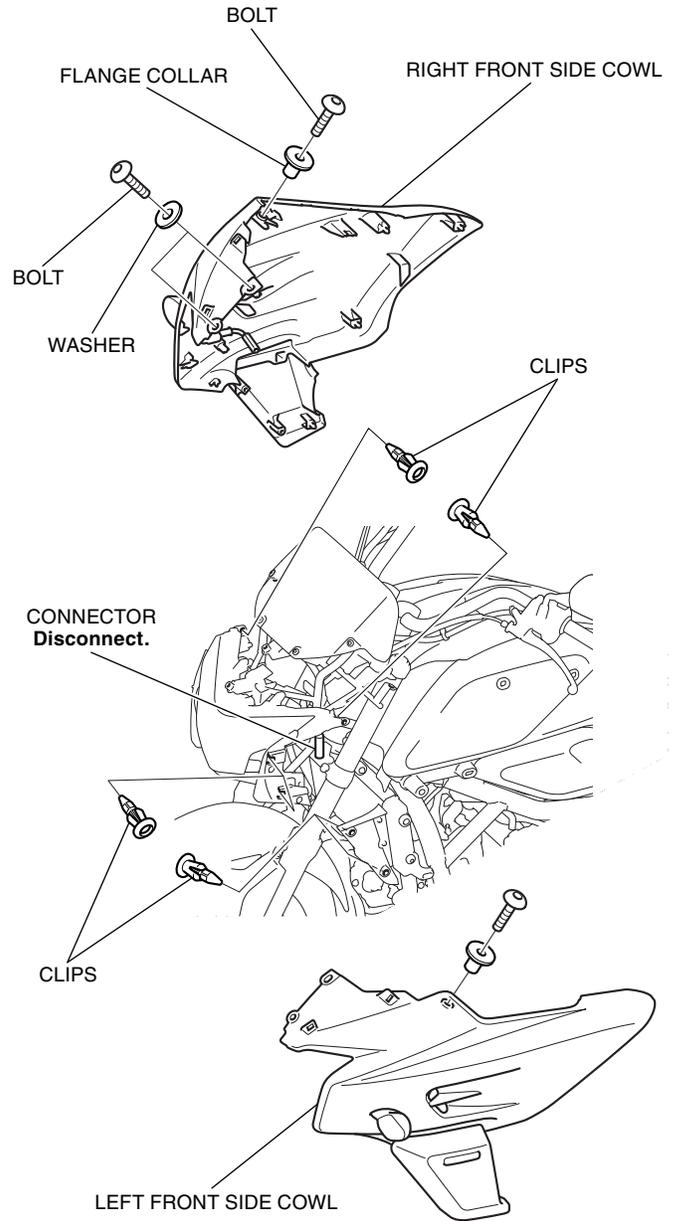



7. Refer to the Service Manual for the motorcycle, remove the right shelter.

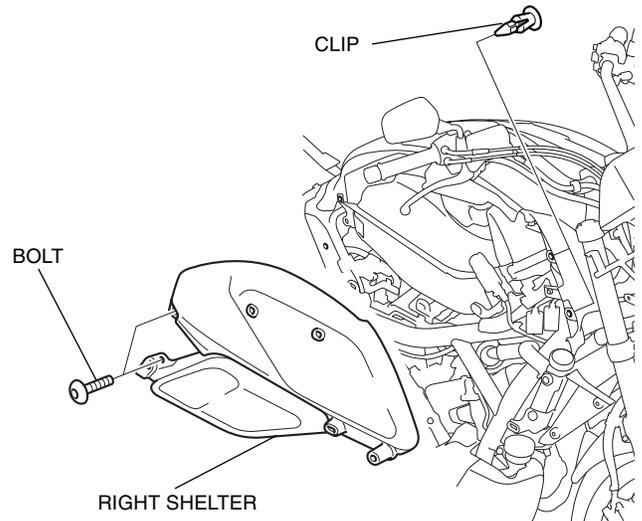

8. Refer to the Service Manual for the motorcycle, open the shelter lid and pocket lid as shown.

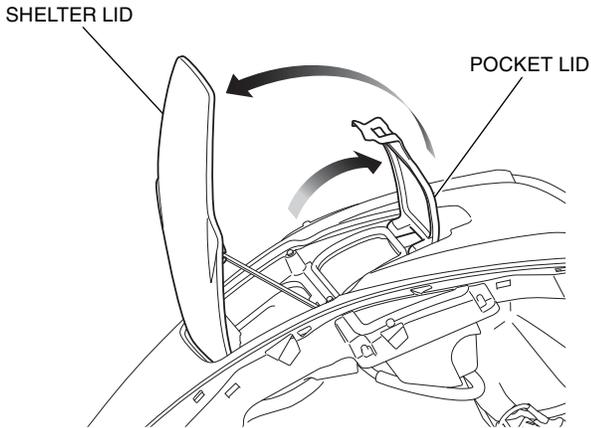


9. Drill a 30 mm hole at the marked point on the side of the pocket using an electric drill and hole saw.  
 • Remove any burrs from the edge of the hole.

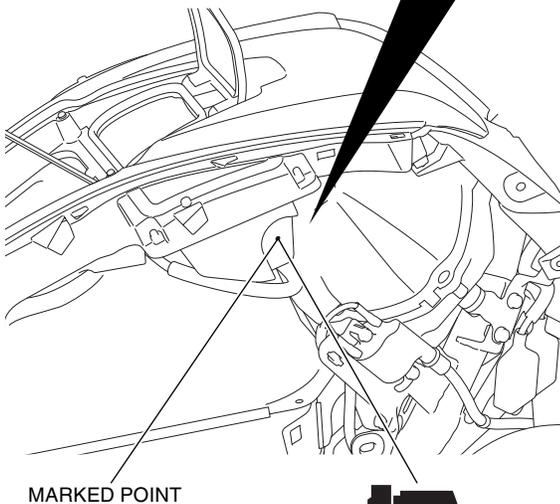
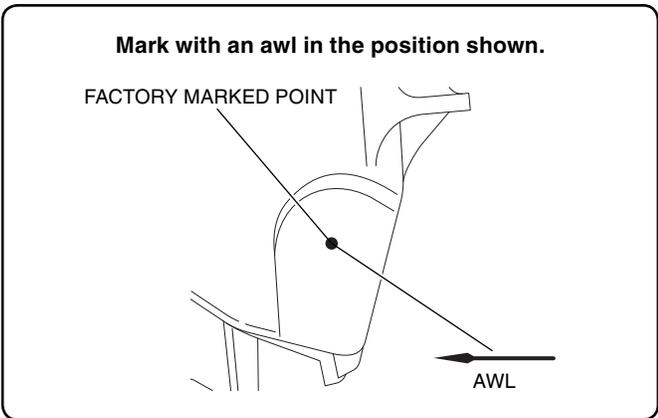


**ELECTRIC DRILL**  
 (30 mm HOLE SAW)  
 Drill at the marked point.



10. Install the ACC socket as shown.

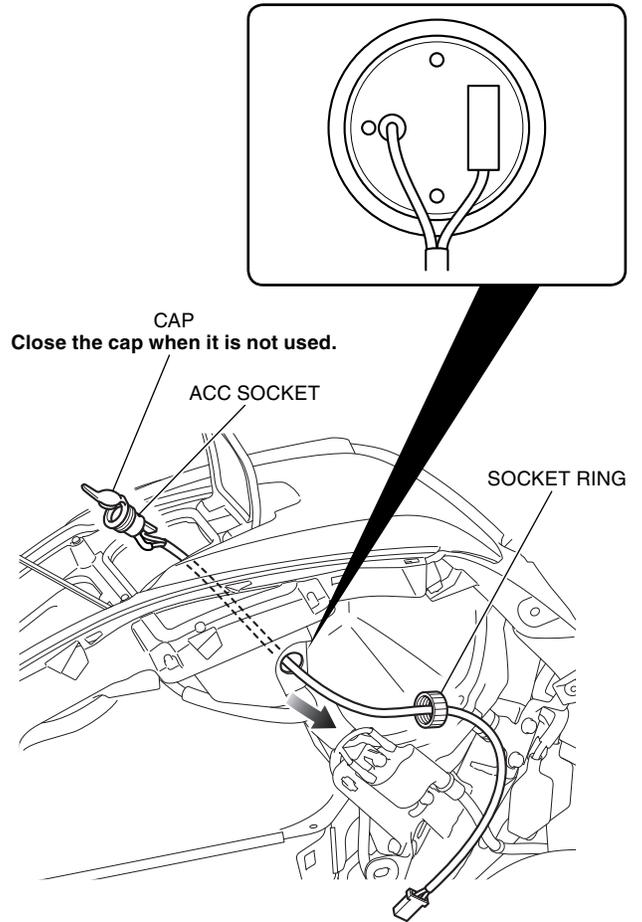


11. Remove the dummy connector from the 6P connector as shown.

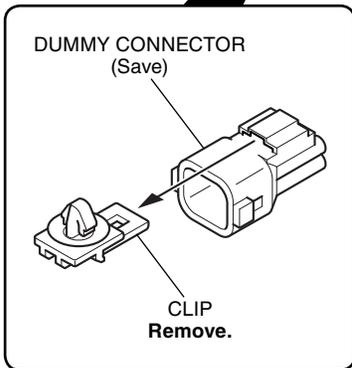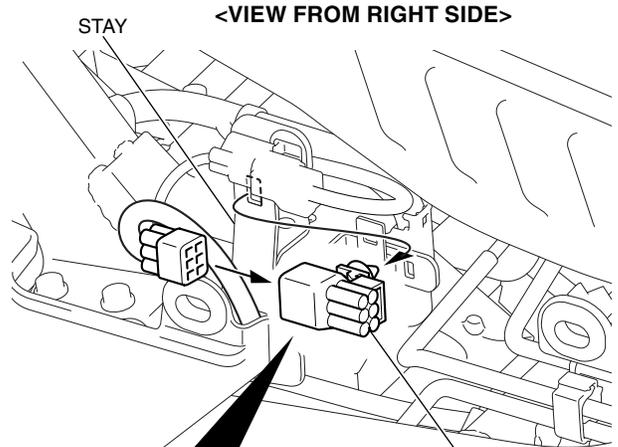

12. Connect the sub harness as shown.

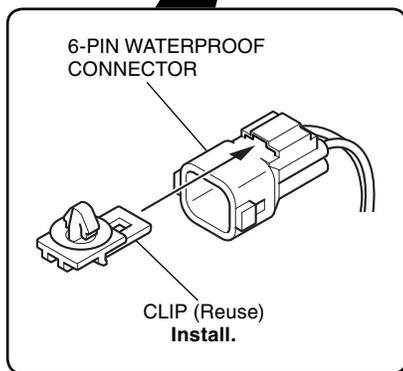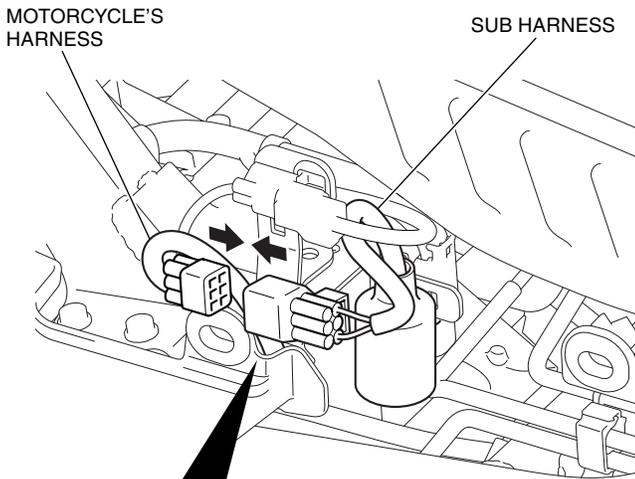


13. Install the 6-pin waterproof connector as shown.

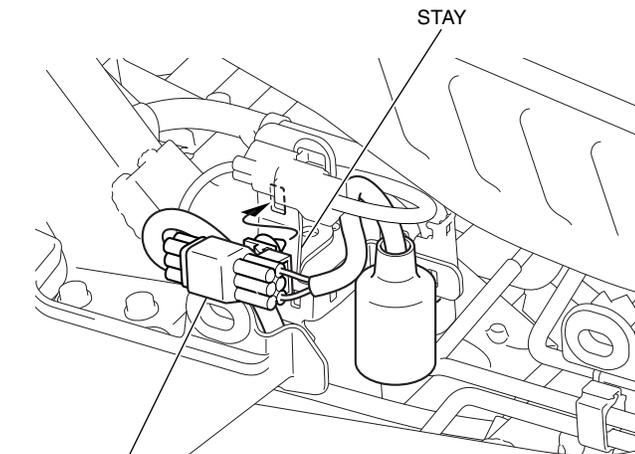


6-PIN WATERPROOF CONNECTOR  
Install to the stay.


14. Route the socket harness as shown.

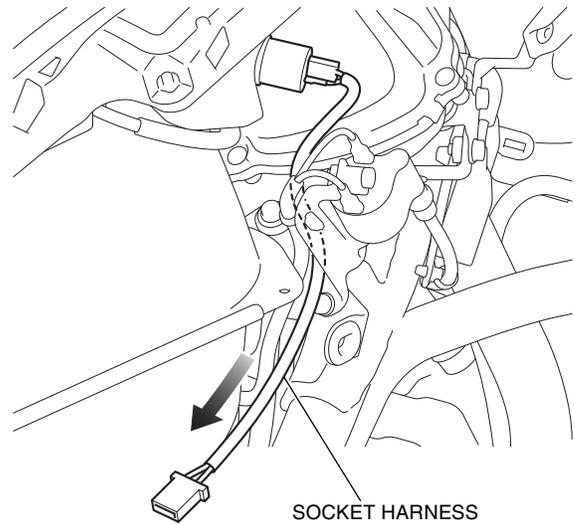


15. Pass the boot over the ACC harness as shown.

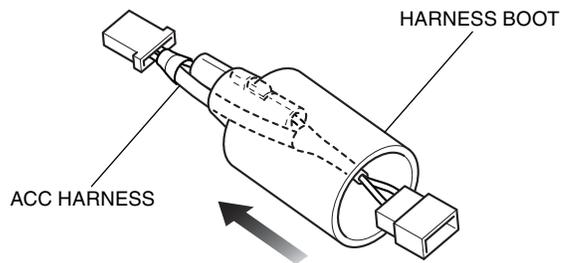


16. Connect the ACC harness to the socket harness as shown.

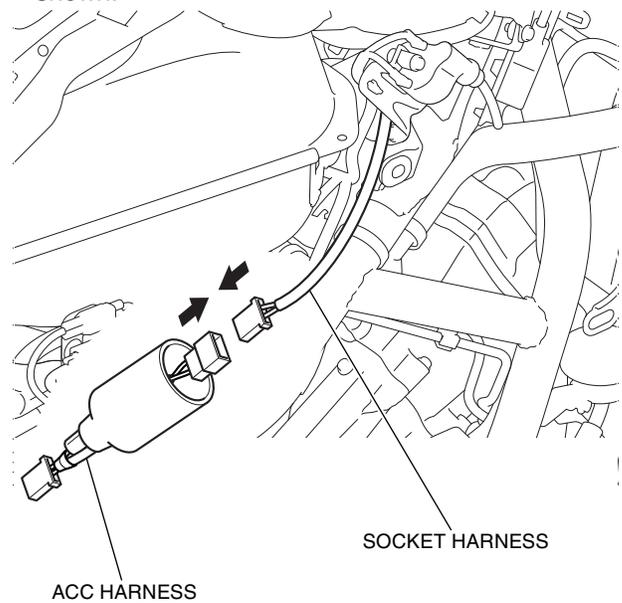


17. Cover the connector with the harness boot as shown.

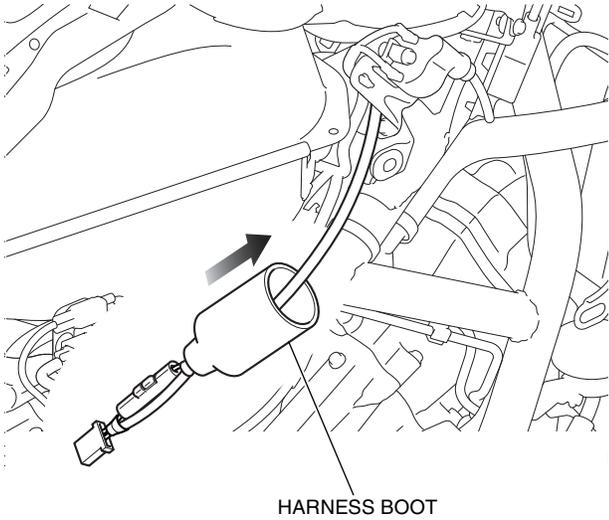



18. Connect the ACC harness to the sub harness as shown.

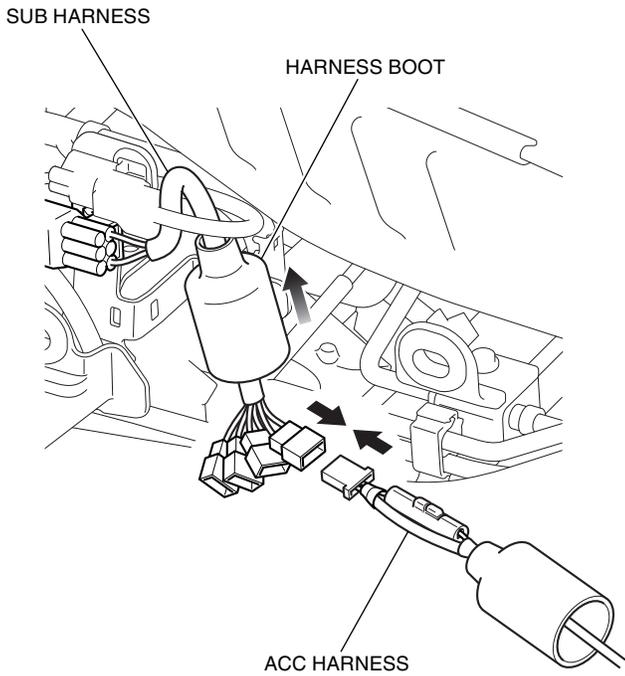


19. Cover the connectors with the harness boot as shown.

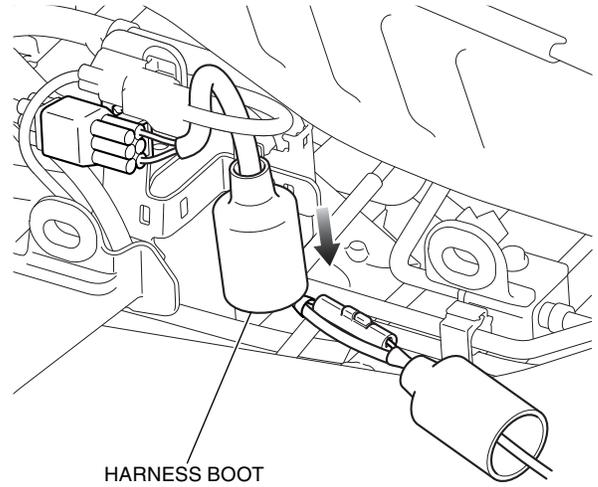


20. Secure the sub harness with the wire tie as shown.

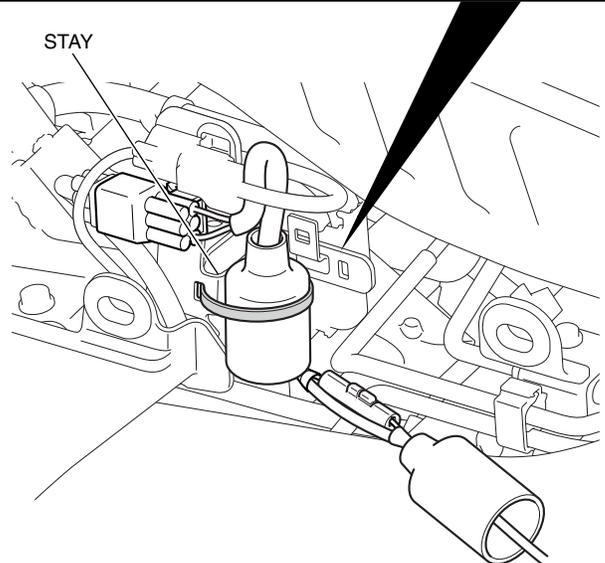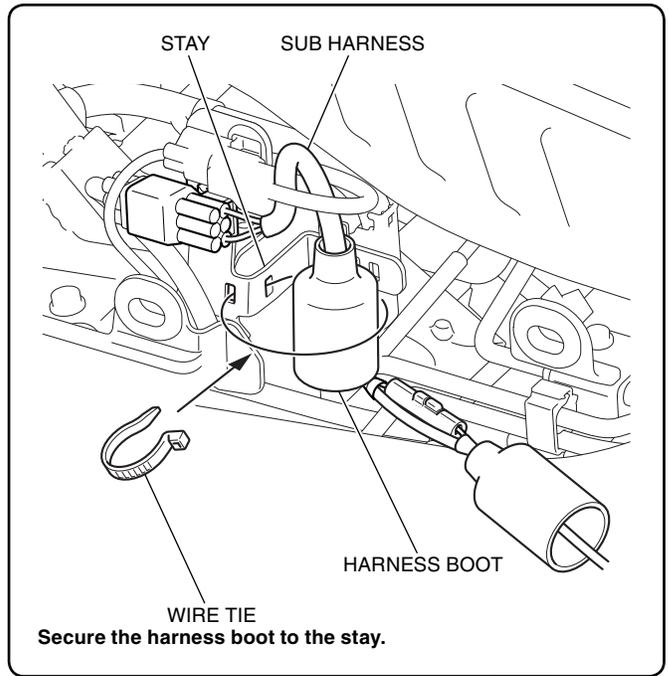


21. Attach the harness clips as shown.

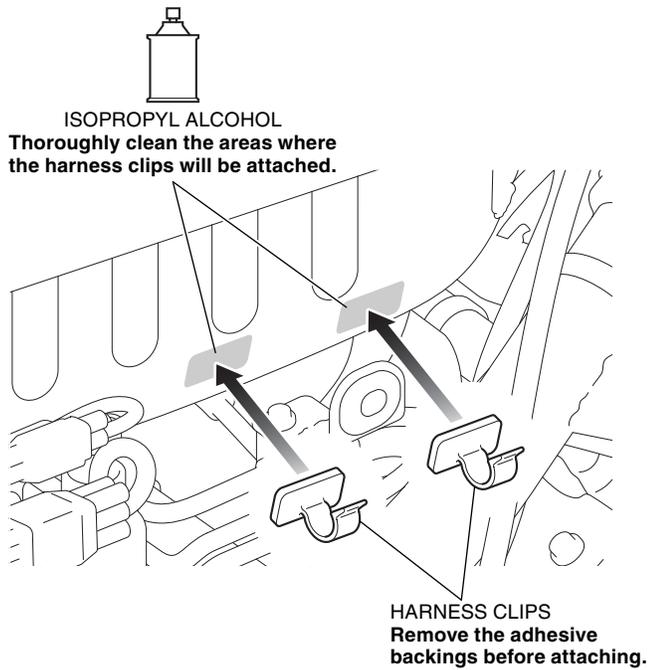



22. Secure the socket harness as shown.

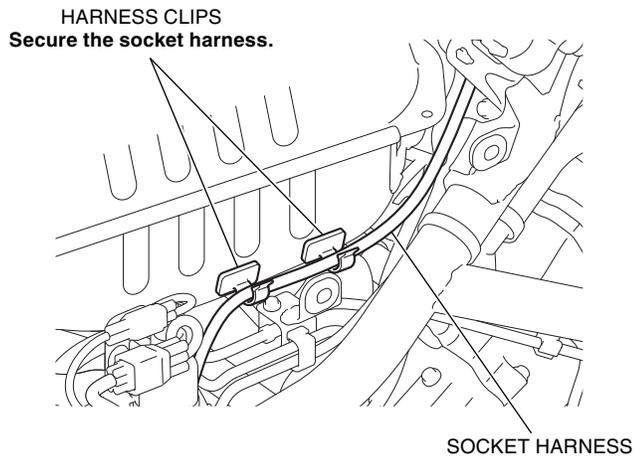


23. Secure the socket harness with the wire tie as shown.

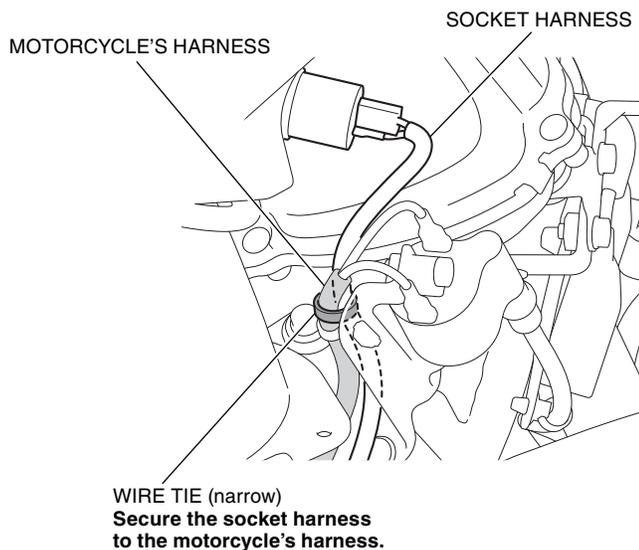

24. Secure the ACC harness with the wire tie as shown.

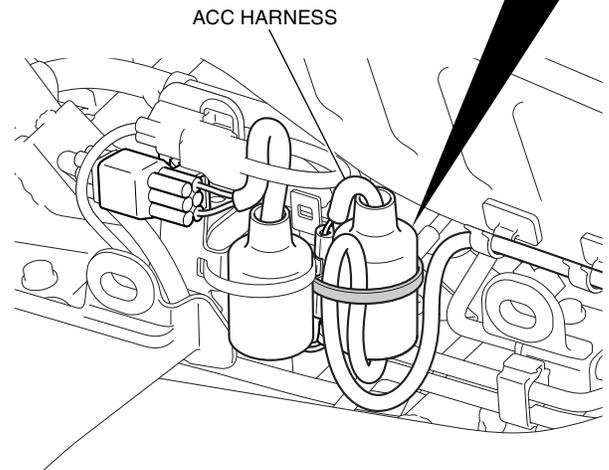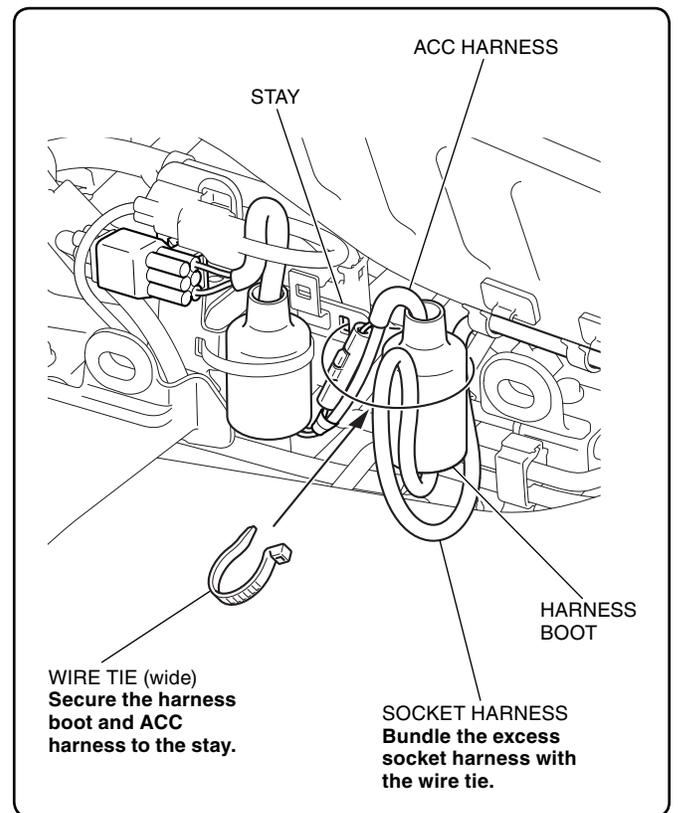

25. Attach the safety label in the position shown.

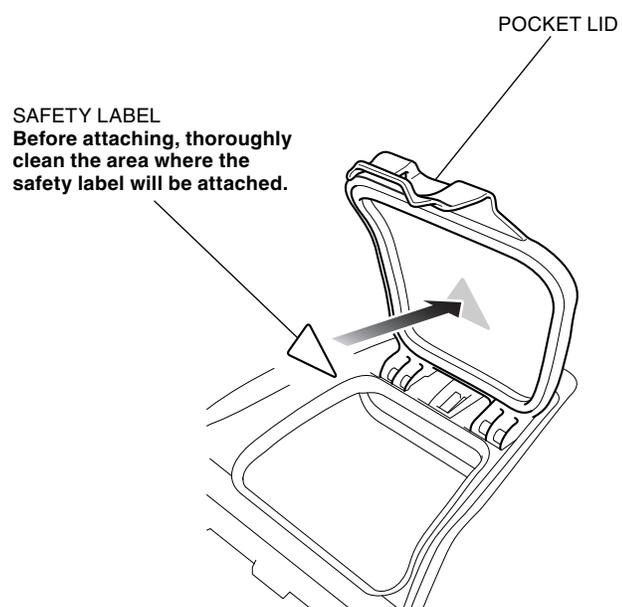

26. Install the motorcycle's parts in the reverse order of removal.

- **Confirm that the harness is not caught or too tight.**