

# **INSTALLATION INSTRUCTIONS**

Accessory

LED ENTRY LIGHTS P/N 08U70-MKC-A00 Application

GL1800/B/BD/D/DA

Publication No.


MII 16426

Issue Date

January 2018

Honda Dealer: Please give a copy of these instructions to your customer.

## **PARTS LIST**

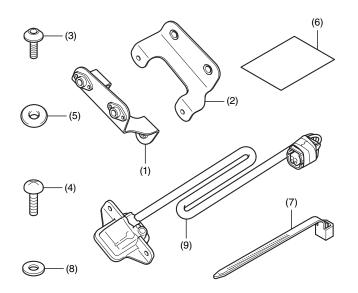

No.	Description	Qty
	Boschphon	Q.,
(1)	Right stay	1
(2)	Left stay	1
(3)	5 mm screw	4
(4)	4 mm screw	4
(5)	Grommet	2
(6)	Installation Instructions URL	1
(7)	Wire tie	1
(8)	Washer	4
(9)	LED entry light	2

# **TOOLS AND SUPPLIES REQUIRED**

Hex wrench (3 mm)

Phillips screwdriver

Snips

Electric drill

Drill bit (13 mm)

File

Torque wrench

#### **TORQUE CHART**

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf⋅m	lbf∙ft
4 mm screw	1	0.1	0.7
5 mm screw	4.2	0.5	3.8

# INSTALLATION


# **ACAUTION**

 To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


#### NOTE:

- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memory of the clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with another harness or brake hose.
- 1. Open the left saddlebag lid as shown.
  - · Repeat on the right side.


# <Left side>

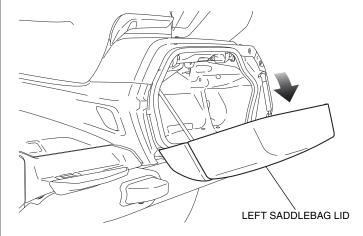

2. Remove the left side cover as shown, and disconnect the negative (-) cable of the battery.

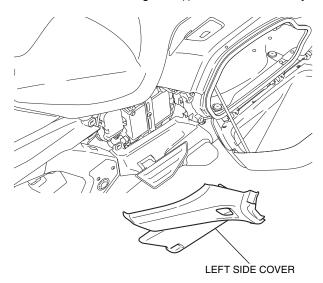


- 3. Remove the right side cover in the same manner as the left side.
- 4. Remove the seat as shown.
  - Disconnect the connector for GL1800/D/DA.

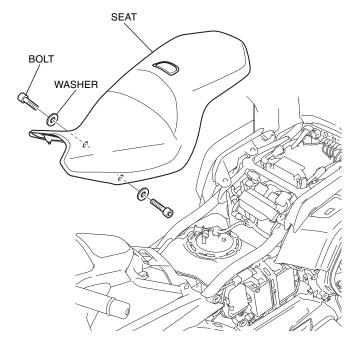


5. Fold down the left rear view mirror backward as shown.

## <Left side>

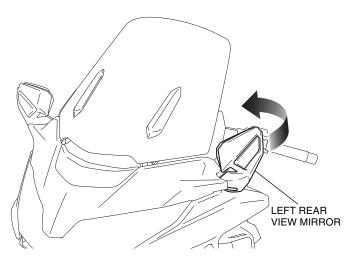


6. Remove the left mirror arm panel as shown.

#### <Left side>

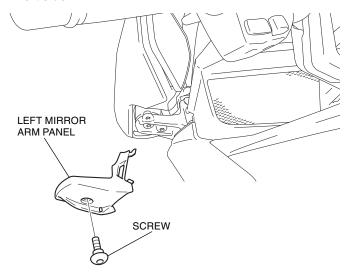


7. Remove the left rear view mirror as shown.

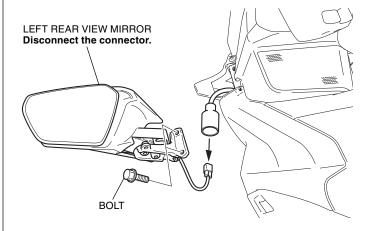


8. Remove the right mirror arm panel and right rear view mirror in the same manner as the left side.

- 9. Remove the screw as shown.
  - · Repeat on the right side.


# <Left side>

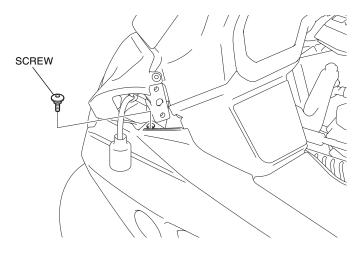


Remove the left deflector panel as shown.
Left side>

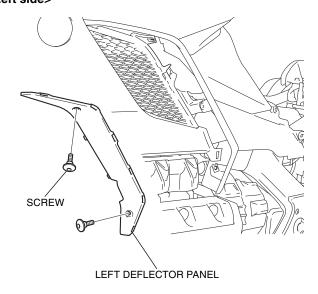

11. Remove the clip as shown.

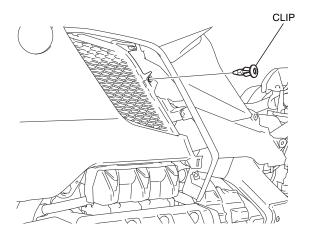


12. Remove the left inner cowl as shown.

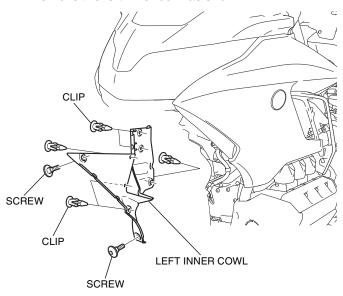


13. Remove the clip as shown.

#### <Left side>

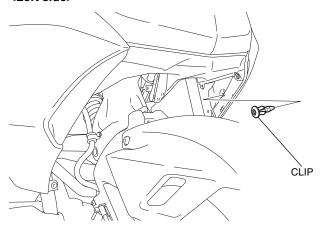

14. Remove the left middle cowl as shown.


# <Left side>

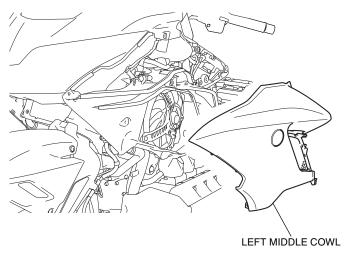

15. Remove the right deflector panel, right inner cowl and right middle cowl in the same manner as the left side.


- 16. Remove the parts as shown.
  - Repeat on the right side.

# <Left side>

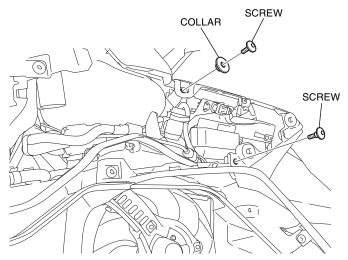


# 17. Remove the connector as shown.


# <Right side>

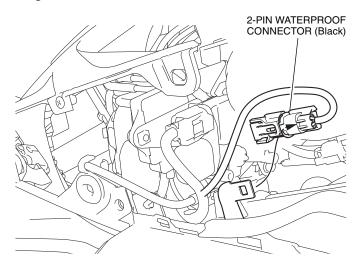


18. Remove the clip and disconnect the connector as shown.

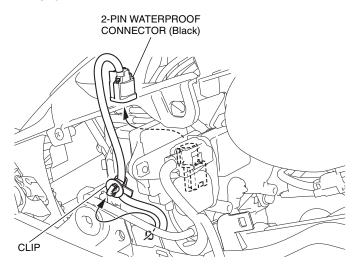


19. Remove the right outer air guide as shown.

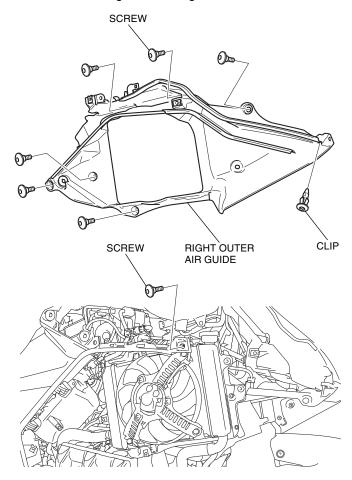


20. Remove the pocket cable as shown.

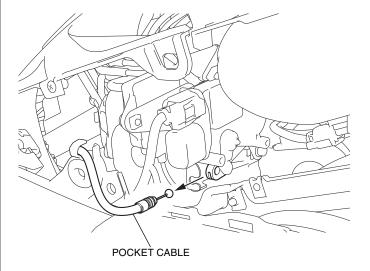


21. Remove the parts as shown.

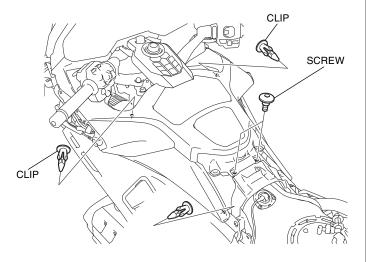


22. Remove the shelter as shown.

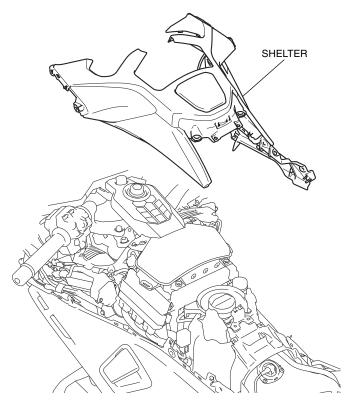


- 23. Remove the left shelter cover as shown.
  - Repeat on the right side.

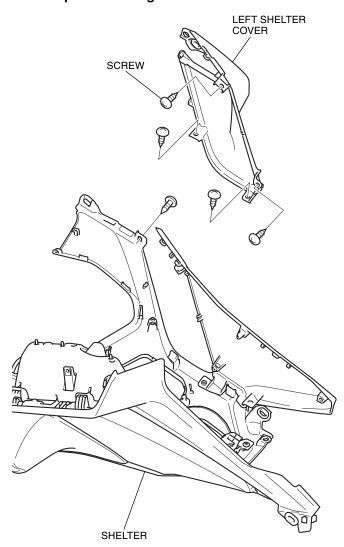


- 24. Drill at the marked point of the left shelter cover as shown.
  - Remove the any burrs from the edge of the hole.
  - Repeat Steps 23 and 24 on the right side.

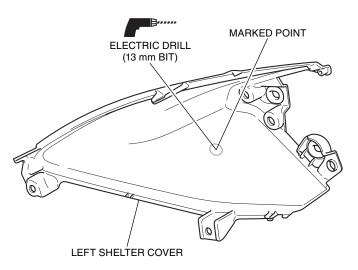


25. Install the grommet as shown.

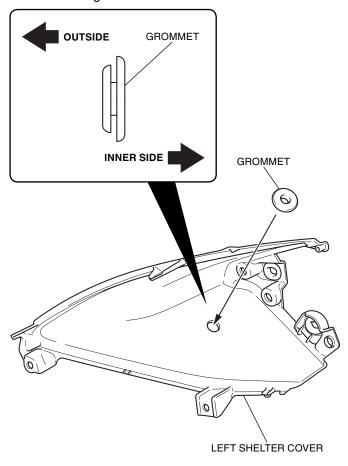

26. Install the LED entry lamp as shown.

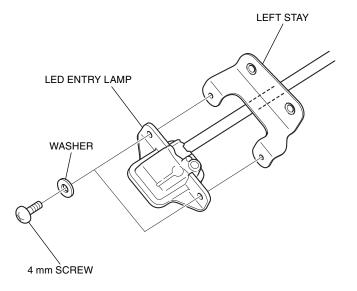


27. Route the LED entry lamp harness as shown and install the left stay.

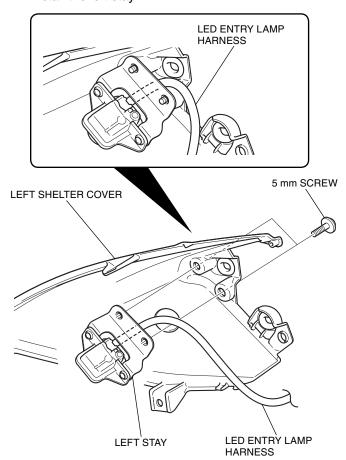


- 28. Install the grommet, LED entry lamp and right stay in the same manner as the left side.
- 29. Install the right and left shelter covers in reverse order of removal.
- 30. Remove the dummy connector as shown.

## <Left side>

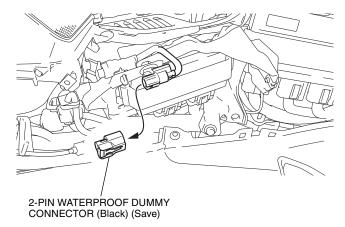


31. Remove the dummy connector as shown.

#### <Right side>

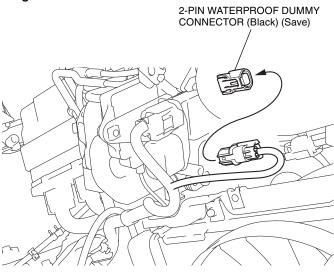


- 32. Install the shelter, pocket cable, connector and right outer air guide in the reverse order of removal.
- 33. Route and connect the LED entry lamp harness as shown.

#### <Left side>

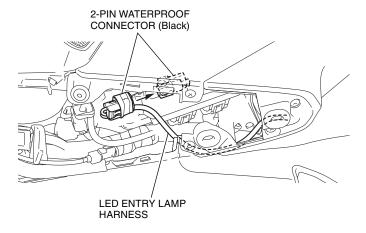


34. Secure the LED entry lamp harness with the wire tie.

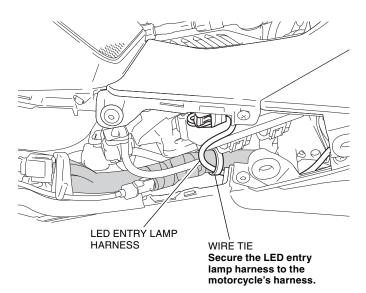

35. Route and connect the LED entry lamp harness as shown.

#### <Right side>

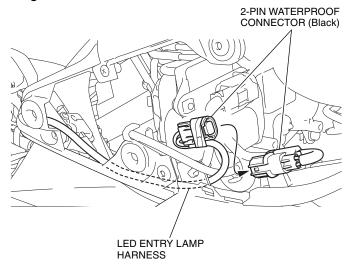

- 36. Install the motorcycle's parts in the reverse order of removal.
  - Confirm that any wire harness is not caught or too tight.
- 37. Check the LED entry lamp, headlight and the other lights for proper operation.
  - Check that the LED entry lamp automatically goes on when the ignition switch is turned from ON to OFF.